SYS-521C-NR

USER'S MANUAL

Revision 1.0b

The information in this User's Manual has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. Please Note: For the most up-to-date version of this manual, please see our website at www.supermicro.com.

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A or Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in industrial environment for Class A device or in residential environment for Class B device. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate".

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.0b

Release Date: April 02, 2026

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2026 by Super Micro Computer, Inc.
All rights reserved.
Printed in the United States of America

Preface

About this Manual

This manual is written for professional system integrators and PC technicians. It provides information for the installation and use of the SYS-521C-NR. Installation and maintenance should be performed by experienced technicians only.

Please refer to the SYS-521C-NR server specifications page on our website for updates on supported memory, processors and operating systems (http://www.supermicro.com).

Notes

For your system to work properly, please follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: http://www.supermicro.com/support/manuals/
- Product drivers and utilities: https://www.supermicro.com/wdl/
- Product safety info: http://www.supermicro.com/about/policies/safety_information.cfm

If you have any questions, please contact our support team at:
support@supermicro.com

This manual may be periodically updated without notice. Please check the Supermicro website for possible updates to the manual revision level.

Secure Data Deletion

A secure data deletion tool designed to fully erase all data from storage devices can be found on our website: https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility/

Warnings

Special attention should be given to the following symbols used in this manual.

Warning! Indicates important information given to prevent equipment/property damage or personal injury.

Warning! Indicates high voltage may be encountered when performing a procedure.

Contents

Chapter 1 Introduction

1.1 Overview....8
1.2 Unpacking the System....9
1.3 Server Chassis Features....10
Front Features....10
Drive Carrier Indicators....10
Control Panel....11
Rear Features....13
Power Supply Indicators....14
1.4 Motherboard Layout....15
Quick Reference Table....16

Chapter 2 Server Installation

2.1 Overview....19
2.2 Preparing for Setup....19
Choosing a Setup Location....19
Rack Precautions....20
Server Precautions....20
Rack Mounting Considerations....20
Ambient Operating Temperature....20
Airflow....20
Mechanical Loading....21
Circuit Overloading....21
Reliable Ground....21
2.3 Installing the Rails....22
Identifying the Rails....22
Releasing the Inner Rail....23
Releasing Inner Rail from the Outer Rails....23
Installing the Inner Rails on the Chassis....24
Installing the Inner Rails....24
Installing the Outer Rails onto the Rack....25
2.4 Installing the Server into the Rack....26

Removing the Chassis from the Rack 27

Chapter 3 Maintenance and Component Installation

3.1 Removing Power 28
3.2 Accessing the System 29
Removing the Top Cover 29
3.3 Motherboard Components 30
Processor and Heatsink Installation 30
The 4th and 5th Generation Intel Xeon Scalable Processor 30
Overview of the Processor Carrier Assembly 31
Overview of the CPU Socket 31
Overview of the Processor Heatsink Module 32
Creating the Processor Carrier Assembly 33
Assembling the Processor Heatsink Module 34
Preparing the CPU Socket for Installation 35
Installing the Processor Heatsink Module 36
Removing the Processor Heatsink Module 37
Memory Support 38
Memory Support 38
General Guidelines for Optimizing Memory Performance 41
DIMM Installation 42
DIMM Removal 42
PCI Expansion Cards 43
Limitations for Slots 1, 2, 4, and 5 43
Installing Expansion Cards 44
AIOM Network Cards 45
Motherboard Battery 46
3.4 Chassis Components 47
Storage Drives 47
Installing Drives 47
Hot-Swap for NVMe Drives 51
System Cooling 52
Changing a System Fan 52
Checking the Server Air Flow 53

Overheating 53
Power Supply 54
Power Supply LEDs 54
Chapter 4 Motherboard Connections
4.1 Power Connections 56
Power Connections 56
4.2 Headers and Connectors 57
4.3 Front Control Panel 60
4.4 Ports 63
Rear I/O Ports 63
4.5 Jumpers 66
Explanation of Jumpers 66
4.6 LED Indicators 68
Chapter 5 Software
5.1 Microsoft Windows OS Installation 69
5.2 Driver Installation 71
5.3 SuperDoctor® 5 72
5.4 BMC 73
BMC ADMIN User Password 73
Chapter 6 Optional Components
6.1 Optional Parts List 74
6.2 TPM Security Module 74
6.3 Intel Virtual RAID on CPU (VROC) 75
Requirements and Restrictions 75
Supported SSDs and Operating Systems 75
Additional Information 76
Hardware Key 76
Configuring NVMe RAID Manually 77
Status Indications 80
Hot Swap Drives 80
Hot-unplug 80
Hot-plug 80
Chapter 7 Troubleshooting and Support

7.1 Information Resources 81
Website 81
Direct Links for the SYS-521C-NR System 81
Direct Links for General Support and Information 81
7.2 BMC Interface 82
7.3 Troubleshooting Procedures 83
General Technique 83
No Power 83
No Video 84
System Boot Failure 84
Memory Errors 84
Losing the System Setup Configuration 84
When the System Becomes Unstable 84
7.4 Crash Dump Using the BMC Dashboard 86
7.5 CMOS Clear 87
7.6 Where to Get Replacement Components 88
7.7 Reporting an Issue 88
Technical Support Procedures 88
Returning Merchandise for Service 88
Vendor Support Filing System 89
7.8 Feedback 89
7.9 Contacting Supermicro 90

Appendix A Standardized Warning Statements for AC Systems

Appendix B System Specifications

Appendix C UEFI BIOS Recovery and IPMI Crash Dump

C.1 Overview 128
C.2 Recovering the UEFI BIOS Image 128
C.3 Recovering the BIOS Block with a USB Device 128
C.4 Crash Dump Using IPMI 131

Chapter 1

Introduction

1.1 Overview

This chapter provides a brief outline of the functions and features of the SYS-521C-NR. The SYS-521C-NR is based on the X13SEDW-F motherboard and the CSE-LA26TS-R1K23AWP1 chassis.

The following table provides you with an overview of the main features of the SYS-521C-NR. Please refer to Appendix B for additional specifications.

System Overview	
Chassis	CSE-LA26TS-R1K23AWP1
Motherboard	X13SEDW-F
Processor Support	Single 4th and 5th Gen Intel Xeon Scalable processor
Memory	16 DIMM slots, DDR4 RDIMM (up to 4 TB for DDR4) up to 5600 MT/s
Chipset	C741
Drive Support	Twelve hot-swap 3.5" SATA (default) drive bays Optional NVMe drive bays by additional cables or SAS3 via optional AOC Two M.2 connectors (PCIe 3.0 x2 from PCH)
Expansion Slots	Two PCIe 5.0 x16 slots Four PCIe 5.0 x8 slots (default) One PCIe 5.0 x16 AIOM (default)
System Cooling	Three 8-cm PWM fans
Power	Redundant 1200 W hot-swap power supply modules (full redundancy based on configuration and application load)
Form Factor	2U rackmount
Dimensions	(WxHxD) 17.2 x 3.5 x 25.5" (437 x 89 x 648 mm)

Note: The following safety models associated with the SYS-521C-NR have been certified as compliant with UL or CSA: LA26-12, LA26-R12X13

1.2 Unpacking the System

Inspect the box the SuperServer SYS-521C-NR was shipped in and note if it was damaged in any way. If any equipment appears damaged, please file a damage claim with the carrier who delivered it.

Decide on a suitable location for the rack unit that will hold the server. It should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. It will also require a grounded AC power outlet nearby. Be sure to read the precautions and considerations noted in Appendix A.

1.3 Server Chassis Features

Front Features

The CSE-LA26TS-R1K23AWP1 is a 2U chassis See the illustration below for the features included on the front of the chassis.

Figure 1-2. System Front View

Logical Storage Drive Numbers	
Item	**Description**
0-11	Twelve 3.5" drive bays

Drive Carrier Indicators

Each drive carrier has two LED indicators: an activity indicator and a status indicator. For RAID configurations using a controller, the meaning of the status indicator is described in the table below. For OS RAID or non-RAID configurations, some LED indications are not supported, such as hot spare.

Drive Carrier LED Indicators			
	Color	**Blinking Pattern**	**Behavior for Device**
Activity LED	Blue	Solid On	Idle SAS/NVMe drive installed
	Blue	Blinking	I/O activity
	Blue	Off	Idle SATA drive installed
Status LED	Green	Solid Green LED	Safe to remove NVMe device
	Amber	Blinking at 1 Hz	Do not remove NVMe device

Control Panel

A power button and a UID button as well as status LEDs are located on the control panel at the front of the chassis. The locations and descriptions of these buttons and LEDs are provided below. See Chapter 4 for details on the control panel connections.

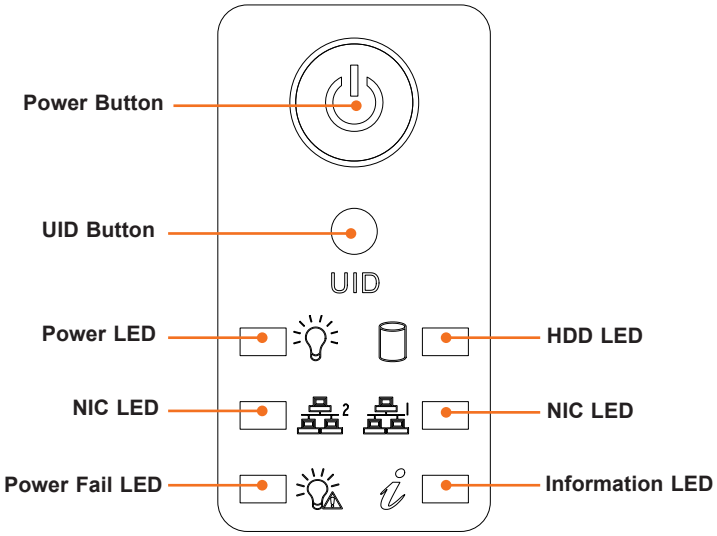

Figure 1-1. Control Panel

Control Panel Features	
Features	**Description**
Power Button	The main power switch applies or removes primary power from the power supply to the server but maintains standby power.
UID Button	The unit identification (UID) button turns on or off the blue light function of the Information LED and a blue LED on the rear of the chassis. This is useful for finding a system in a rack environment.
Power LED	Steady on – Power on Blinking at 4Hz – Checking BIOS/BMC integrity Blinking at 4Hz and "i" LED is blue – BIOS firmware updating Two blinks at 4Hz, one pause 2hz and "i" LED blue – BMC firmware updating Blinking at 1Hz and "i" LED red – Fault detected
NIC LEDs	Indicates network activity on a LAN when flashing.
Power Fail LED	Indicates a power supply module has failed.
HDD LED	Indicates activity on the hard drive when flashing.
Information LED	Alerts operator to several states (noted in the table below).

Information LED	
Color, Status	**Description**
Red, solid	An overheat condition has occurred.
Red, blinking at 1Hz	Fan failure, check for an inoperative fan.
Red, blinking at 0.25Hz	Power failure, check for a non-operational power supply.
Red, solid, with Power LED blinking green	Fault detected
Blue and red, blinking at 10 Hz	Recovery mode
Blue, solid	UID has been activated locally to locate the server in a rack environment.
Blue, blinking at 1Hz	UID has been activated using the BMC to locate the server in a rack environment.
Blue, blinking at 2Hz	BMC is resetting
Blue, blinking at 4Hz	BMC is setting factory defaults
Blue, blinking at 10Hz with Power LED blinking green	BMC/BIOS firmware is updating

Rear Features

The illustration below shows the features included on the rear of the chassis. The power supply modules also have status LEDs (see Chapter 3 for details).

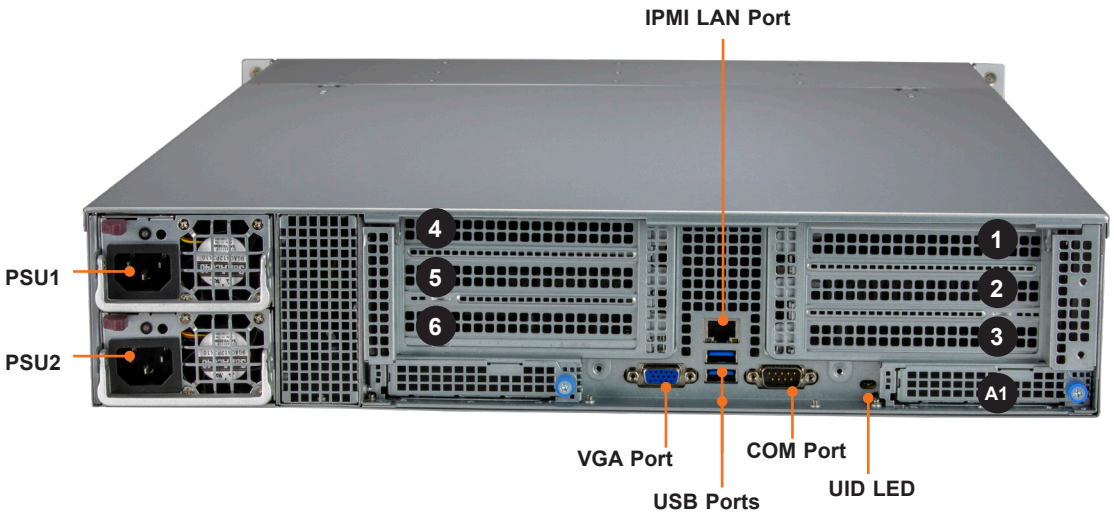

Figure 1-3. System Rear View

Chassis Rear Features	
Feature	**Description**
PSU1 and PSU2	Two Redundant 1200 W hot-swap power supply modules (full redundancy based on configuration and application load)
VGA Port	Video port, When the UID LED is on, the rear VGA may be disabled to enable the front VGA port, if available.
USB Ports	Two USB 3.2 ports
IPMI LAN Port	Dedicated port to access the IPMI
COM Port	Serial port
UID LED	The unit identifier (UID) indicator light

Expansion Slot Descriptions	
Item	**Description**
1	PCIe 5.0 x8 (FH, 10.5" L)
2	PCIe 5.0 x8 (FH, 10.5" L)
3	PCIe 5.0 x16 (FHHL)
4	PCIe 5.0 x8 (FH, 10.5" L)
5	PCIe 5.0 x8 (FH, 10.5" L)
6	PCIe 5.0 x16 (FHHL)
A1	PCIe 5.0 x16 AIOM slot (default with NCSI)

Power Supply Indicators

Power Supply Indicator	
LED Color and State	**Power Supply Condition**
Solid Green	Indicates that the power supply is on.
Blinking Green	Indicates that the power supply is plugged in and turned off by the system.
Blinking Amber	Indicates that the power supply has a warning condition and continues to operate.
Solid Amber	Indicates that the power supply is plugged in, and is in an abnormal state. The system might need service. Please contact Supermicro technical support.
Off	No AC power to modules

1.4 Motherboard Layout

Below is a layout of the X13SEDW-F with jumper, connector and LED locations shown. See the table on the following pages for descriptions. For detailed descriptions, pinout information, and jumper settings, refer to Chapter 4.

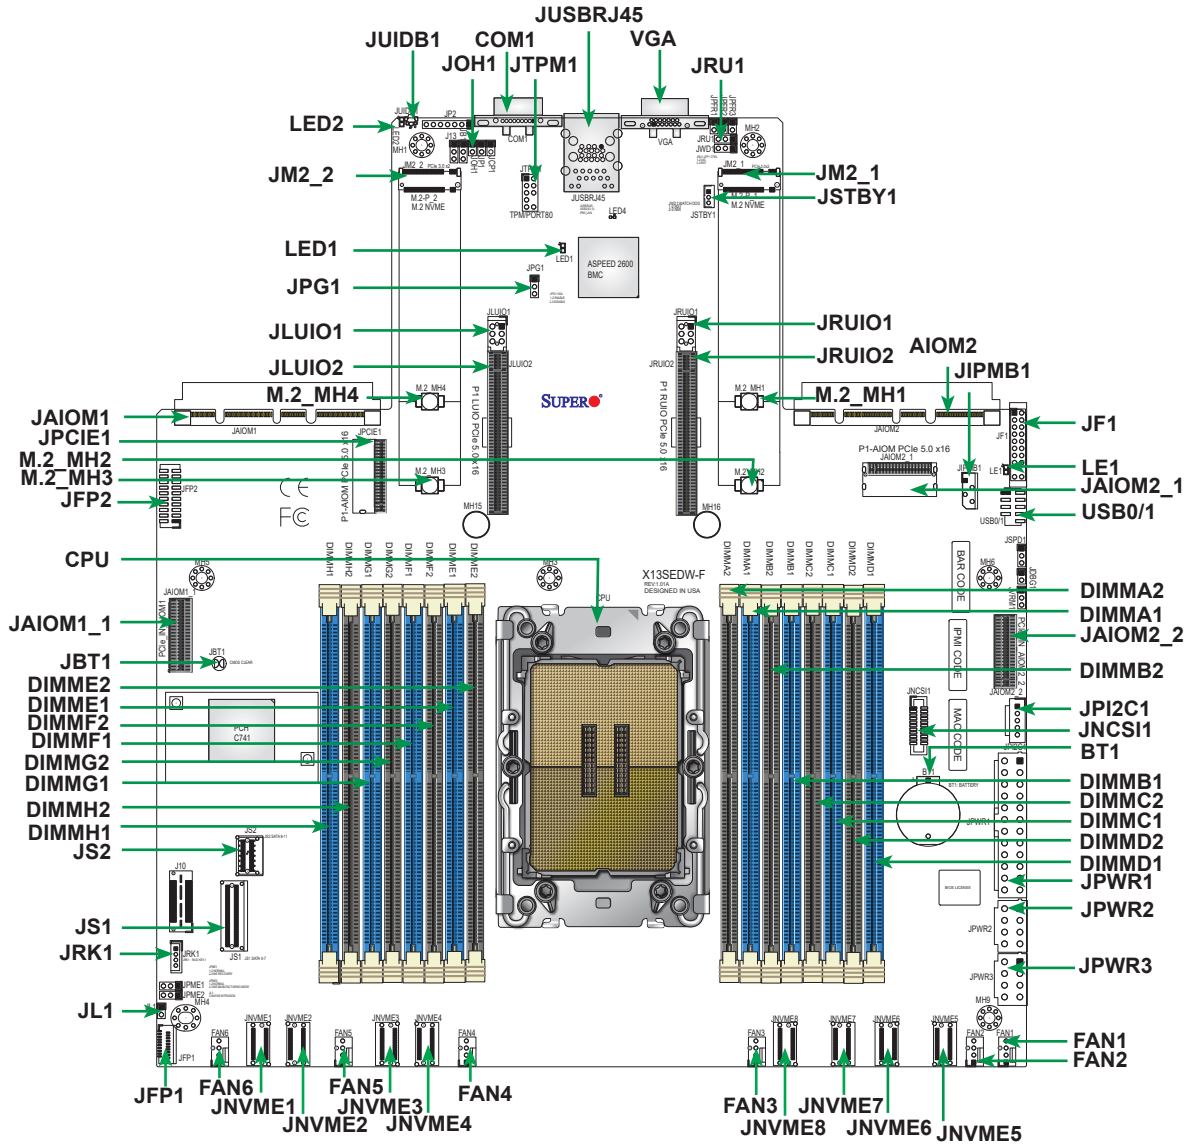

Figure 1-5. Motherboard Layout

Notes:

- "▄" indicates the location of pin 1.
- Jumpers/LED indicators not indicated are unused or used for testing only and are not covered in this manual.

Quick Reference Table

Jumper	Description	Default Setting
JBT1	CMOS Clear	Open (Normal)
JPG1	VGA Enable/Disable	Pins 1–2 (Enabled)
JRU1	Front Control Board (JFP1) Signal Reset	Pins 1–2 UID (Default) Pins 2–3 Reset

LED	Description	Status
LE1	Power LED	LED On: Onboard Power On
LED1	BMC Heartbeat LED	Blinking Green: BMC Normal
LED2	UID LED	Solid Blue: Unit Identified

Connector	Description
BT1	Onboard Battery
COM1	COM Port
FAN1–FAN6	CPU/System Fan Headers (FAN1: CPU Fan)
JAIOM1	PCIe 5.0 (default x8) AIOM (Advanced I/O Module)
JAIOM2	PCIe 5.0 (default x0) AIOM (Advanced I/O Module)
JAIOM1_1	PCIe 5.0 x8 Input Connector for Upgrading AIOM1 to PCIe 5.0 x16
JAIOM2_1	Right-Angle PCIe 5.0 x8 Input Connector for Upgrading AIOM2 to PCIe 5.0 x8
JAIOM2_2	PCIe 5.0 x8 Input Connector for Upgrading AIOM2 to PCIe 5.0 x16 (with JAIOM2_1 in use)
JF1	Front Control Panel Header
JFP1	Front Control Board Header for Signals (can be used independently)
JFP2	Front Control Board Header for VGA and USB (to be used in conjunction with JFP1)
JIPMB1	4-Pin BMC External I²C Header
JL1	Chassis Intrusion Header
JLUIO1, JLUIO2	Left LUIO PCIe 5.0 x16
JM2_1, JM2_2	PCIe 3.0 x2 M.2 Slots from PCH (Support M-Key 2280 and 22110)
JOH1	Overheat/Fan Fail LED Header
JNCSI1	NC-SI Header for IPMI Support
JNVME1–JNVME8	PCIe 5.0 x4 MCIO Ports with Support of NVMe Connections (0/1/2/3/4/5/6/7) or Upgrading for Riser and AIOM
JPCIE1	PCIe 5.0 x8 Upgrading Connector for AIOM, NVMe, or Riser
JPI²C1	Power I²C System Management Bus (Power SMB) Header
JPWR1	24-pin ATX Power Connector (Required)
JPWR2, JPWR3	12 V 8-pin CPU Power Connector (To provide alternative power for special enclosure when the 24-pin ATX power is not in use.)
JRK1	Intel RAID Key Header
JRUIO1, JRUIO2	Right LUIO PCIe 5.0 x16
JS1	SATA0–SATA7 Intel PCH SATA 3.0 Ports (with RAID 0, 1, 5, and 10)

Connector	Description
JS2	SATA8–SATA11 Intel PCH SATA 3.0 Ports (with RAID 0, 1, 5, and 10)
JSTBY1	Standby Power Header
JTPM1	Trusted Platform Module/Port 80 Header
JUIDB1	Unit Identifier Switch
JUSBRJ45	Rear I/O USB2/3 Ports (USB 3.2 Gen 1) and Dedicated BMC LAN Port
M.2_MH1–M.2_MH4	M.2 Mounting Holes
USB0/1	Front Accessible USB 2.0 Headers
VGA	VGA Port

Note: For detailed instructions on how to configure Network Interface Card (NIC) settings, refer to the *Network Interface Card Configuration User's Guide* posted on the webpage http://www.supermicro.com/support/manuals/.

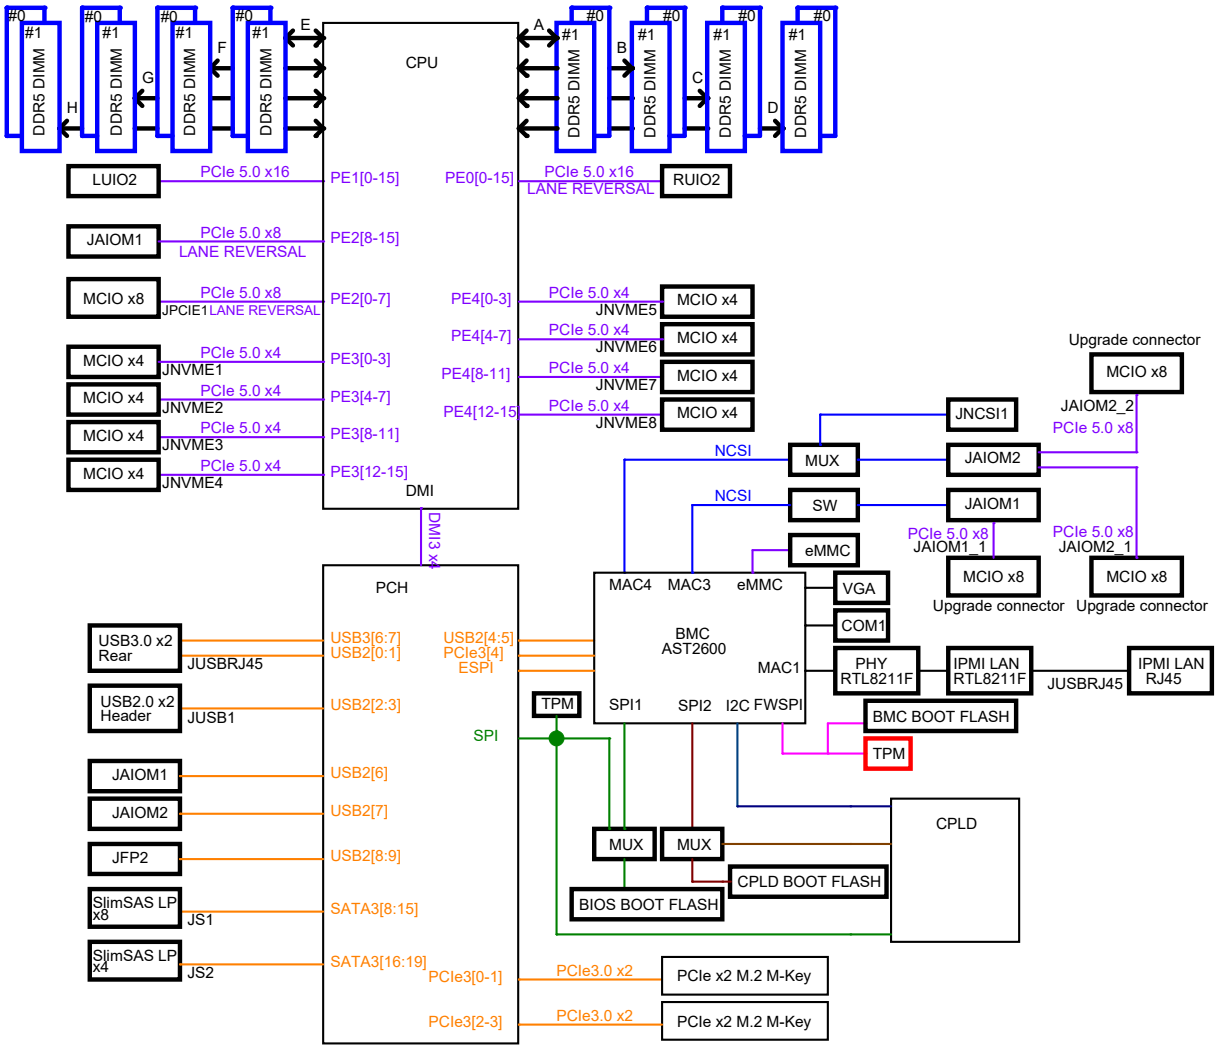

Figure 1-6. System Block Diagram

Note: This is a general block diagram and may not exactly represent the features on your motherboard. See the System Specifications appendix for the actual specifications of your motherboard.

Chapter 2

Server Installation

2.1 Overview

This chapter provides advice and instructions for mounting your system in a server rack. If your system is not already fully integrated with processors, system memory etc., refer to Chapter 3 for details on installing those specific components.

Caution: Electrostatic Discharge (ESD) can damage electronic components. To prevent such damage to PCBs (printed circuit boards), it is important to use a grounded wrist strap, handle all PCBs by their edges and keep them in anti-static bags when not in use.

2.2 Preparing for Setup

The box in which the system was shipped should include the rackmount hardware needed to install it into the rack. Please read this section in its entirety before you begin the installation.

Choosing a Setup Location

- The system should be situated in a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated.
- Leave enough clearance in front of the rack so that you can open the front door completely (~25 inches) and approximately 30 inches of clearance in the back of the rack to allow sufficient space for airflow and access when servicing.
- This product should be installed only in a Restricted Access Location (dedicated equipment rooms, service closets, etc.).
- This product is not suitable for use with visual display workplace devices according to §2 of the German Ordinance for Work with Visual Display Units.

Rack Precautions

- Ensure that the leveling jacks on the bottom of the rack are extended to the floor so that the full weight of the rack rests on them.
- In single rack installations, stabilizers should be attached to the rack. In multiple rack installations, the racks should be coupled together.
- Always make sure the rack is stable before extending a server or other component from the rack.
- You should extend only one server or component at a time - extending two or more simultaneously may cause the rack to become unstable.

Server Precautions

- Review the electrical and general safety precautions in Appendix A.
- Determine the placement of each component in the rack *before* you install the rails.
- Install the heaviest server components at the bottom of the rack first and then work your way up.
- Use a regulating uninterruptible power supply (UPS) to protect the server from power surges and voltage spikes and to keep your system operating in case of a power failure.
- Allow any drives and power supply modules to cool before touching them.
- When not servicing, always keep the front door of the rack and all covers/panels on the servers closed to maintain proper cooling.

Rack Mounting Considerations

Ambient Operating Temperature

If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the room's ambient temperature. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer’s maximum rated ambient temperature (TMRA).

Airflow

Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading

Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading

Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on over current protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground

A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

2.3 Installing the Rails

There are a variety of rack units on the market, which may require a slightly different assembly procedure. This rail set fits a rack between 26.8" and 36.4" deep.

The following is a basic guideline for installing the system into a rack with the rack mounting hardware provided. You should also refer to the installation instructions that came with the specific rack you are using.

Identifying the Rails

The chassis comes with two sets of rack rails, one set for the right side of the chassis and one for the left. Each set consists of an inner rail that is pre-attached to the chassis, an outer rail that attaches to the rack, and a middle rail that slides forward in the outer rail.

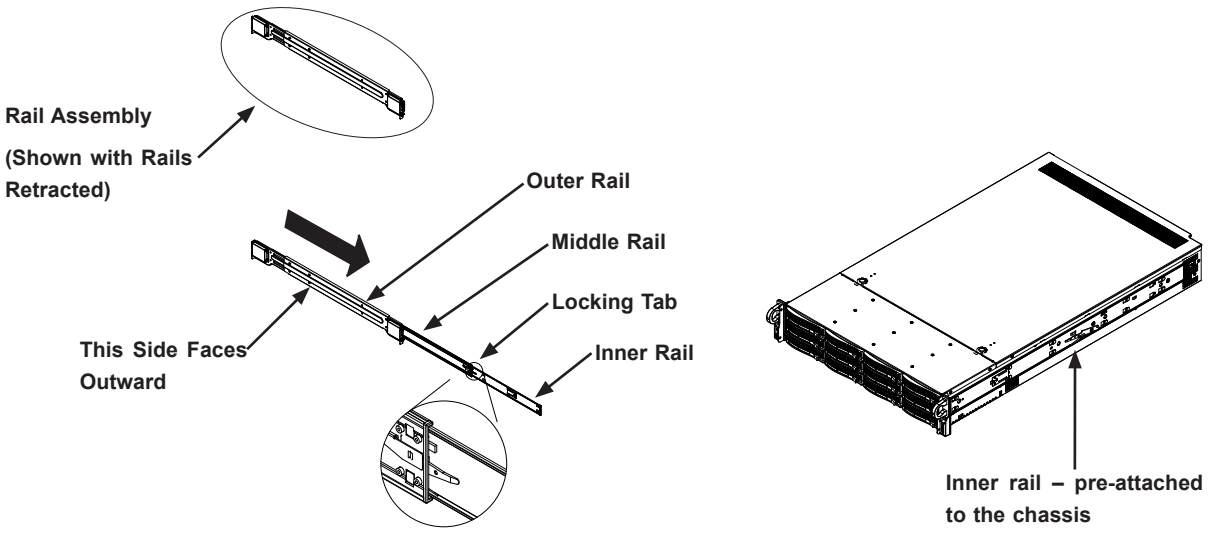

Figure 2-1. Identifying the Sections of the Rack Rails

(Figure on Left is Left Rail Assembly Shown)

Note: The front chassis rails and the rack rails both have a locking tab. The locking tabs hold the server in place when fully installed and pushed into the rack (its normal operating position). The tabs also lock the server in place when extended from the rack to prevent the server from completely coming out of the rack when pulled out for servicing.

Releasing the Inner Rail

Each inner rail has a locking latch. This latch prevents the server from coming completely out of the rack when the chassis is pulled out for servicing.

To mount the rail onto the chassis, first release the inner rail from the outer rails.

Releasing Inner Rail from the Outer Rails

1. Pull the inner rail out of the outer rail until it is fully extended as illustrated below.
2. Press the locking tab down to release the inner rail.
3. Pull the inner rail all the way out.

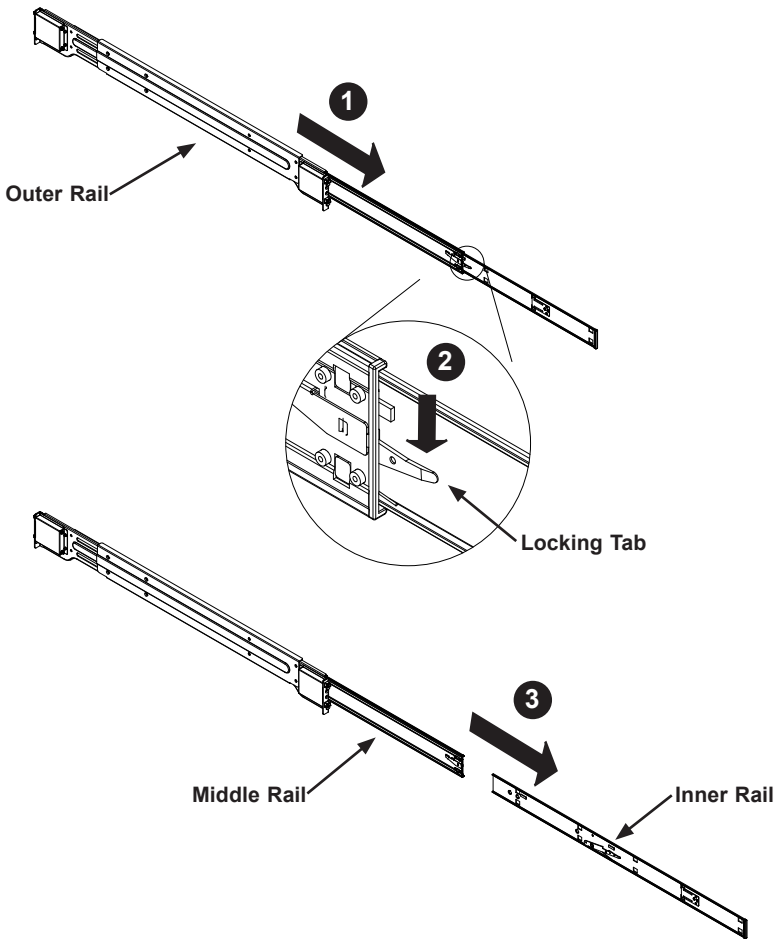

Figure 2-2. Extending and Releasing the Inner Rail

Installing the Inner Rails on the Chassis

Installing the Inner Rails

1. Identify the left and right inner rails. They are labeled.
2. Place the inner rail firmly against the side of the chassis, aligning the hooks on the side of the chassis with the holes in the inner rail.
3. Slide the inner rail forward toward the front of the chassis until the quick release bracket snaps into place, securing the rail to the chassis.
4. Optionally, you can further secure the inner rail to the chassis with a screw.
5. Repeat for the other inner rail.

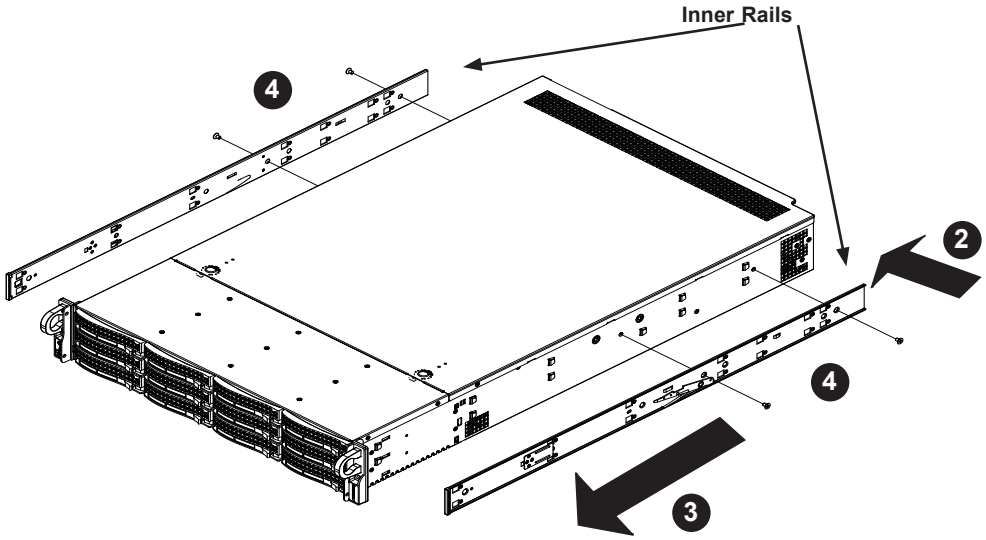

Figure 2-3. Installing the Inner Rails

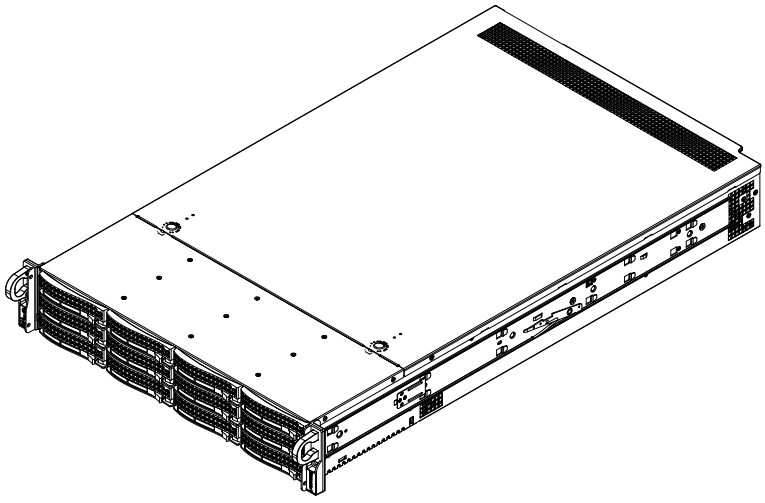

Figure 2-4. Inner Rails Installed on the Chassis

Installing the Outer Rails onto the Rack

1. Press upward on the locking tab at the rear end of the middle rail.
2. Push the middle rail back into the outer rail.
3. Hang the hooks on the front of the outer rail onto the square holes on the front of the rack. If desired, use screws to secure the outer rails to the rack.
4. Pull out the rear of the outer rail, adjusting the length until it just fits within the posts of the rack.
5. Hang the hooks of the rear section of the outer rail onto the square holes on the rear of the rack. Take care that the proper holes are used so the rails are level. If desired, use screws to secure the rear of the outer rail to the rear of the rack.

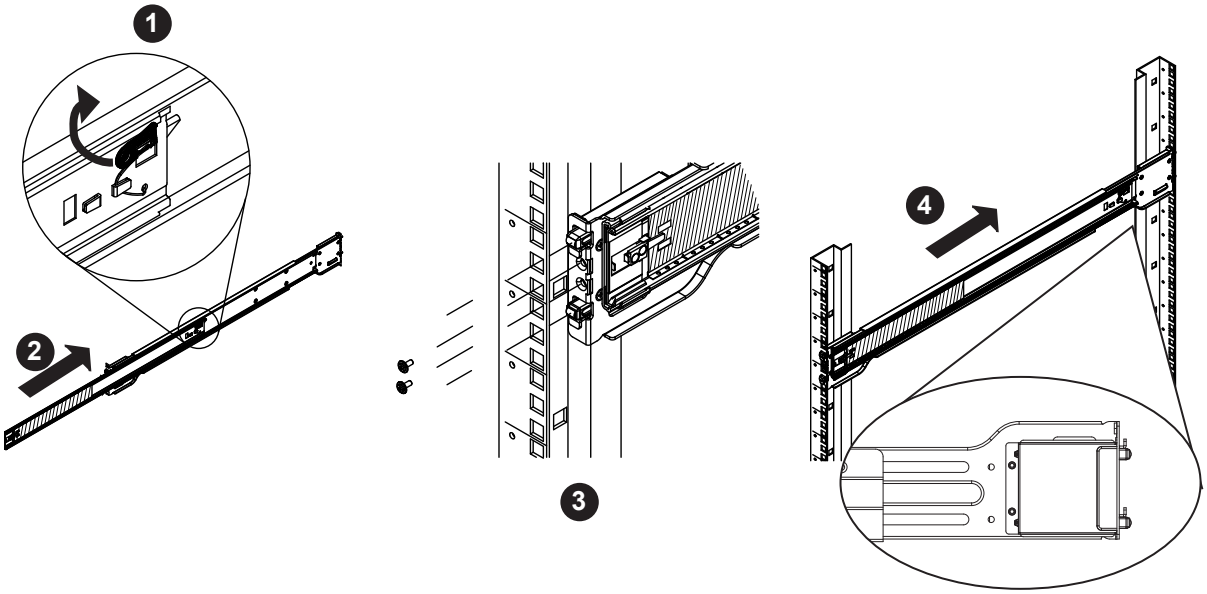

Figure 2-5. Extending and Mounting the Outer Rails

Note: The figure above is for illustrative purposes only. Always install servers at the bottom of the rack first.

Stability hazard. The rack stabilizing mechanism must be in place, or the rack must be bolted to the floor before you slide the unit out for servicing. Failure to stabilize the rack can cause the rack to tip over.

Do not use a two post "telco" type rack.

2.4 Installing the Server into the Rack

Once rails are attached to the chassis and the rack, you can install the server.

1. Pull the middle rail out of the front of the outer rail and make sure that the ball bearing shuttle is locked at the front of the middle rail.
2. Align the rear of the chassis rails with the middle rails and then push evenly on both sides of the chassis until it clicks into the fully extended position.
3. Depress the locking tabs on both sides of the chassis and push the it fully into the rack. The locking tabs should "click".
4. Optional screws may be used to hold the front of the chassis to the rack.

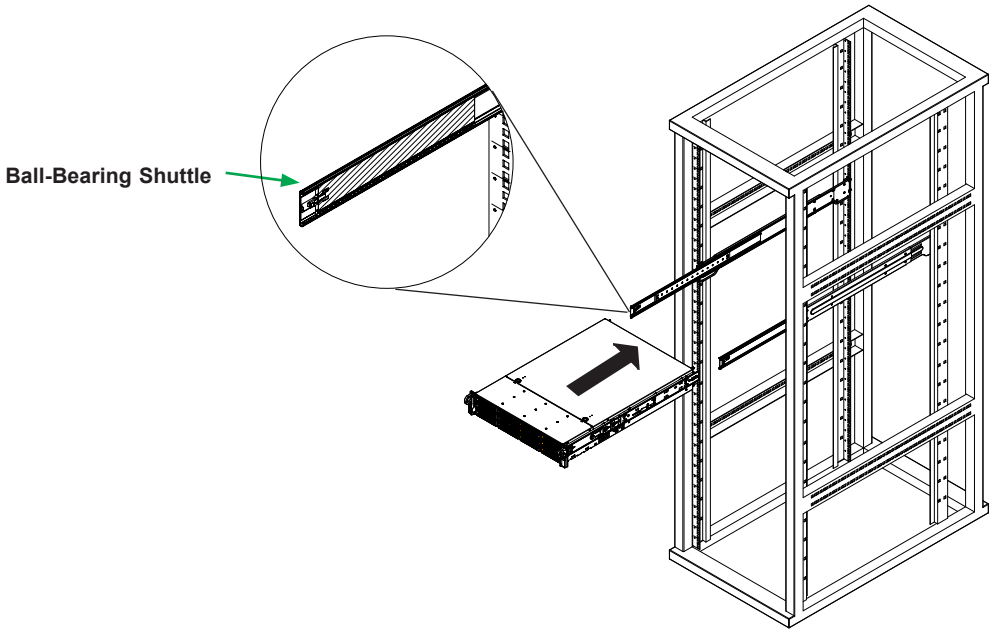

Figure 2-6. Installing into a Rack

Notes: Keep the ball bearing shuttle locked at the front of the middle rail during installation. Figure is for illustrative purposes only. Always install servers to the bottom of a rack first.

Caution: Do not pick up the server with the front handles. They are designed to pull the system from a rack only.

Slide rail mounted equipment is not to be used as a shelf or a work space.

Removing the Chassis from the Rack

Caution! It is dangerous for a single person to off-load the heavy chassis from the rack without assistance. Be sure to have sufficient assistance supporting the chassis when removing it from the rack. Use a lift.

1. Pull the chassis forward out the front of the rack until it stops.
2. Press the release latches on each of the inner rails downward simultaneously and continue to pull the chassis forward and out of the rack.

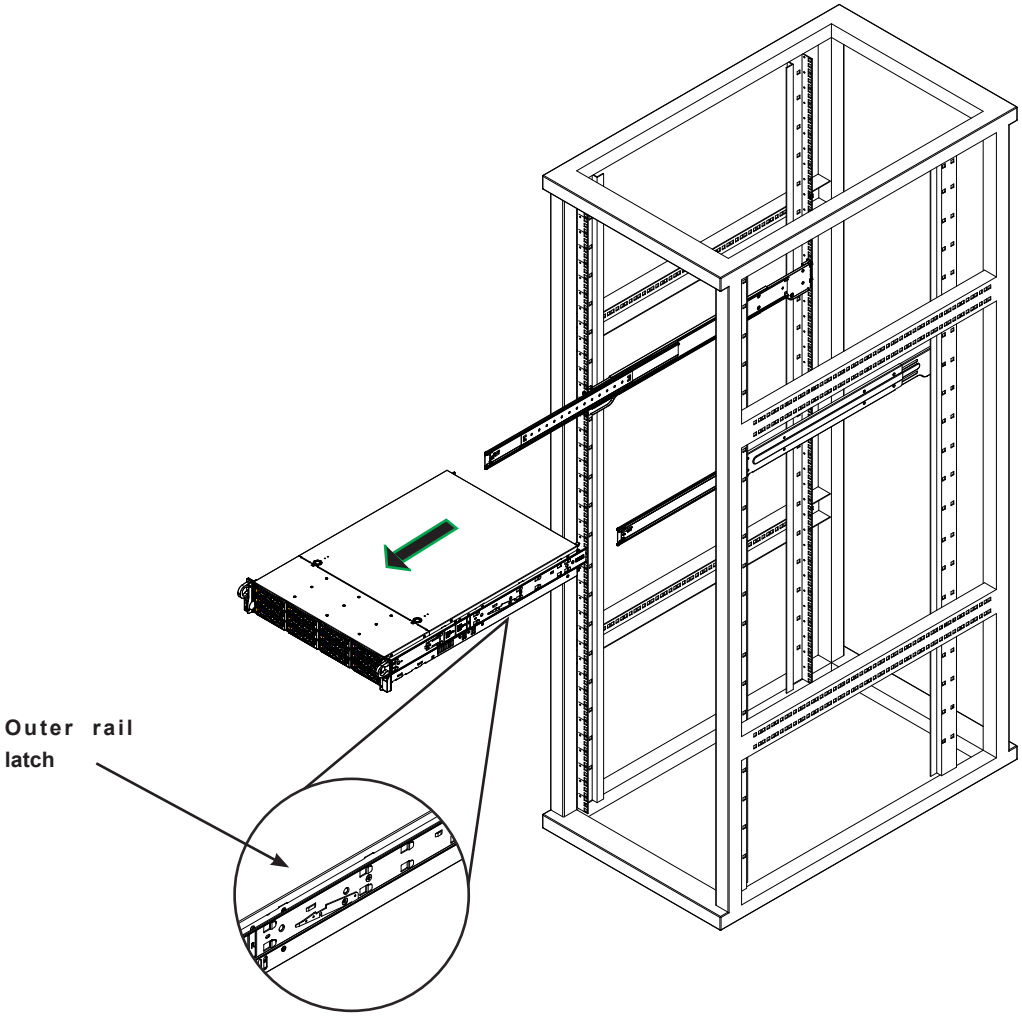

Figure 2-7. Removing the Chassis From the Rack

Chapter 3

Maintenance and Component Installation

This chapter provides instructions on installing and replacing main system components. To prevent compatibility issues, only use components that match the specifications and/or part numbers given.

Installation or replacement of most components require that power first be removed from the system. Please follow the procedures given in each section.

3.1 Removing Power

Use the following procedure to ensure that power has been removed from the system. This step is necessary when removing or installing non hot-swap components or when replacing a non-redundant power supply.

1. Use the operating system to power down the system.
2. After the system has completely shut-down, disconnect the AC power cord(s) from the power strip or outlet. (If your system has more than one power supply, remove the AC power cords from all power supply modules.)
3. Disconnect the power cord(s) from the power supply module(s).

3.2 Accessing the System

The system features a removable top cover, which allows access to the inside of the system.

Removing the Top Cover

1. Press the two release buttons and slide the cover toward the rear.
2. Lift the top cover up.

Check that all ventilation openings on the top cover and the top of the system are clear and unobstructed.

Caution: Except for short periods of time, do not operate the server without the cover in place. The system cover must be in place to allow for proper airflow and to prevent overheating.

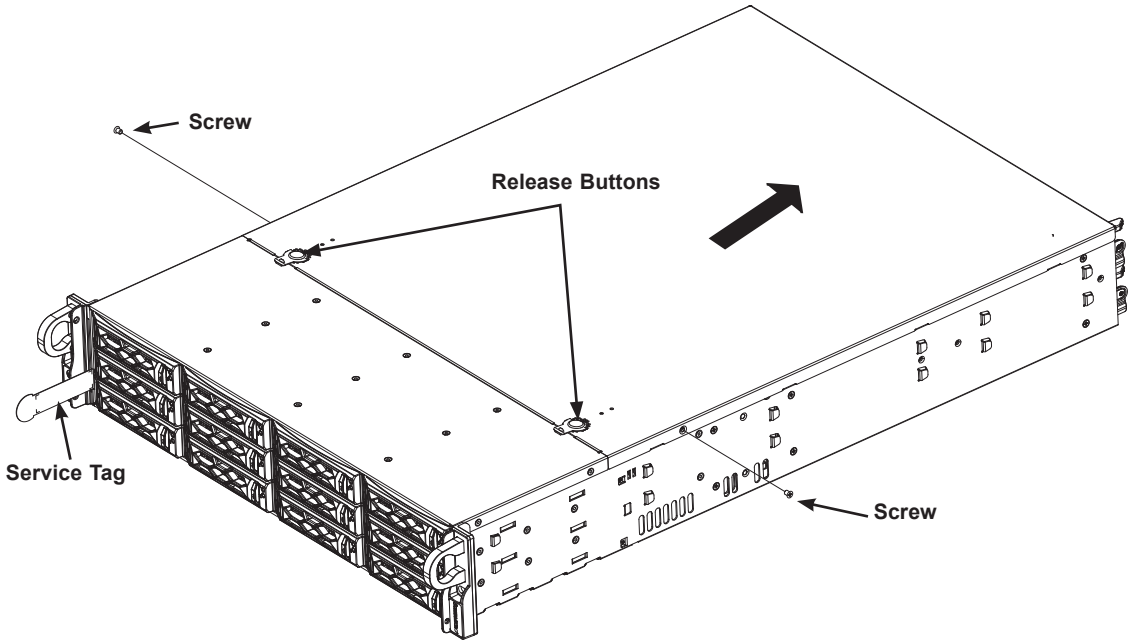

Figure 3-1. Removing the Top Cover

3.3 Motherboard Components

Processor and Heatsink Installation

The processor (CPU) and processor carrier should be assembled together first to form the processor carrier assembly. This will be attached to the heatsink to form the processor heatsink module (PHM) before being installed onto the CPU socket.

Notes:

- Use ESD protection.
- Shut down the system and then unplug the AC power cord from all power supplies.
- Check that the plastic protective cover is on the CPU socket and none of the socket pins are bent. If they are, contact your retailer.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or socket, which may require manufacturer repairs.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.
- Refer to the Supermicro website for updates on processor support.
- All graphics in this manual are for illustration purposes only. Your components may look different.
- Please order the CPU carrier to pair with the CPU.

CPU carrier for 4th and 5th Generation Intel Xeon Scalable Processors (XCC)	SKT-1333L-0000-FXC
CPU carrier for 4th and 5th Generation Intel Xeon Scalable Processors (MCC)	SKT-1424L-001B-FXC
CPU carrier for 4th Generation Intel Xeon Scalable Processors (HBM)	SKT-1425H-101C-FXC

The 4th and 5th Generation Intel Xeon Scalable Processor

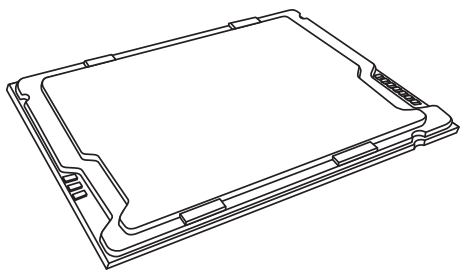

Intel Xeon Processor

Overview of the Processor Carrier Assembly

The processor carrier assembly contains the Intel Xeon processor and a processor carrier.

1. Intel Xeon Processor

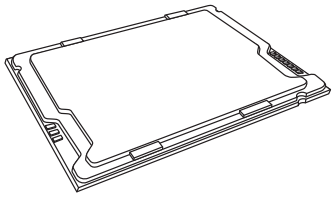

2. Processor Carrier

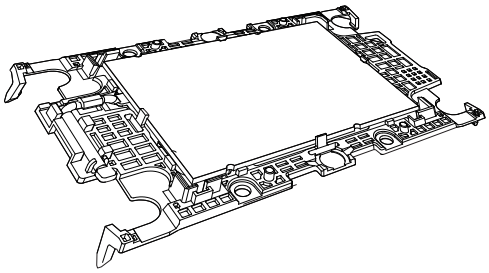

Overview of the CPU Socket

The CPU socket is protected by a plastic protective cover.

1. Plastic Protective Cover

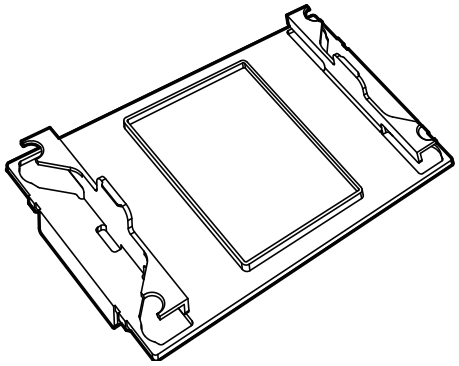

2. CPU Socket

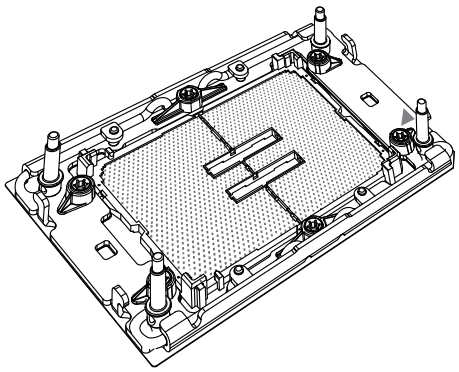

Overview of the Processor Heatsink Module

The Processor Heatsink Module (PHM) contains a heatsink, a processor carrier, and the Intel Xeon processor.

1. Heatsink with Thermal Grease

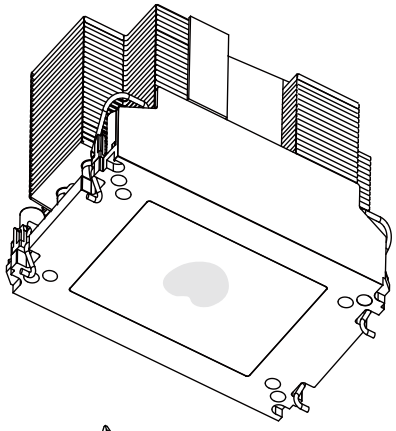

2. Processor Carrier

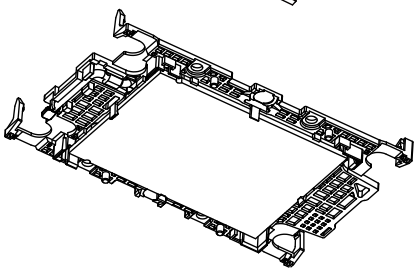

3. Intel Xeon Processor

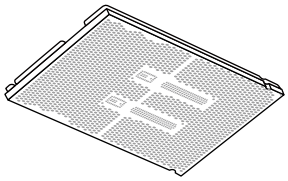

Processor Heatsink Module (PHM)

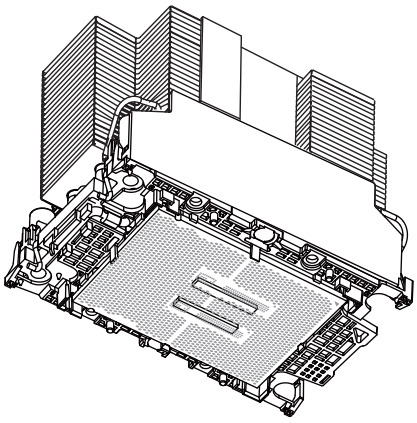

Bottom View

Creating the Processor Carrier Assembly

To install a processor into the processor carrier, follow the steps below:

1. Before installation, make sure the lever on the processor carrier is pressed down as shown below.
2. Hold the processor with the LGA lands (gold contacts) facing up. Locate the small, gold triangle in the corner of the processor and the corresponding hollowed triangle on the processor carrier. These triangles indicate pin 1. See the images below.
3. Use the triangles as a guide to carefully align and place one end of the processor into the latch marked A, and place the other end of processor into the latch marked B as shown below.
4. Examine all corners to ensure that the processor is firmly attached to the carrier.

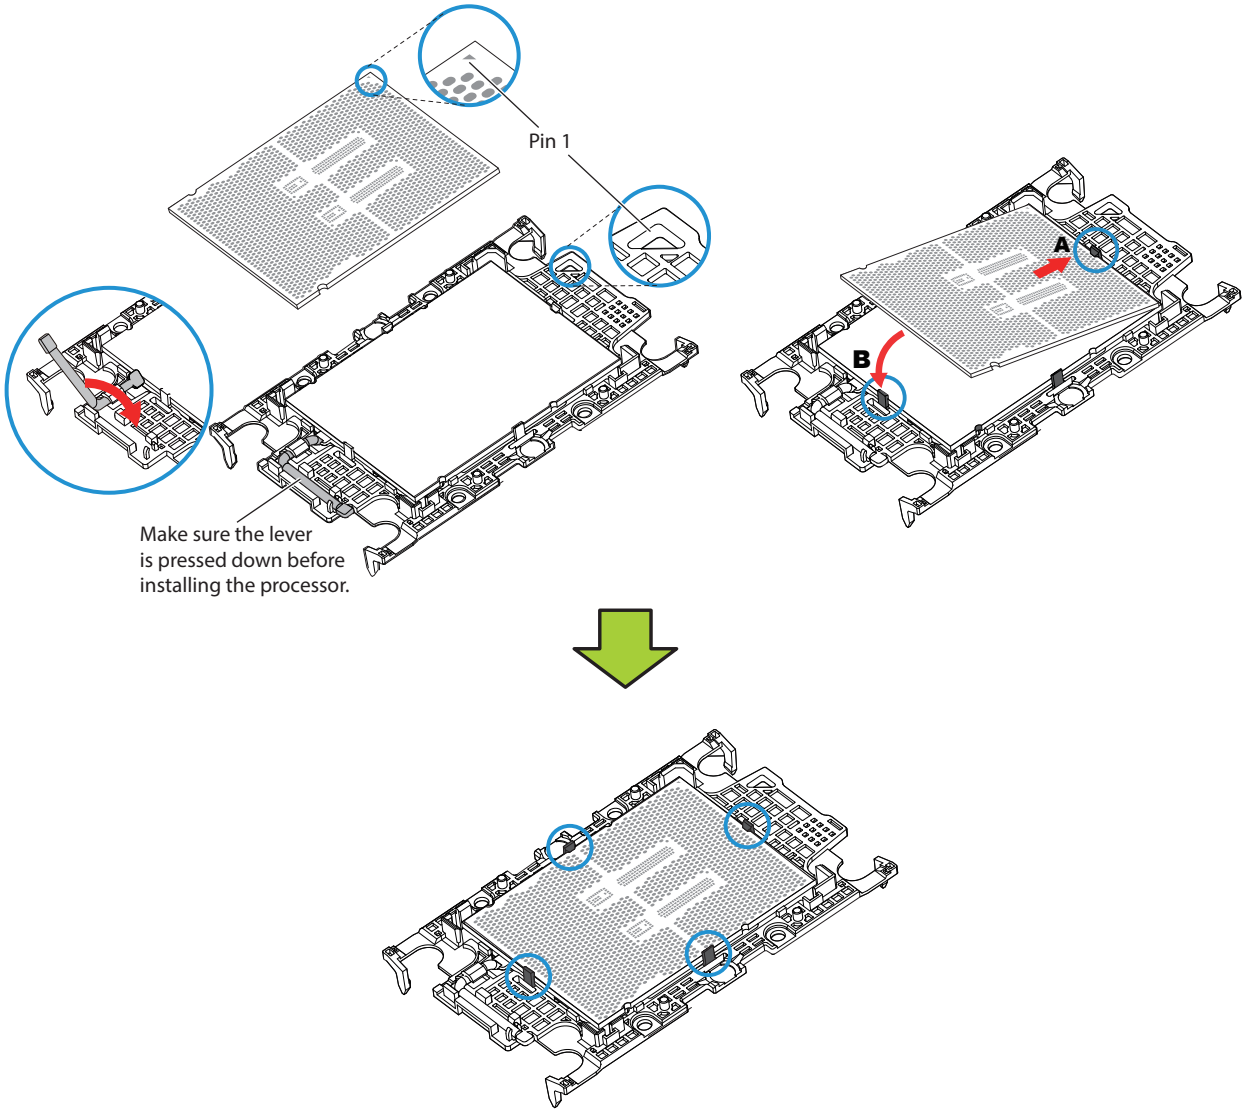

Processor Carrier Assembly

Assembling the Processor Heatsink Module

After creating the processor carrier assembly for the processor, mount it onto the heatsink to create the processor heatsink module (PHM):

1. Note the label on top of the heatsink, which marks the airflow direction. Turn the heatsink over and orient the heatsink so the airflow arrow is pointing towards the triangle on the processor.

2. If this is a new heatsink, the thermal grease has been pre-applied. Otherwise, apply the proper amount of thermal grease.

3. Hold the processor carrier assembly so the processor's gold contacts are facing up, then align the holes of the processor carrier assembly with the holes on the heatsink. Press the processor carrier assembly down until it snaps into place. The plastic clips of the processor carrier assembly will lock at the four corners.

4. Examine all corners to ensure that the plastic clips on the processor carrier assembly are firmly attached to the heatsink.

Processor Carrier Assembly
(Upside Down)

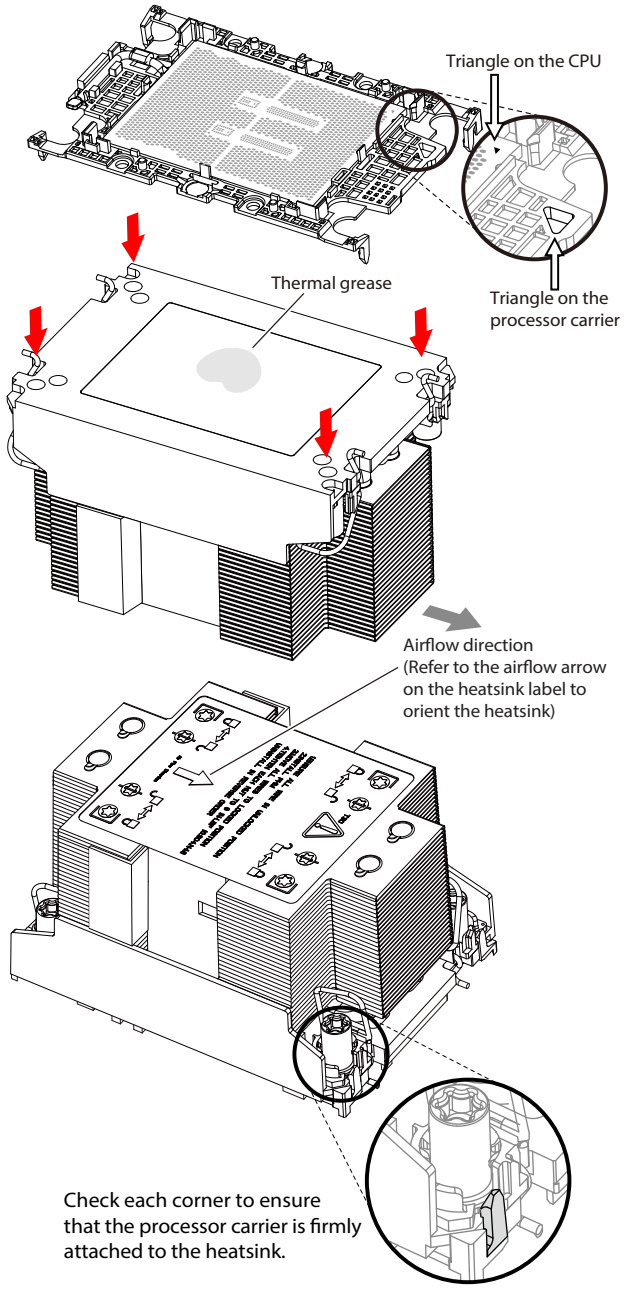

Preparing the CPU Socket for Installation

This motherboard comes with a plastic protective cover installed on the CPU socket. Remove it from the socket to install the Processor Heatsink Module (PHM). Gently pull up one corner of the plastic protective cover to remove it.

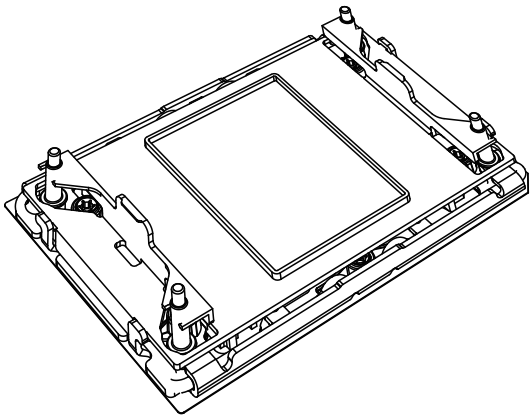

CPU Socket with Plastic Protective Cover

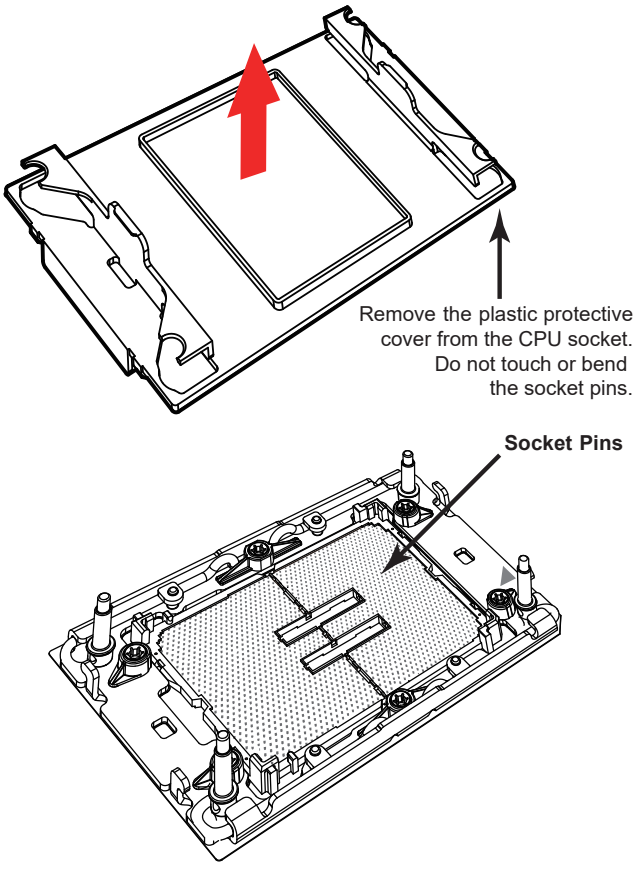

Installing the Processor Heatsink Module

After assembling the Processor Heatsink Module (PHM), install it onto the CPU socket:

1. Align pin 1 of the PHM with the printed triangle on the CPU socket. See the left image below.
2. Make sure all four holes of the heatsink are aligned with the socket, then gently place the heatsink on top of the CPU socket.
3. Press all four rotating wires outwards and make sure that the heatsink is securely latched into the CPU socket.
4. With a T30 bit torque driver set to a force of 8.0 in-lbf (0.904 N-m), gradually tighten the four screws to ensure even pressure. You can start with any screw, but make sure to tighten the screws in a diagonal pattern.

   Important: Do not use a force greater than 8.0 in-lbf (0.904 N-m). Exceeding this force may over-torque the screw, causing damage to the processor, heatsink, and screw.

5. Examine all corners to ensure that the PHM is firmly attached to the socket.

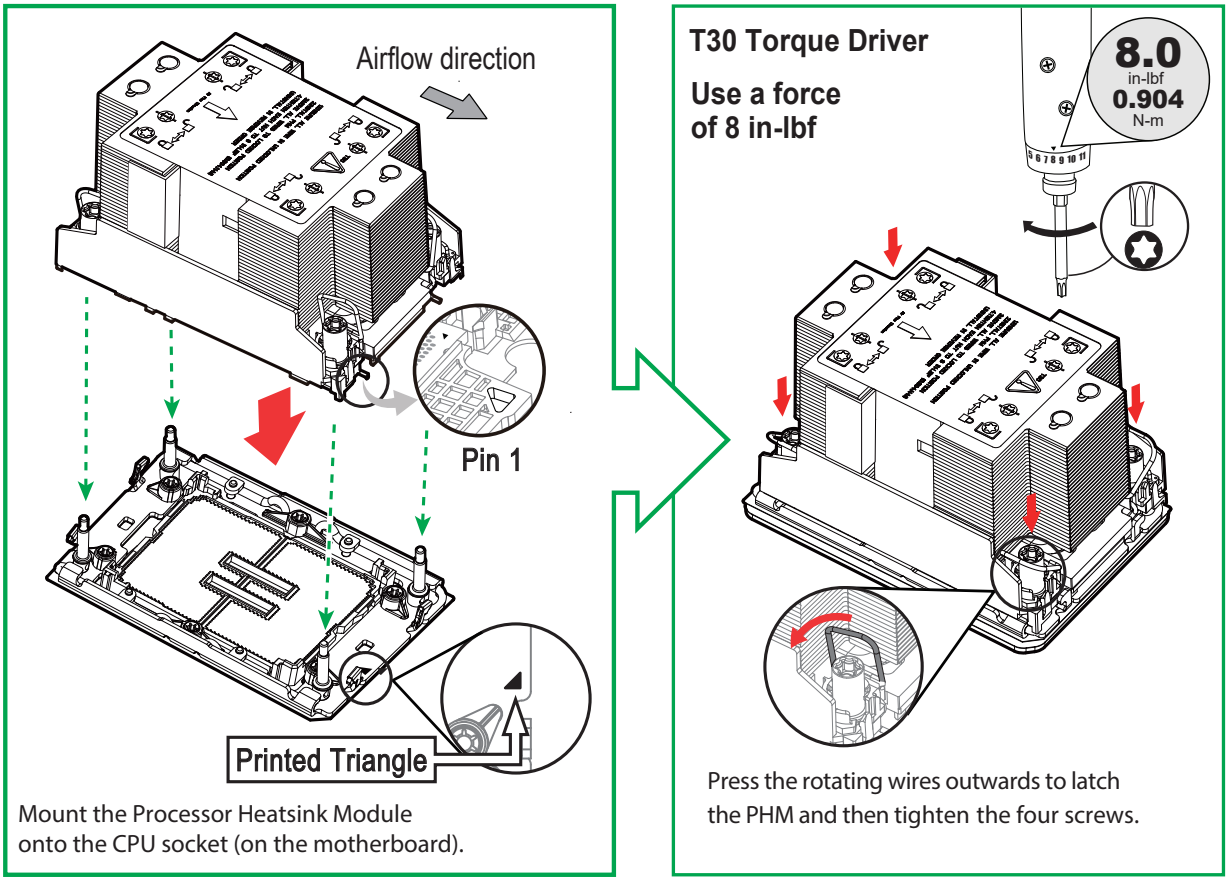

Mount the Processor Heatsink Module onto the CPU socket (on the motherboard).

Press the rotating wires outwards to latch the PHM and then tighten the four screws.

Removing the Processor Heatsink Module

Before removing the processor heatsink module (PHM) from the motherboard, shut down the system and then unplug the AC power cord from all power supplies.

Then follow the steps below:

1. Use a T30 Torx-bit screwdriver to loosen the four screws. You can start with any screw, but make sure to loosen the screws in a diagonal pattern.
2. Press the four rotating wires inwards to unlatch the PHM from the socket.
3. Gently lift the PHM upwards to remove it from the socket.
4. To remove the CPU, move the lever to its unlocked position and gently remove the CPU.

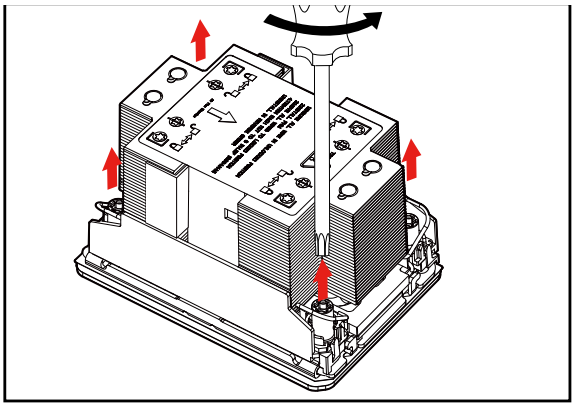

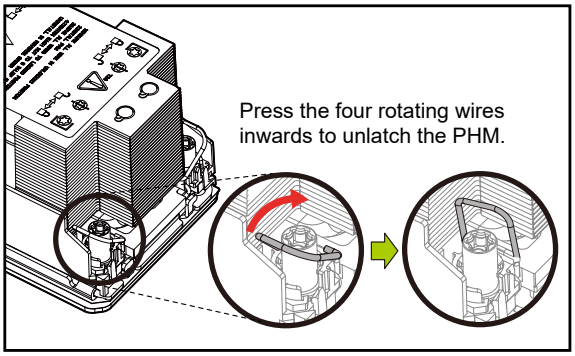

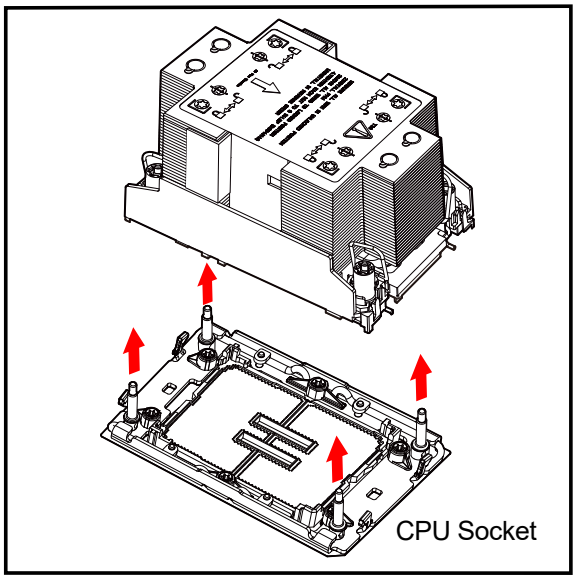

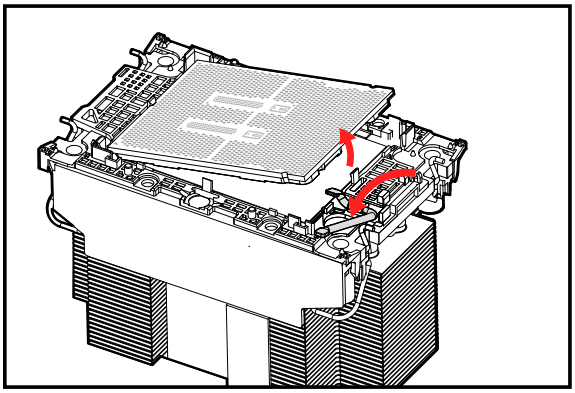

Memory Support

Note: Check the Supermicro website for recommended memory modules.

Important: Exercise extreme care when installing or removing DIMM modules to prevent any possible damage.

Memory Support

The X13SEDW-F supports up to 4 TB of ECC RDIMM/RDIMM 3DS DDR5 memory in eight memory slots. The 4th Generation Intel Xeon Scalable Processor memory has speeds of up to 4800 MT/s (4400 MT/s when fully populated), while the 5th Generation Intel Xeon Scalable Processor memory has speeds of up to 5600 MT/s (4400 MT/s when fully populated). Refer to the table below for the recommended DIMM population order.

Note: Use one DIMM per channel when populating the channels.

1 CPU, 16 DIMM Slots	
Number of DIMMs	**Memory Population Sequence**
2	DIMMA1 / DIMMG1
4	DIMMA1 / DIMMG1 / DIMMC1 / DIMME1
8	DIMMA1 / DIMMG1 / DIMMB1 / DIMMH1 / DIMMD1 / DIMMF1 / DIMMC1 /DIMME1
16	DIMMA1 / DIMMA2 / DIMMB1 / DIMMB2 / DIMMC1 / DIMMC2 / DIMMD1 / DIMMD2 / DIMME1 / DIMME2 / DIMMF1 / DIMMF2 / DIMMG1 / DIMMG2 / DIMMH1 / DIMMH2

1 HBM CPU, 16 DIMM Slots	
Number of DIMMs	**Memory Population Sequence**
0	
1	DIMMA1
2	DIMMA1 / DIMMG1
4	DIMMA1 / DIMMG1 / DIMMC1 / DIMME1
8	DIMMA1 / DIMMG1 / DIMMC1 / DIMME1 / DIMMD1 / DIMMF1 / DIMMB1 / DIMMH1
16	DIMMA1 / DIMMA2 / DIMMB1 / DIMMB2 / DIMMC1 / DIMMC2 / DIMMD1 / DIMMD2 / DIMME1 / DIMME2 / DIMMF1 / DIMMF2 / DIMMG1 / DIMMG2 / DIMMH1 / DIMMH2

Compatible and Incompatible DIMM Types in a Channel and a System			
DIMM Type	**RDIMM**	**RDIMM 3DS**	**9x4 RDIMM**
RDIMM	Compatible	Incompatible	Incompatible
RDIMM 3DS	Incompatible	Compatible	Incompatible
9x4 RDIMM	Incompatible	Incompatible	Compatible

DDR5 Memory Support for the 4th Generation Intel® Xeon® Scalable Processors-SP					
Type	**Ranks Per DIMM and Data Width (Stack)**	**DIMM Capacity (GB)**		**Speed (MT/s)**	
				One DIMM per Channel [1]	**Two DIMMs per Channel**
		Memory Density 16 Gb	**Memory Density 24 Gb[2]**	**1.1 Volts**	
RDIMM	SRx8 (RC D)	16 GB	24 GB	4800*	4400*
	SRx4 (RC C)	32 GB	48 GB		
	SRx4 (RC F) 9x4	32 GB	NA		
	DRx8 (RC E)	32 GB	48 GB		
	DRx4 (RC A)	64 GB	96 GB		
	DRx4 (RC B) 9x4	64 GB	NA		
RDIMM 3DS	(4R/8R) x4 (RC A)	2H-128 GB 4H-256 GB	NA		

*Memory speed and capacity support depends on the processors used in the system.

- 1DPC applies to 1SPC or 2SPC implementations (SPC – sockets per channel).
- 24 Gb XCC only with limited configs: 1DPC all DIMM types, 2DPC 96 GB only. Only 8 and 16 DIMM configs, no failbacks.
- Memory speed will be 4800 MT/s 1DPC and 4400 MT/s 2DPC.
- Mixing DRAM Density (16 Gb/24 Gb) and/or Frequency is not allowed.

DDR5 Memory Support for the 5th Generation Intel® Xeon® Scalable Processors-SP					
Type	**Ranks Per DIMM and Data Width (Stack)**	**DIMM Capacity (GB)**		**Speed (MT/s)**	
				One DIMM per Channel [1]	**Two DIMMs per Channel**
		Memory Density 16 Gb	**Memory Density 24 Gb**	**1.1 Volts**	
RDIMM	SRx8 (RC D)	16 GB	24 GB[2]	5600*	4400*
	SRx4 (RC C)	32 GB	48 GB[2]		
	SRx4 (RC F) 9x4	NA	NA		
	DRx8 (RC E)	32 GB	48 GB[2]		
	DRx4 (RC A)	64 GB	96 GB		
	DRx4 (RC B) 9x4	NA	NA		
RDIMM 3DS	(4R/8R) x4 (RC A)	2H-128 GB 4H-256 GB	NA		

*Memory speed and capacity support depends on the processors used in the system.

- 1DPC applies to 1SPC or 2SPC implementations (SPC – sockets per channel).
- 24 Gb, 24 GB, and 48 GB DRAM density is not supported in 2DPC.
- Memory speed will be 5600 MT/s 1DPC and 4400 MT/s 2DPC.
- For 1DPC 5600 speed, DDR5-5600 DIMMs are required.
- Mixing DRAM Density (16 Gb/24 Gb) and/or Frequency is not allowed.

General Guidelines for Optimizing Memory Performance

- It is recommended to use DDR5 memory of the same type, size, and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- To achieve the best memory performance, a balanced memory population is recommended.
- The motherboard will not support an odd number of modules except for a single DIMM module necessary for board operation. To achieve the best memory performance, a balanced (even number) memory population is recommended.

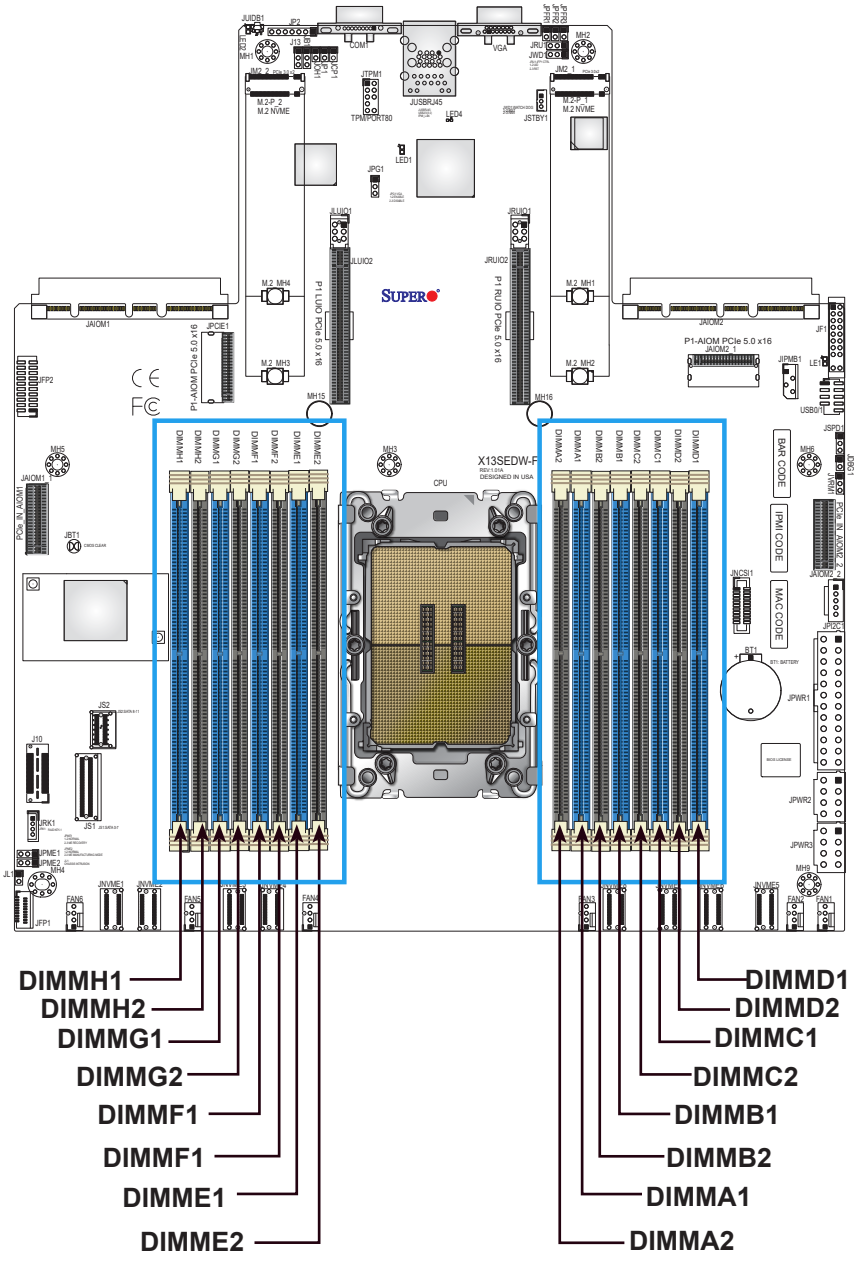

DIMM Installation

1. Insert the desired number of DIMMs into the memory slots based on the Recommended Memory Population Guide tables.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.
3. Align the key of the DIMM module with the receptive point on the memory slot.
4. Align the notches on both ends of the module against the receptive points on the ends of the slot.
5. Push both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM module into the slot.

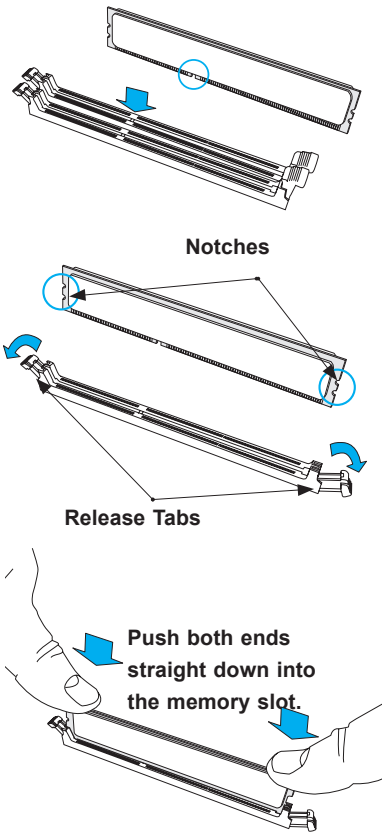

DIMM Removal

Press both release tabs on the ends of the DIMM module to unlock it. Once the DIMM module is loosened, remove it from the memory slot.

PCI Expansion Cards

The system can accommodate six to eight PCIe 5.0 expansion cards (depending upon configuration) and one PCIe 5.0 AIOM networking cards.

Limitations for Slots 1, 2, 4, and 5

Due to PCIe 5.0 requirements, riser card slots 1 and 2 are connected by cable to the JNVMe 1/2/3/4 port and slots 4 and 5 are connected by cable to the JNVMe 5/6/7/8 port on the motherboard.

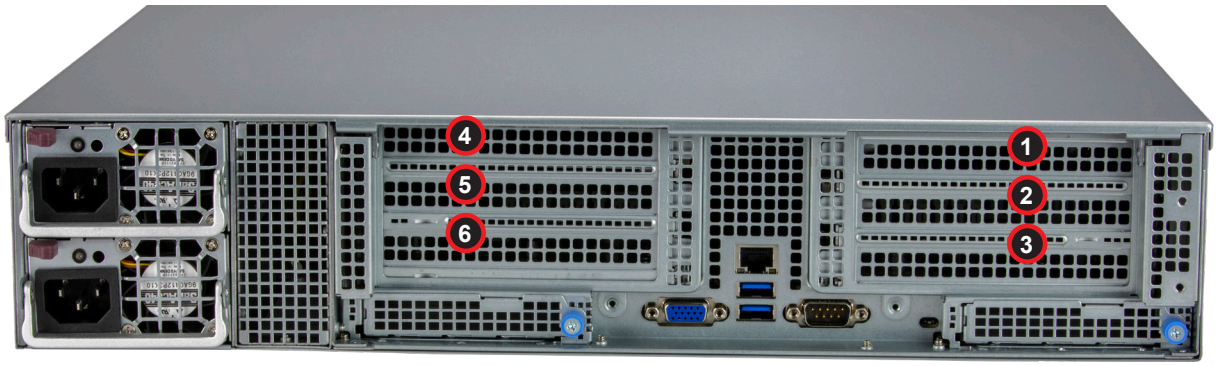

Figure 3-3. Expansion Card Slots

Expansion Slot Descriptions	
Item	**Description**
1	PCIe 5.0 x8 (FH, 10.5" L)
2	PCIe 5.0 x8 (FH, 10.5" L)
3	PCIe 5.0 x16 (FHHL)
4	PCIe 5.0 x8 (FH, 10.5" L)
5	PCIe 5.0 x8 (FH, 10.5" L)
6	PCIe 5.0 x16 (FHHL)

Installing Expansion Cards

1. Power down the system and remove the cover.
2. Lift the riser card bracket(s) out of the chassis using the pull-tabs.
3. In the rear of the chassis, remove the blank PCI shields that covers the chassis slot.

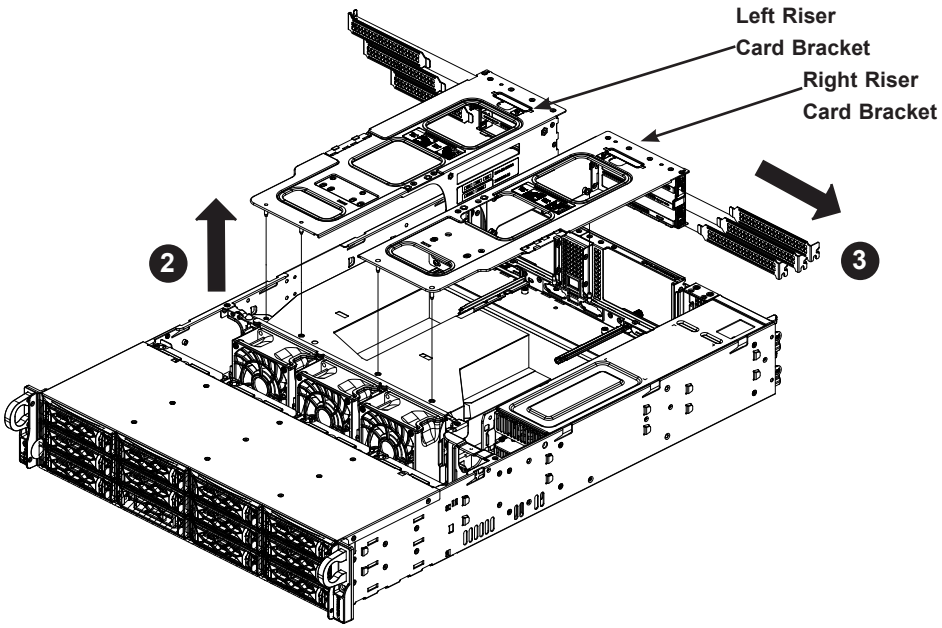

Figure 3-4. Removing Riser Card Brackets and Shields

4. Mount the riser card onto the bracket (if not already mounted) using four screws.
5. Slide the expansion card into the expansion slot on the riser card.
6. Slide the riser card into the slot on the motherboard while aligning the bracket with the chassis. There are two guide pins on the fan housing and one guide pin on the chassis rear.

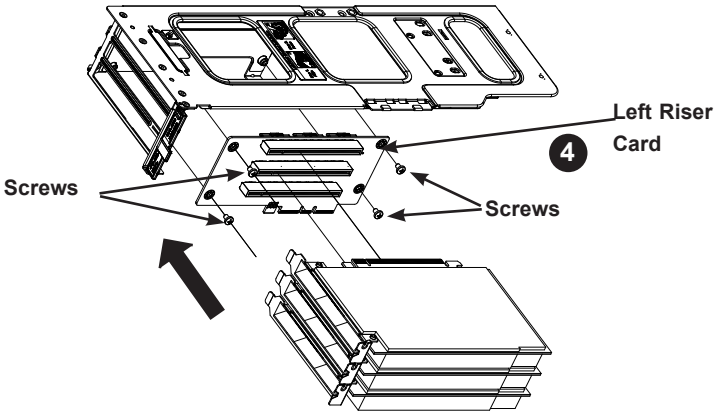

Figure 3-5. Installing Left Expansion Cards

AIOM Network Cards

The system provides network connection by means of one advanced I/O module (AIOM).

Figure 3-6. AIOM Slot

Installing an AIOM Card

1. Remove the blank cover plate from A1 by unscrewing the thumbscrew.
2. Slide the AIOM card into the opening until it seats in the motherboard slot.
3. Secure with the thumbscrew.

Note: System power must be turned off before removing or installing AIOM cards.

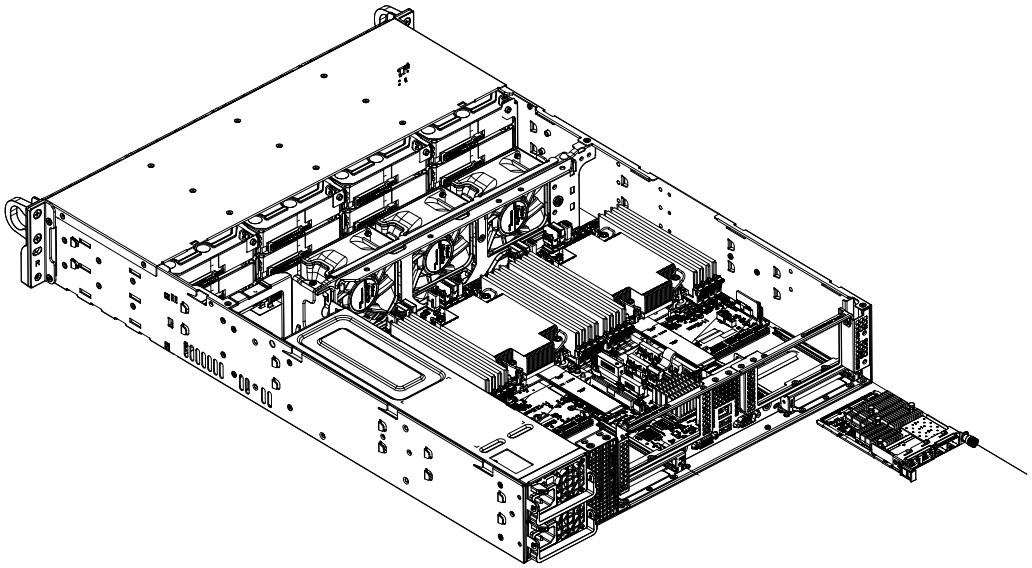

Figure 3-7. Installing AIOMs

Motherboard Battery

The motherboard uses non-volatile memory to retain system information when system power is removed. This memory is powered by a lithium battery residing on the motherboard.

Replacing the Battery

Begin by removing power from the system as described in Section 3.1.

1. Push aside the small clamp that covers the edge of the battery. When the battery is released, lift it out of the holder.
2. To insert a new battery, slide one edge under the lip of the holder with the positive (+) side facing up. Then push the other side down until the clamp snaps over it.

Note: Handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Please comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

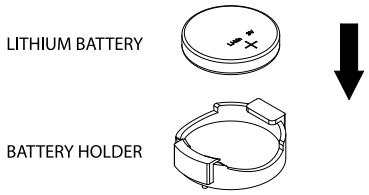

Figure 3-8. Installing the Onboard Battery

Warning: There is a danger of explosion if the onboard battery is installed upside down (which reverses its polarities). This battery must be replaced only with the same or an equivalent type recommended by the manufacturer (CR2032).

3.4 Chassis Components

This section provides instructions on installing and replacing system components. To assure compatibility, only use components that match the specifications or part numbers given.

Storage Drives

The system supports up to twelve 3.5"/2.5"SAS/SATA or two NVMe drives in front drive bays. An optional controller card kit is required to support SAS and an optional cable is required to support four NVMe drives.

The drives are mounted in tool-less drive carriers that simplify their removal from the chassis. These carriers also help promote proper airflow. Each carrier has a small space on the front to place an orange or purple label to help distinguish between NVMe or SAS/SATA drives. Drive carrier status indicators are described in Section 1.3.

Note: Enterprise level hard disk drives are recommended for use in Supermicro servers. For compatible storage drives, see https://www.supermicro.com/en/products/system/UP/2U/SYS-521C-NR.

Installing Drives

The system supports twelve hot-swap SATA/SAS3/NVMe hybrid drive bays.

Figure 3-9. Logical Drive Numbers

Removing a Hot-Swap Drive Carrier from the System

1. Press the release button on the drive carrier, which will extend the drive carrier handle.
2. Use the drive carrier handle to pull the drive out of the chassis.

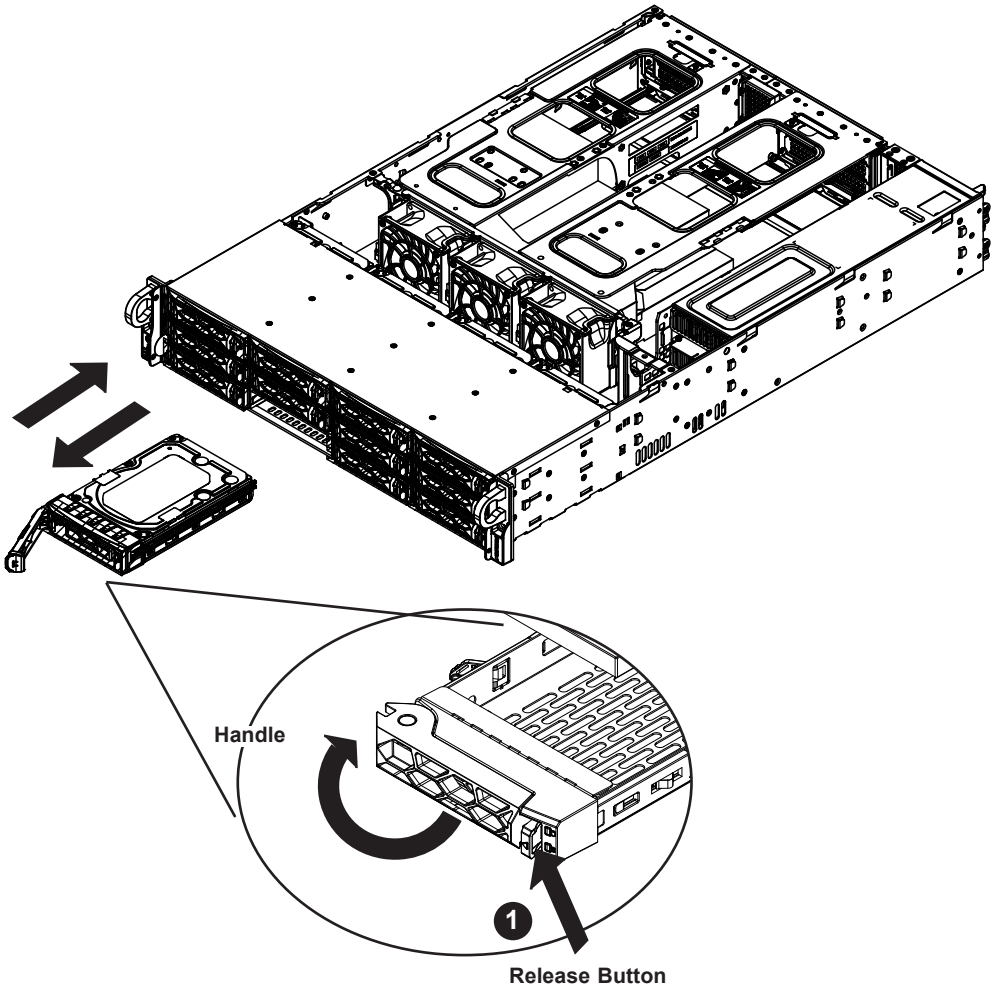

Figure 3-10. Removing a Drive Carrier

Installing a 3.5" Drive

1. Position the drive above the carrier with the PCB side facing down and the connector end toward the rear of the carrier.
2. Tilt the drive to insert it onto the two posts on the left inside of the carrier.

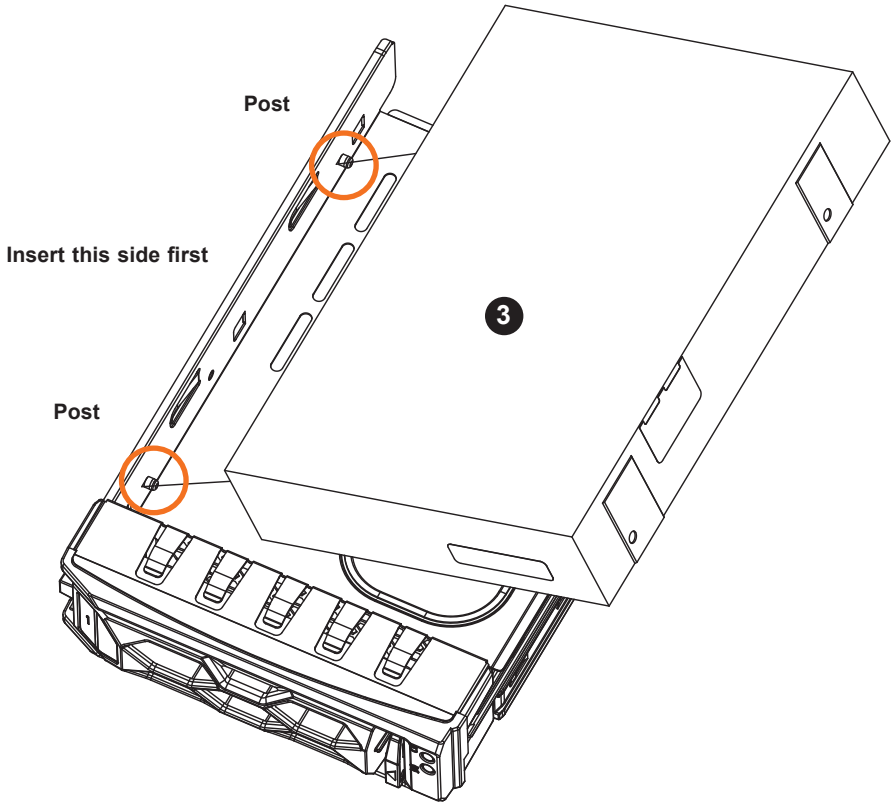

Figure 3-11. Installing a 3.5" Drive into a Carrier

3. Push the right side of the drive fully into the carrier and allow the two spring locking clasps to secure the drive.
4. Insert the drive carrier into its bay, keeping the release button on the right. When the carrier reaches the rear of the bay, the release handle will retract.
5. Push the handle in until it clicks into its locked position

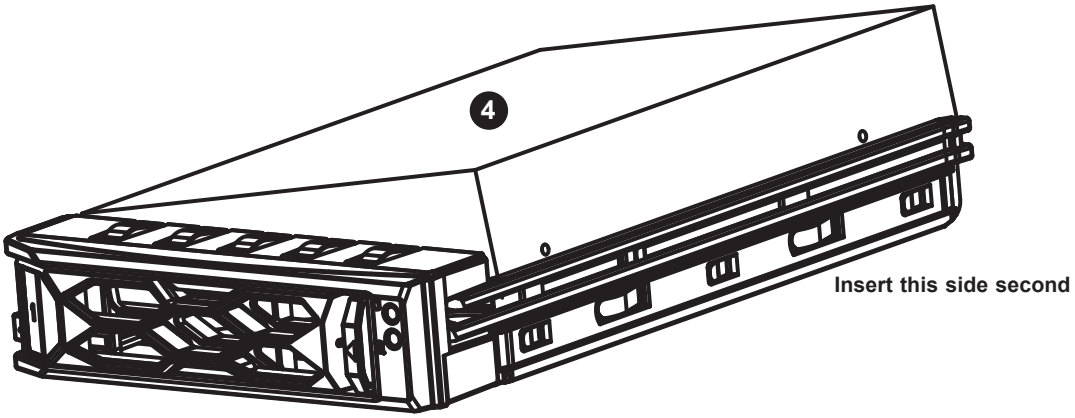

Figure 3-12. Installing a 3.5" Drive into a Carrier

Installing a 2.5" Drive

1. Install the drive directly into the tray with four screws underneath.
2. Insert the drive carrier into its bay, keeping the release button on the right. When the carrier reaches the rear of the bay, the release handle will retract.
3. Push the handle in until it clicks into its locked position

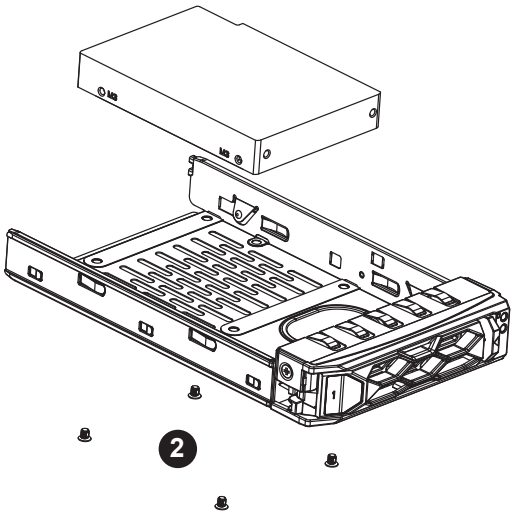

Figure 3-13. Installing a 2.5" Drive into a Carrier

Hot-Swap for NVMe Drives

Supermicro servers support NVMe surprise hot-swap. For even better data security, NVMe *orderly* hot-swap is recommended. NVMe drives can be ejected and replaced remotely using IPMI.

Ejecting a Drive

1. **IPMI > Storage > Physical View**
2. Select Device and click Eject. After ejecting, the drive Status LED indicator turns green.
3. Remove the drive.

Slot is the slot number on which the NVMe drives are mounted.

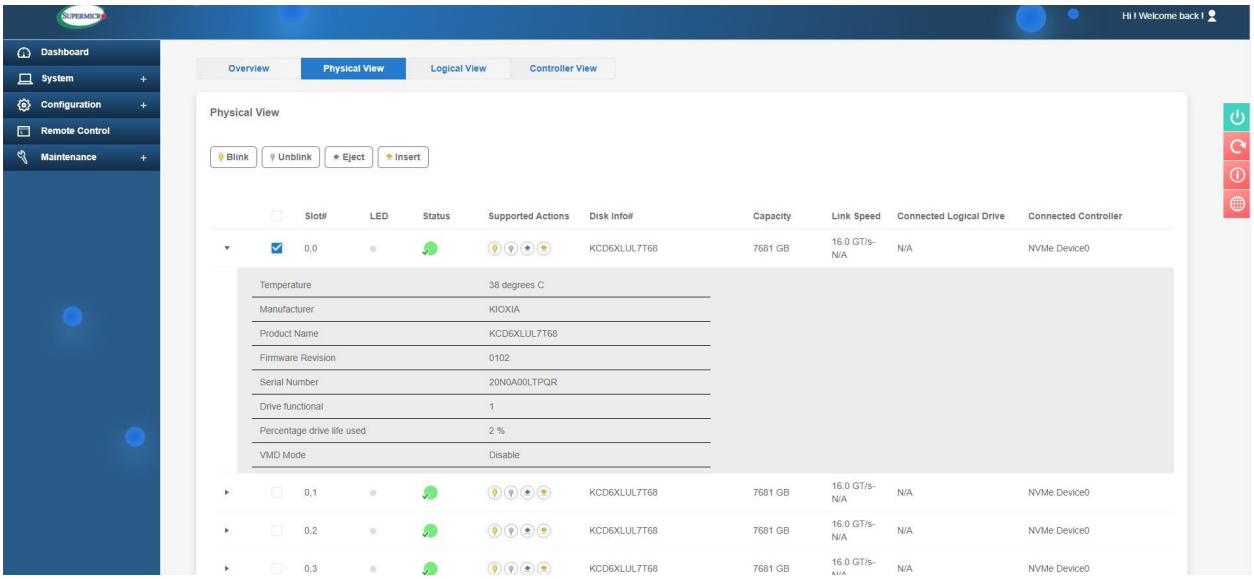

Figure 3-14. IPMI Screenshot

Replacing the Drive

1. Insert the replacement drive.
2. **IPMI > Storage > Physical View**
3. Select Device and click Insert. The drive Status LED indicator flashes red, then turns off. The Activity LED turns blue.

System Cooling

Three 8-cm fans provide the cooling for the system. Make sure the chassis top cover makes a good seal so the cooling air circulates properly through the chassis

Changing a System Fan

1. Determine which fan is failing. If possible, use the BMC. Remove the chassis lid to examine the fans.
2. Push the release latch, and lift the fan up from the housing and out of the chassis.
3. Push the fan up from the bottom and out of the top of the housing.
4. Place the replacement fan into the vacant space in the housing while checking the proper orientation. Push the until the latch clicks and the fan is secure.
5. Confirm the fans are working properly before closing the chassis lid.

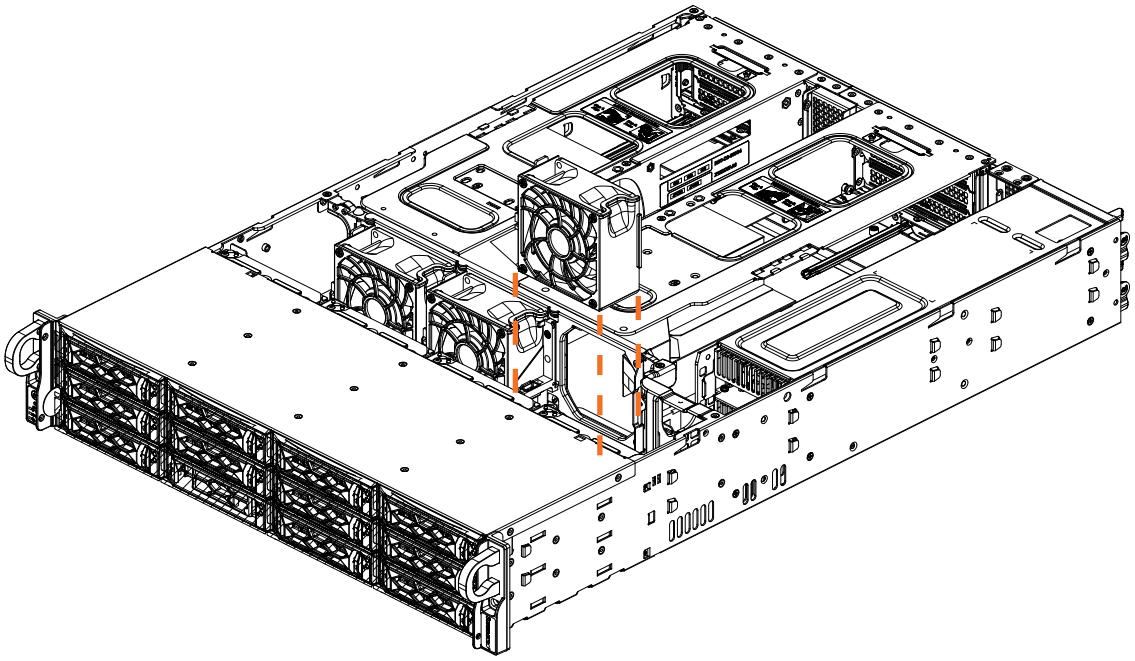

Figure 3-15. Replacing a Fan

Checking the Server Air Flow

- Make sure there are no objects to obstruct airflow in and out of the server.
- Do not operate the server without drives or drive trays in the drive bays.
- Use only recommended server parts.
- Make sure no wires or foreign objects obstruct air flow through the chassis. Pull all excess cabling out of the airflow path or use shorter cables.

The control panel LEDs display system heat status. See “Control Panel” in Chapter 1 for details.

Overheating

There are several possible responses if the system overheats.

Overheat Temperature Setting

Some backplanes allow the overheat temperature to be set at 45, 50, or 55 degrees by changing a jumper setting. For more information, consult the backplane user manual at www.supermicro.com. (Click Support, then the Manuals link.)

Responses

If the server overheats:

1. Use the LEDs to determine the nature of the overheating condition.
2. Confirm that the chassis covers are installed properly.
3. Make sure all fans are present and operating normally.
4. Check the routing of the cables.
5. Verify that the heatsinks are installed properly.

Power Supply

The chassis features redundant power supplies. The power modules can be changed without powering down the system. New units can be ordered directly from Supermicro or authorized distributors.

These power supplies are auto-switching capable. This feature enables them to automatically sense the input voltage and operate at a 100-120 V or 180-240 V.

Power Supply LEDs

On the rear of the power supply module, an LED displays the status.

- **Solid Green**: When illuminated, indicates that the power supply is on.
- **Blinking Green**: When blinking, indicates that the power supply is plugged in and turned off by the system.
- **Blinking Amber:** When blinking, indicates that the power supply has a warning condition and continues to operate.
- **Solid Amber**: When illuminated, indicates that the power supply is plugged in, and is in an abnormal state. The system might need service. Please contact Supermicro technical support.

Replacing the Power Supply

1. Unplug the AC cord from the module to be replaced.
2. Push the release tab on the back of the power supply as illustrated.
3. Pull the power supply out using the handle.
4. Replace the failed power module with the same model.
5. Push the new power supply module into the power bay until it clicks.
6. Plug the AC power cord back into the module.

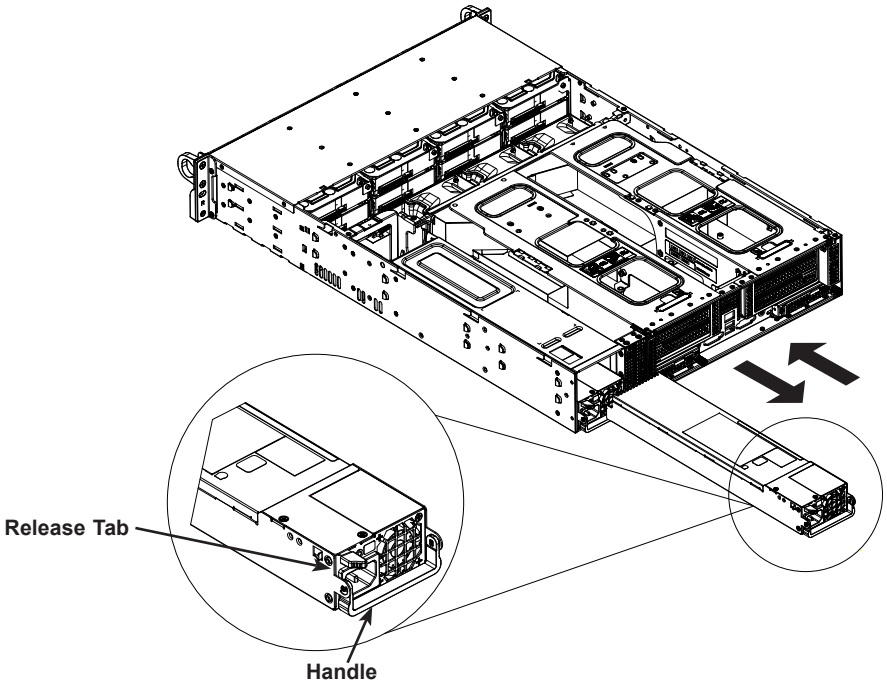

Figure 3-16. Installing/Removing a Power Supply Module

Chapter 4

Motherboard Connections

This section describes the connections on the motherboard and provides pinout definitions. Note that depending on how the system is configured, not all connections are required. The LEDs on the motherboard are also described here. A motherboard layout indicating component locations may be found in Chapter 1.

Please review the Safety Precautions in Appendix A before installing or removing components.

4.1 Power Connections

Power Connections

Power Connectors

JPWR1 is the 24-pin power connector for ATX power source. JPWR2 and JPWR3 are the 8-pin 12V DC power connectors that provide power to the CPU in conjunction with JPWR1 or they can be used as the sole 12V DC only power inputs when JPWR1 is not in use.

ATX Power 24-pin Connector Pin Definitions

Pin#	Definition	Pin#	Definition
13	+3.3V	1	+3.3V
14	-12V	2	+3.3V
15	Ground	3	Ground
16	PS_ON	4	+5V
17	Ground	5	Ground
18	Ground	6	+5V
19	Ground	7	Ground
20	Res (NC)	8	PWR_OK
21	+5V	9	5VSB
22	+5V	10	+12V
23	+5V	11	+12V
24	Ground	12	+3.3V

8-pin CPU Power Pin Definitions

Pin#	Definition
1-4	GND
5-8	12V

4.2 Headers and Connectors

Chassis Intrusion

A Chassis Intrusion header is located at JL1 on the motherboard. Attach the appropriate cable from the chassis to inform you of a chassis intrusion when the chassis is opened. Refer to the table below for pin definitions.

Chassis Intrusion Pin Definitions

Pin#	Definition
1	Intrusion Input
2	Ground

4-Pin External BMC I²C Header

A System Management Bus header for IPMI 2.0 is located at JIPMB1. Connect a cable to this header to use the IPMB I²C connection on your system. Refer to the table below for pin definitions.

External I²C Header Pin Definitions

Pin#	Definition
1	Data
2	Ground
3	Clock
4	No Connection

Fan Headers

There are six 4-pin fan headers (FAN1 - FAN6) on the motherboard. All these 4-pin fan headers are backwards compatible with the traditional 3-pin fans. However, fan speed control is available for 4-pin fans only by Thermal Management via the IPMI 2.0 interface. Refer to the table below for pin definitions.

Fan Header Pin Definitions

Pin#	Definition
1	Ground (Black)
2	2.5A/+12V (Red)
3	Tachometer
4	PWM_Control

Intel RAID Key Header

The JRK1 header allows you to enable RAID functions for NVMe connections. Refer to the table below for pin definitions.

Intel RAID Key Header Pin Definitions	
Pin#	**Definition**
1	GND
2	PU 3.3V Stdby
3	GND
4	PCH RAID KEY

M.2 Slots

This motherboard has two M.2 slots (JM2_1, JM2_2). M.2 was formerly known as Next Generation Form Factor (NGFF) and serves to replace mini PCIe. M.2 allows for a variety of card sizes, increased functionality, and spatial efficiency. The M.2 connectors on the motherboard supports PCIe 3.0 from PCH in the 2280 and 22110 form factors.

NC-SI Header for IPMI Support

A Network-Controller Sideband Interface (NC-SI) header is located at JNCSI1 on the motherboard. For remote management, connect the appropriate cable from this header to an add-on card to provide the out-of-band (sideband) connection between the onboard Baseboard Management Controller (BMC) and a Network Interface Controller (NIC). For the network sideband interface to work properly, you will need to use a NIC add-on card that supports NC-SI and also need to have a special cable. Please contact Supermicro at www.supermicro.com to purchase the cable for this header.

Note: For detailed instructions on how to configure Network Interface Card (NIC) settings, refer to the Network Interface Card Configuration User's Guide posted on the web page under the link: http://www.supermicro.com/manuals/.

Overheat/Fan Fail LED Header

The JOH1 header is used to connect an LED indicator to provide warnings of chassis overheating and fan failure. This LED will blink when a fan failure occurs. Refer to the tables below for pin definitions.

Overheat LED Header Status	
State	**Definition**
Solid	Overheat
Blinking	Fan Fail

Overheat LED Pin Definitions	
Pin#	**Signal**
1	Pull high to +3.3V power through 330-ohm resistor
2	OH Active

Power SMB (I²C) Header

Power System Management Bus (I²C) header at JPI²C1 monitors the power supply, fan and system temperatures. Refer to the table below for pin definitions.

Power SMB Header Pin Definitions

Pin#	Definition
1	Clock
2	Data
3	Power Fail
4	Ground
5	+3.3V

Standby Power

The Standby Power header is located at JSTBY1 on the motherboard. You must have a card with a Standby Power connector and a cable to use this feature. Refer to the table below for pin definitions.

Standby Power Pin Definitions

Pin#	Definition
1	+5V Standby
2	Ground
3	No Connection

TPM/Port 80 Header

A Trusted Platform Module (TPM)/Port 80 header is located at JTPM1 to provide TPM support and Port 80 connection. Use this header to enhance system performance and data security. Refer to the table below for pin definitions. Visit the following link for more information on the TPM: http://www.supermicro.com/manuals/other/TPM.pdf.

Trusted Platform Module Header Pin Definitions

Pin#	Definition	Pin#	Definition
1	+3.3V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	GND
7	SPI_MOSI	8	NC
9	+3.3V Stdby	10	SPI_IRQ#

4.3 Front Control Panel

JF1 contains header pins for various buttons and indicators that are normally located on a control panel at the front of the chassis. These connectors are designed specifically for use with a Supermicro chassis. See the figure below for the descriptions of the front control panel buttons and LED indicators.

Power Button

The Power Button connection is located on pins 1 and 2 of JF1. Momentarily contacting both pins will power on/off the system. This button can also be configured to function as a suspend button (with a setting in the BIOS - see Chapter 4). To turn off the power when the system is in suspend mode, press the button for 4 seconds or longer. Refer to the table below for pin definitions.

Power Button Pin Definitions (JF1)	
Pin#	**Definition**
1	Signal
2	Ground

Reset Button

The Reset Button connection is located on pins 3 and 4 of JF1. Attach it to a hardware reset switch on the computer case to reset the system. Refer to the table below for pin definitions.

Reset Button Pin Definitions (JF1)	
Pin#	**Definition**
3	Reset
4	Ground

Power Fail

The Power Fail LED connection is located at pins 5 and 6. Refer to the table below for pin definitions.

Power Fail LED Pin Definitions (JF1)	
Pin#	**Definition**
5	3.3V
6	Power Fail LED

Information LED (OH/Fan Fail/PWR Fail/UID LED)

The Information LED (OH/Fan Fail/PWR Fail/UID LED) connection is located on pins 7 and 8 of JF1. The LED on pin 7 is active when the UID switch on the rear I/O panel is pressed. The LED on pin 8 provides warnings of overheat, power failure, or fan failure. Refer to the table below for more information.

Information LED-UID/OH/PWR Fail/Fan Fail LED Pin Definitions (JF1)	
Status	**Description**
Solid Red	An overheat condition has occured. This may be caused by cable congestion.
Blinking Red (1Hz)	Fan failure: check for an inoperative fan.
Blinking Red (0.25Hz)	Power failure: check for a non-operational power supply.
Solid Blue	Local UID is activated. Use this function to locate a unit in a rack mount environment that might be need of service.
Blinking Blue (300msec)	Remote UID is on. Use this function to identify a unit from a remote location that might be in need of service.

NIC1/NIC2 (LAN1/LAN2)

The Network Interface Controller (NIC) LED connection for LAN port 1 is located on pins 11 and 12 of JF1, and LAN port 2 is on pins 9 and 10. Attach the NIC LED cables here to display network activity. Refer to the table below for pin definitions.

NIC1/NIC2 LED Pin Definitions (JF1)	
Pin#	**Definition**
9	NIC 2 Activity LED
11	NIC 1 Activity LED

HDD LED

The HDD LED connection is located on pins 13 and 14 of JF1. Attach a cable to pin 14 to show hard drive activity status. Refer to the table below for pin definitions.

HDD LED Pin Definitions (JF1)

Pins	Definition
13	3.3V Stdby
14	HDD Active

Power LED

The Power LED connection is located on pins 15 and 16 of JF1. Refer to the table below for pin definitions.

Power LED Pin Definitions (JF1)

Pins	Definition
15	+3.3V Stby
16	PWR LED

NMI Button

The non-maskable interrupt button header is located on pins 19 and 20 of JF1. Refer to the table below for pin definitions.

NMI Button Pin Definitions (JF1)

Pins	Definition
19	Control
20	Ground

4.4 Ports

Rear I/O Ports

See the figure below for the locations and descriptions of the various I/O ports on the rear of the motherboard.

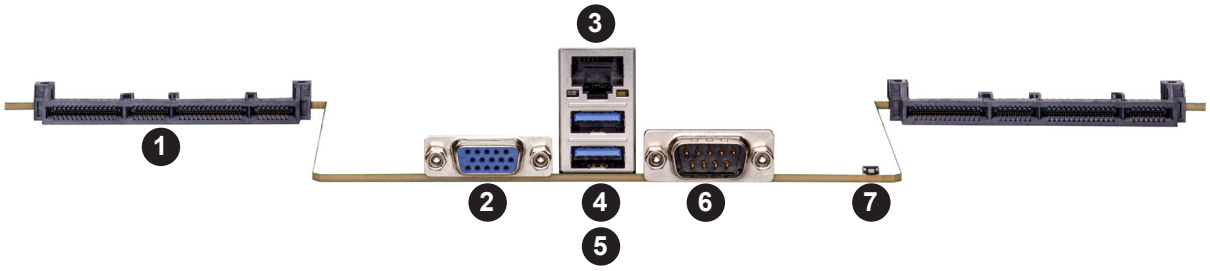

Figure 4-1. Rear I/O Ports

Rear I/O Ports			
#	**Description**	**#**	**Description**
1	AIOM2	5	USB3
2	VGA	6	COM1
3	BMC LAN	7	UID Switch
4	USB2	8	AIOM1

AIOM1 – AIOM2

Supermicro introduces the Advanced I/O Module (AIOM), the latest expansion card feature offering PCIe 5.0 lanes in each slot which can be utilized to offer additional LAN ports, VPU, storage devices, etc. on the motherboard. Visit the Supermicro website for all available module options. Keep in mind that it is mandatory that power be unplugged prior to removing or installing an AIOM module card to either one of these two expansion slots.

COM Port

The motherboard has one COM port. COM1 is located next to JUSBRJ45.

COM Port Pin Definitions			
Pin#	**Definition**	**Pin#**	**Definition**
1	SP_DCDA	6	SP_DSRA
2	SP_RXDA	7	SP_RTSA
3	SP_TXDA	8	CTS
4	SP_DTRA	9	SP_RIA
5	GND	10	NC

LAN Port

The motherboard has one dedicated BMC LAN port. It is located next to the VGA port and above USB2/3 ports on the back panel. It can accept RJ45 cables. Refer to the LED indicator section for LAN LED information.

Universal Serial Bus (USB) Ports

The motherboard has two USB 2.0 headers on the motherboard (USB0/1), and two USB 3.2 Gen 1 ports on the I/O back panel (USB2/3). The onboard headers can be used to provide front side USB access with a cable (not included).

Front Panel USB0/1 (2.0) Headers Pin Definitions

Pin#	Definition	Pin#	Definition
1	+5V	2	+5V
3	USB_N	4	USB_N
5	USB_P	6	USB_P
7	Ground	8	Ground
9	Key	10	NC

Back Panel USB2/3 (USB 3.2 Gen 1) Pin Definitions

Pin#	Definition	Pin#	Definition
A1	VBUS	B1	VBUS
A2	USB_N	B2	USB_N
A3	USB_P	B3	USB_P
A4	GND	B4	GND
A5	Stda_SSRX-	B5	Stda_SSRX-
A6	Stda_SSRX+	B6	Stda_SSRX+
A7	GND	B7	GND
A8	Stda_SSTX-	B8	Stda_SSTX-
A9	Stda_SSTX+	B9	Stda_SSTX+

VGA Port

A video (VGA) port is located on the I/O back panel.

Unit Identifier Switch (UID-SW): One button with two functions

A Unit Identifier (UID) switch and two LED Indicators are located on the motherboard. The UID switch is located next to the VGA port on the back panel.

Function	User Input	Behavior	LED Activity
UID LED Indicator	Push Once	Turns on the UID LED	UID LED turns solid blue
	Push Again	Turns off the UID LED	UID LED turns off
BMC Reset	Push and hold for 6 seconds	BMC will do a cold boot	BMC Hearbeat LED turns solid green
	Push and hold for 12 seconds	BMC will reset to factory default	BMC Hearbeat LED turns solid green

Note: After pushing and holding the UID-SW for 12 seconds, all BMC settings including username and password will revert back to the factory default. Only the network settings and FRU are retained.

UID Switch Pin Definitions

Pin#	Definition
1	Button In
2	Ground
G1	Ground
G2	Ground

UID LED Pin Definitions

Color	Status
Blue: On	Unit Identified

4.5 Jumpers

Explanation of Jumpers

To modify the operation of the motherboard, jumpers are used to choose between optional settings. Jumpers create shorts between two pins to change the function associated with it. Pin 1 is identified with a square solder pad on the printed circuit board. See the motherboard layout page for jumper locations.

Note: On a two-pin jumper, "Closed" means the jumper is on both pins and "Open" indicates the jumper is either on only one pin or has been completely removed.

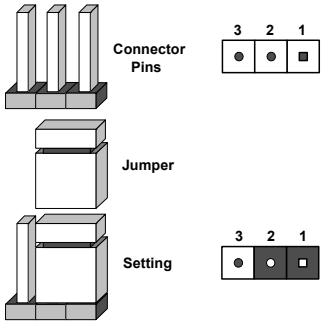

CMOS Clear

JBT1 is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

To Clear CMOS

1. First power down the system and unplug the power cord(s).
2. Remove the cover of the chassis to access the motherboard.
3. Remove the onboard battery from the motherboard.
4. Short the CMOS pads with a metal object such as a small screwdriver for at least four seconds.
5. Remove the screwdriver (or shorting device).
6. Replace the cover, reconnect the power cord(s) and power on the system.

Notes: Clearing CMOS will also clear all passwords.

Do not use the PW_ON connector to clear CMOS.

Front Control Board Signal Reset

Jumper JRU1 is used to configure the signal settings for the Front Control Board (JFP1). Close pins 1 and 2 to reset the Front Control Board signals for UID use. Close pins 2 and 3 to configure JFP1 signals for reset use. The default setting is on pins 1-2 to reset JFP1 for power button use. Refer to the table below for jumper settings.

Front Control Board Signal Reset Jumper (JRU1) Jumper Settings	
Jumper Setting	**Definition**
Pins 1-2	Configure JFP1 Signals for UID (Default)
Pins 2-3	Configure JFP1 Signals for Reset

VGA Enable/Disable

JPG1 allows you to enable or disable the VGA port using the onboard graphics controller.

VGA Enable/Disable Jumper Settings	
Jumper Setting	**Definition**
Pins 1-2	Enabled
Pins 2-3	Disabled

Backplane SGPIO Jumper Settings

The JP1 jumper on the backplane controls the SGPIO signal model. Refer to the table below for jumper settings.

Backplane SGPIO Jumper Settings	
Jumper Setting	**Definition**
Pins 1-2	x4 + x4 SAS AOC/RAID
Pins 2-3	x8 Onboard SATA (Default)

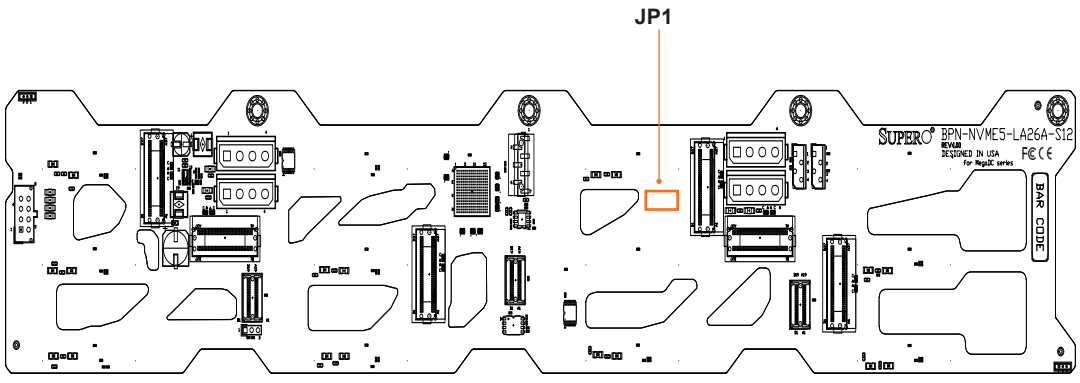

4.6 LED Indicators

BMC Heartbeat LED

A BMC Heartbeat LED is located at LED1 on the motherboard. When LED1 is blinking, the BMC is functioning normally. Refer to the table below for more information.

BMC Heartbeat LED Indicator	
LED Color	**Definition**
Green: Blinking	BMC Normal

Onboard Power LED

LE1 is the onboard Power LED. When this LED is on, the system is on. Turn off the system and unplug the power cord before removing or installing components. Refer to the table below for more information.

Onboard Power LED Indicator	
LED Color	**Definition**
Off	System Off (power cable not connected)
Green	System On

Chapter 5

Software

After the hardware has been installed, you can install the Operating System (OS), configure RAID settings and install the drivers.

5.1 Microsoft Windows OS Installation

If you will be using RAID, you must configure RAID settings before installing the Windows OS and the RAID driver. Refer to the RAID Configuration User Guides posted on our website at www.supermicro.com/support/manuals.

Installing the OS

1. Create a method to access the Microsoft Windows installation ISO file. That can be a USB flash or media drive, or the BMC KVM console.
2. Go to the Supermicro web page for your motherboard and click on "Download the Latest Drivers and Utilities", select the proper driver, and copy it to a USB flash drive.
3. Boot from a bootable device with Windows OS installation. You can see a bootable device list by pressing **[F11]** during the system startup.

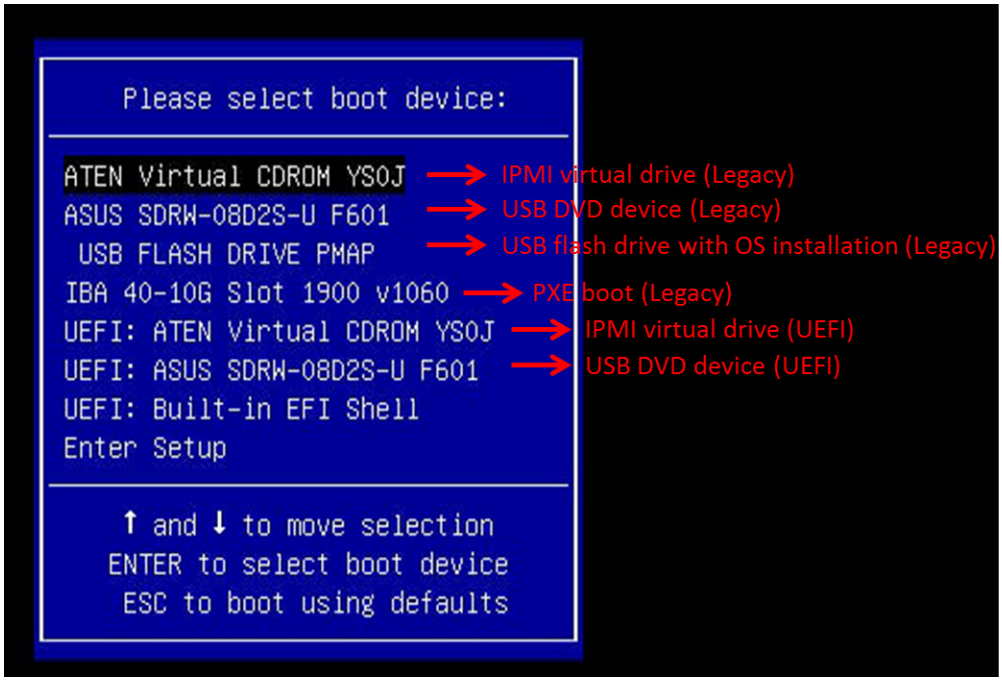

Figure 5-1. Select Boot Device

4. During Windows Setup, continue to the dialog where you select the drives on which to install Windows. If the disk you want to use is not listed, click on “Load driver” link at the bottom left corner.

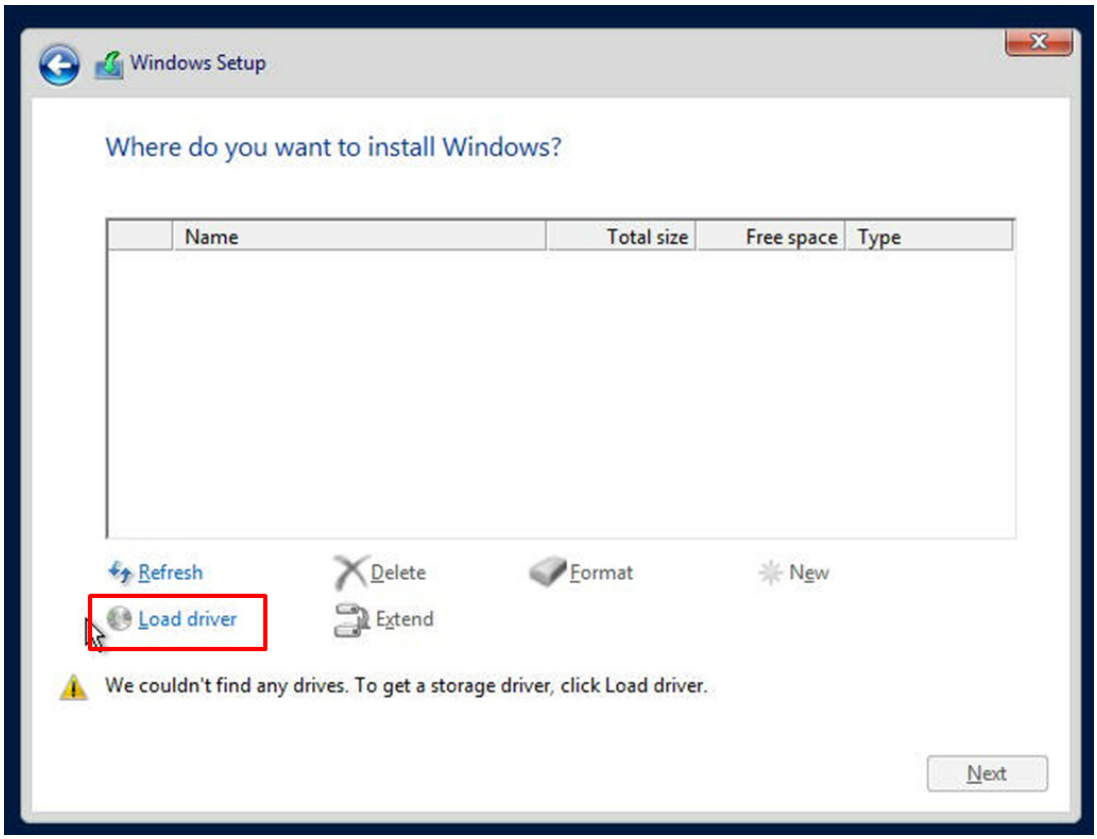

Figure 5-2. Load Driver Link

To load the driver, browse the USB flash drive for the proper driver files.

- For RAID, choose the SATA/sSATA RAID driver indicated then choose the storage drive on which you want to install it.
- For non-RAID, choose the SATA/sSATA AHCI driver indicated then choose the storage drive on which you want to install it.

5. Once all devices are specified, continue with the installation.
6. After the Windows OS installation has completed, the system will automatically reboot multiple times.

5.2 Driver Installation

The Supermicro website contains drivers and utilities for your system at https://www.supermicro.com/wdl/. Some of these must be installed, such as the chipset driver.

After accessing the website, go into the CDR_Images (in the parent directory of the above link) and locate the ISO file for your motherboard. Download this file to a USB flash or media drive. (You may also use a utility to extract the ISO file if preferred.)

Another option is to go to the Supermicro website at http://www.supermicro.com/products/. Find the product page for your motherboard, and "Download the Latest Drivers and Utilities".

Insert the flash drive or disk and the screenshot shown below should appear.

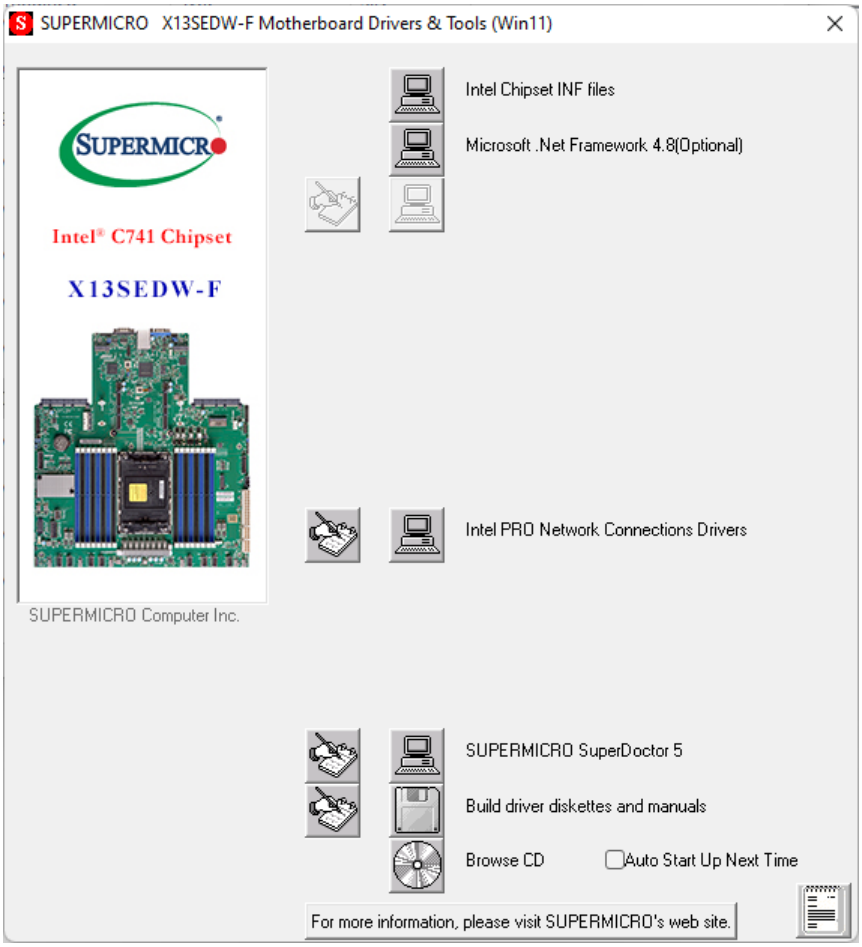

Figure 5-3. Driver & Tool Installation Screen

Note: Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to the bottom) one at a time. **After installing each item, you must re-boot the system before moving on to the next item on the list.** The bottom icon with a CD on it allows you to view the entire contents.

5.3 SuperDoctor® 5

The Supermicro SuperDoctor 5 is a program that functions in a command-line or web-based interface for Windows and Linux operating systems. The program monitors such system health information as CPU temperature, system voltages, system power consumption, fan speed, and provides alerts via email or Simple Network Management Protocol (SNMP).

SuperDoctor 5 comes in local and remote management versions and can be used with Nagios to maximize your system monitoring needs. With SuperDoctor 5 Management Server (SSM Server), you can remotely control power on/off and reset chassis intrusion for multiple systems with SuperDoctor 5 or IPMI. SuperDoctor 5 Management Server monitors HTTP, FTP, and SMTP services to optimize the efficiency of your operation.

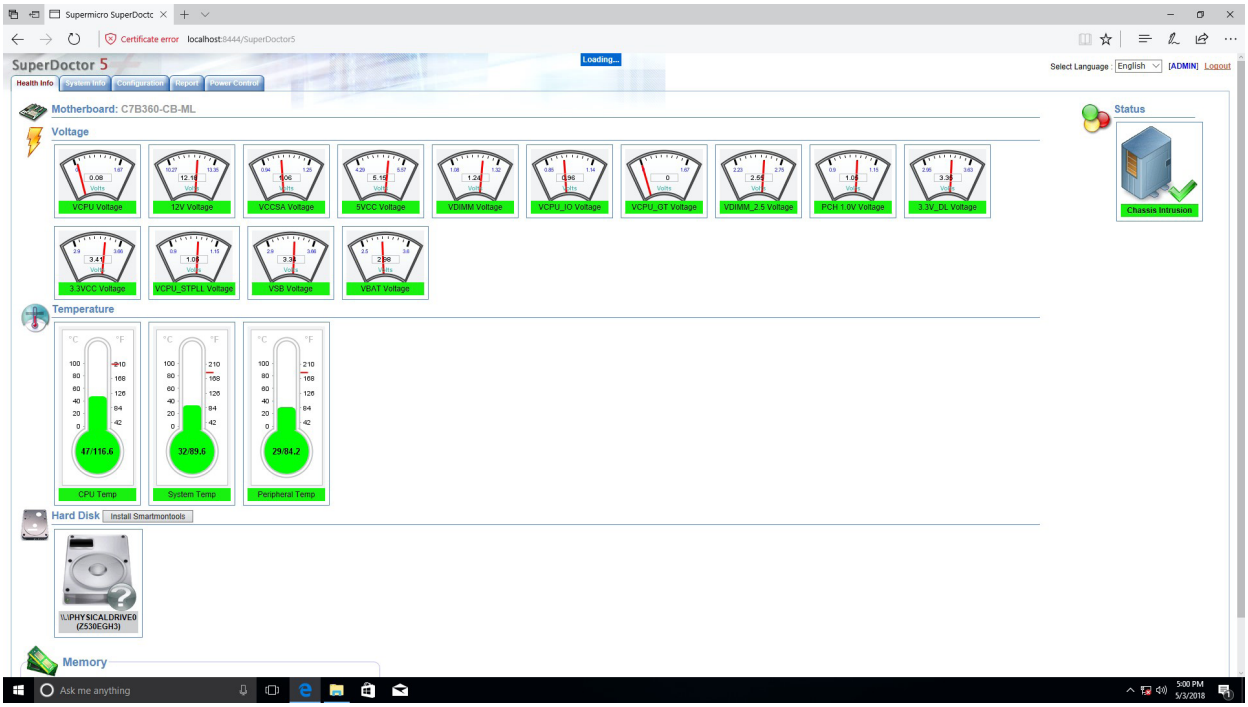

Figure 5-4. SuperDoctor 5 Interface Display Screen (Health Information)

5.4 BMC

The motherboard provides remote access, monitoring and management through the baseboard management controller (BMC) and other management controllers distributed among different system modules. There are several BIOS settings that are related to BMC. For general documentation and information on BMC, visit our website at:

www.supermicro.com/en/solutions/management-software/bmc-resources

BMC ADMIN User Password

For security, each system is assigned a unique default BMC password for the ADMIN user. This can be found on a sticker on the chassis and a sticker on the motherboard. The sticker also displays the BMC MAC address.

Figure 5-5. BMC Password Label

Chapter 6

Optional Components

This chapter describes optional system components and installation procedures.

6.1 Optional Parts List

Optional Parts List
Description
Intel VROC RAID Key
TPM security module

6.2 TPM Security Module

SPI capable TPM 2.0 (AOM-TPM-9670V) with Infineon 9670 controller, vertical form factor The JTPM1 header is used to connect a Trusted Platform Module (TPM). A TPM is a security device that supports encryption and authentication in hard drives. It enables the motherboard to deny access if the TPM associated with the hard drive is not installed in the system.

Details and installation procedures are at:

https://www.supermicro.com/manuals/other/TPM.pdf

6.3 Intel Virtual RAID on CPU (VROC)

Intel® Virtual RAID on CPU (Intel VROC) is an enterprise RAID solution for NVMe SSDs directly attached to Intel Xeon Scalable processors. Intel Volume Management Device (VMD) is an integrated controller inside the CPU PCIe root complex.

- A single processor supports up to 12 NVMe SSDs and up to 6 RAID arrays.
- A dual processor system supports up to 24 NVMe SSDs and 12 RAID arrays.

Strip sizes are 4K, 8K, 16K, 32K, 64K, 128K.

Requirements and Restrictions

- **Intel VROC is only available when the system is configured for UEFI boot mode.**
- To enable the **mdadm** command and support for RSTe, install the patch from
  - Linux: https://downloadcenter.intel.com/download/28158/Intel-Virtual-RAID-on-CPU-Intel-VROC-and-Intel-Rapid-Storage-Technology-enterprise-Intel-RSTe-Driver-for-Linux-
  - Windows: https://downloadcenter.intel.com/download/28108/Intel-Virtual-RAID-on-CPU-Intel-VROC-and-Intel-Rapid-Storage-Technology-enterprise-Intel-RSTe-Driver-for-Windows-
- To enable Intel VROC, a hardware key must be inserted on the motherboard, and the appropriate processor's Virtual Management Devices must be enabled in the BIOS setup.
- It is possible to enable Intel VROC without a hardware key installed, but only RAID0 will be enabled.
- Intel VROC is not compatible with secure boot. This feature must be disabled.
- When creating bootable OS RAID1 devices, you must have both devices on the same CPU, and a VMD on that CPU.
- Spanning drives when creating RAID devices is not recommended to due to performance issues, even though it is supported.

Supported SSDs and Operating Systems

To see the latest support information: https://www.intel.com/content/www/us/en/support/articles/000030310/memory-and-storage/ssd-software.html

Additional Information

Additional information is available on the product page for the Supermicro add-on card and the linked manuals.

www.supermicro.com/products/accessories/addon/AOC-VROCxxxMOD.cfm

Hardware Key

The Intel VROC hardware key is a license key that detects the Intel VROC SKU and activates the function accordingly. The key must be plugged into the Supermicro motherboard (connector JRK1). The key options are:

Intel® VROC Keys			
VROC Package	**Description**	**Part Number**	**Intel MM Number**
Standard	RAID 0, 1, 10 Supports 3rd party SSDs	AOC-VROCSTNMOD	951605
Premium	RAID 0, 1, 5, 10 Supports 3rd party SSDs	AOC-VROCPREMOD	951606
Intel SSD only	RAID 0, 1, 5, 10 Supports Intel SSDs only	AOC-VROCINTMOD	956822

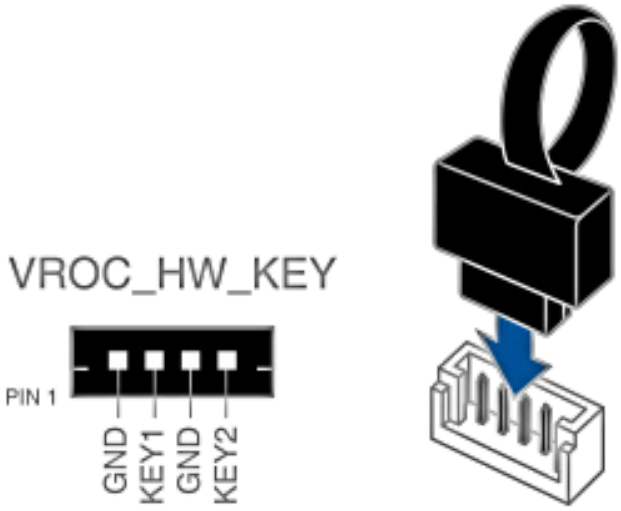

Figure 6-1. Intel® VROC RAID Key and Motherboard Connector JRK1

Configuring NVMe RAID Manually

RAID for NVMe SSDs is enabled by default when the Intel VROC Raid Key is populated. It may be managed manually through the UEFI BIOS.

1. Install the patch as described in the Restrictions and Requirements section on a previous page.
2. Reboot the server.
3. Press [DEL] key to enter BIOS.
4. Switch to **Advanced > Chipset Configuration > North Bridge > IIO Configuration > Intel® VMD Technology**. Here, you can select a mode. The default is Auto. The VMD switch enables VMD mode for all VROC keys. The Manual switch allows the user to choose devices on which to enable VMD.

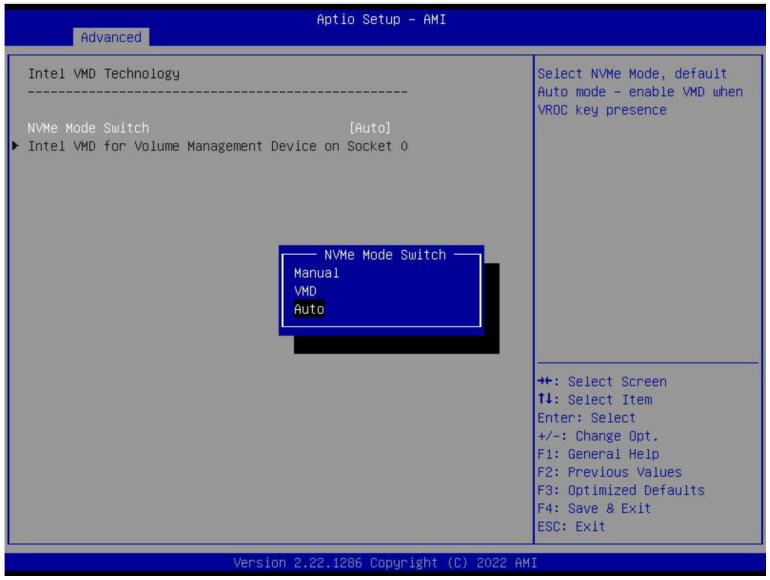

Figure 6-2. Selecting the Mode

5. Select the desired PCIe slot to Enable or Disable Intel VMD functionality according to the current hardware configuration being used. Hot Plug Capability can also be Enabled or Disabled.

   The onboard M.2 NVMe from PCH is located in the PCH ports section. The screenshot below show example choices in Manual mode.

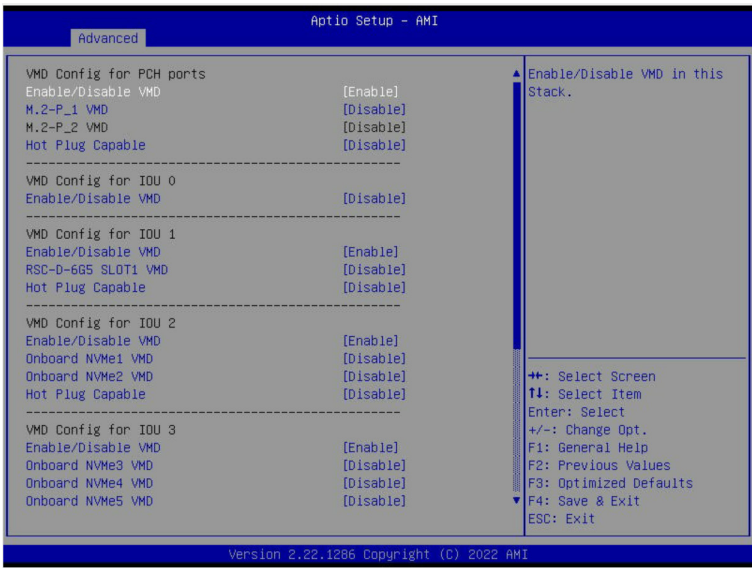

Figure 6-3. Manual Mode Choices

6. Press [F4] to save the configuration and reboot the system.
7. Press [DEL] to enter BIOS.
8. Switch to **Advanced > Intel(R) Virtual RAID on CPU > All Intel VMD Controllers > Create RAID Volume**.
9. Set **Name**.
10. Set **RAID Level**.
11. Select **Strip Size** (Default 64KB).
12. Select **Create Volume**.

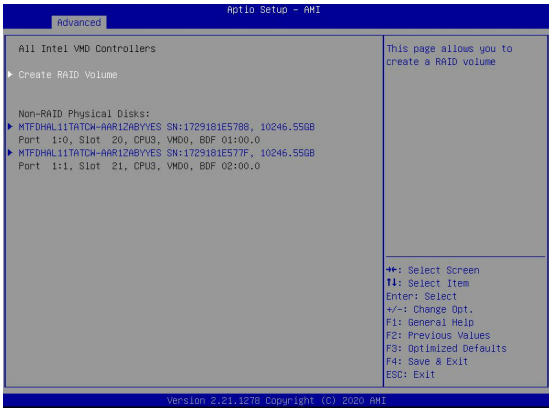

13. If another RAID is needed, start again at step 6.
14. Press [F4] to save and reboot.
15. If cross-controller RAID is required, select **Enable RAID spanned over VMD Controller**.
16. Select specific disks for RAID with an [X].
    - RAID0: Select at least two [2 - 24] disks
    - RAID1: Select only two disks
    - RAID5: Select at least three [3 - 24] disks
    - RAID10: Select only four disks

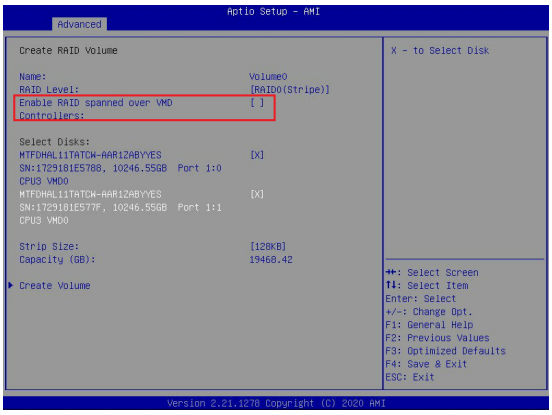

Figure 6-4. Created Volume *without* enabling RAID spanned over VMD Controller

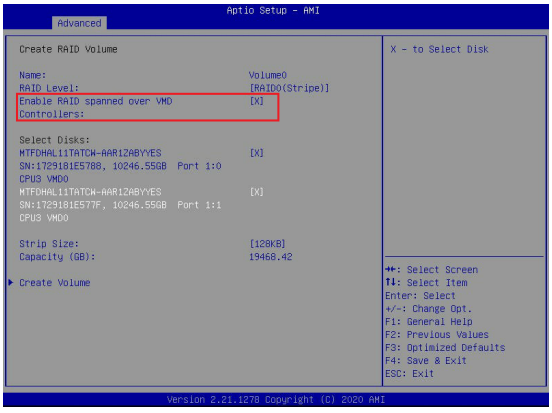

Figure 6-5. Created Volume *with* enabling RAID spanned over VMD Controller

Status Indications

An LED indicator on the drive carrier shows the RAID status of the drive.

Drive Carrier Status LED Indicator	
Status	**State (red)**
Normal function	Off
Locating	4 Hz blink
Fault	Solid on
Rebuilding	1 Hz Blink

IBPI SFF 8489 Defined Status LED States

Hot Swap Drives

Intel VMD enables hot-plug and hot-unplug for NVMe SSDs, whether from Intel or other manufacturers. Under vSphere ESXi, several steps are necessary to avoid potential stability issues. See the information at link [1] below.

Hot-unplug

1. Prevent devices from being re-detected during rescan:

```
esxcli storage core claiming autoclaim --enabled=false
```

2. Unmount the VMFS volumes on the device. Check [2] for details.
3. Detach the device. Check [3] for details.
4. Physically remove the device.

Hot-plug

- Physically install the device.

ESXi will automatically discover NVMe SSDs, but a manual scan may be required in some cases.

Related Information Links

[1] https://kb.vmware.com/s/article/2151404

[2] https://docs.vmware.com/en/VMware-vSphere/6.5/com.vmware.vsphere.storage.doc/GUID-1B56EF97-F60E-4F21-82A7-8F2A7294604D.html

[3] https://docs.vmware.com/en/VMware-vSphere/6.5/com.vmware.vsphere.storage.doc/GUID-F2E75F67-740B-4406-9F0C-A2D99A698F2A.html

Chapter 7

Troubleshooting and Support

7.1 Information Resources

Website

A great deal of information is available on the Supermicro website, supermicro.com.

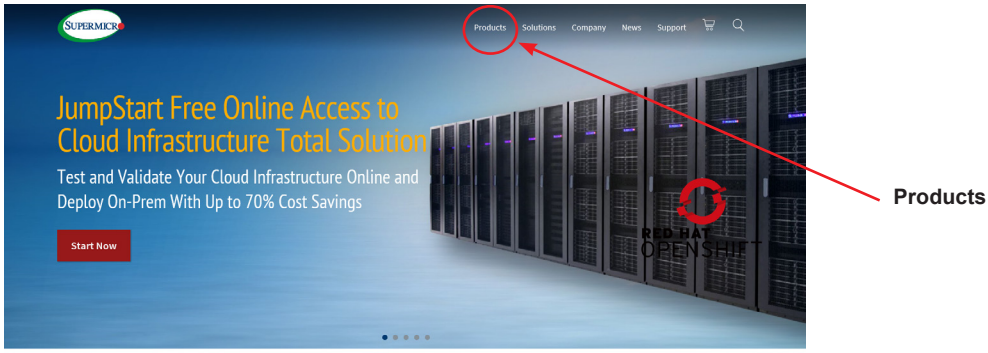

Figure 7-1. Supermicro Website

- Specifications for servers and other hardware are available by clicking the menu icon, then selecting the **Products** option.
- The **Support** option offers downloads (manuals, BIOS/BMC, drivers, etc.), FAQs, RMA, warranty, and other service extensions.

Direct Links for the SYS-521C-NR System

Web specifications pages for SYS-521C-NR

X13SEDW-F motherboard page for links to the Quick Reference Guide, User Manual, validated storage drives, etc.

Direct Links for General Support and Information

Frequently Asked Questions

Add-on card descriptions

TPM User Guide

General Memory Configuration Guide: X13

BMC User Guide

SuperDoctor5 Large Deployment Guide

Direct Links (continued)

For validated memory, use our Product Resources page

Product Matrices page for links to tables summarizing specs for systems, motherboards, power supplies, riser cards, add-on cards, etc.

Security Center for recent security notices

Supermicro Phone and Addresses

7.2 BMC Interface

The system supports a Baseboard Management Controller (BMC) interface. It provides remote access, monitoring and management. There are several BIOS settings related to the BMC.

For general documentation and information on the BMC, please visit our website at: www.supermicro.com/manuals/other/BMC_Users_Guide_X12_H12.pdf.

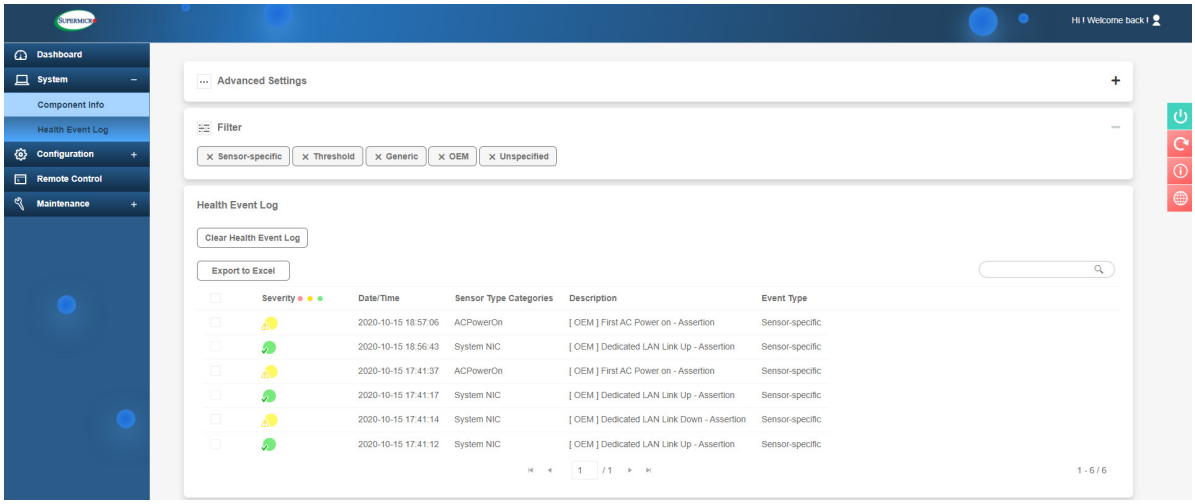

Figure 7-2. BMC Sample

7.3 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the Technical Support Procedures or Returning Merchandise for Service section(s) in this chapter. Power down the system before changing any non hot-swap hardware components.

General Technique

If you experience unstable operation or get no boot response, try:

1. With power off, remove all but one DIMM and other added components, such as add-on cards, from the motherboard. Make sure the motherboard is not shorted to the chassis.
2. Set all jumpers to their default positions.
3. Power up. If the system boots, check for memory errors and add-on card problems.

No Power

- Check that the power LED on the motherboard is on.

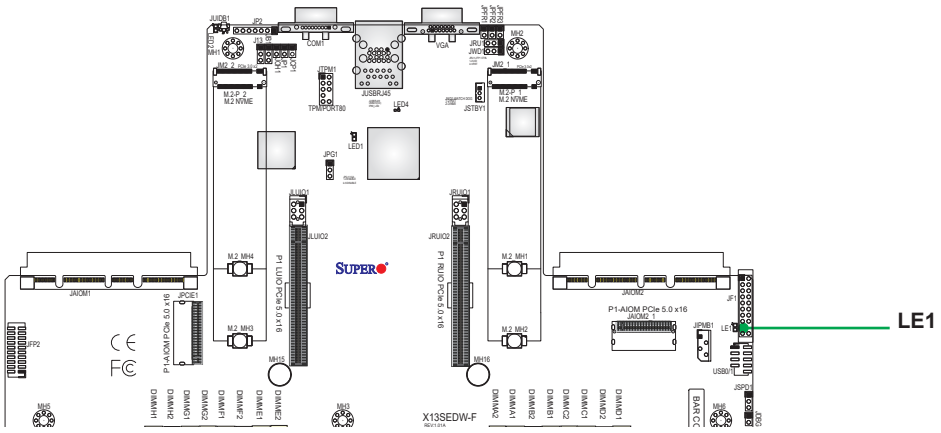

Figure 7-3. Location of the MB Power LED

- Make sure that the power connector is connected to the power supply.
- Check that the motherboard battery still supplies approximately 3 VDC. If it does not, replace it.
- Check that the system input voltage is 100-120 V or 180-240 V.
- Turn the power switch on and off to test the system.

No Video

If the power is on but you have no video, remove all add-on cards and cables.

System Boot Failure

If the system does not display Power-On-Self-Test (POST) or does not respond after the power is turned on, try the following:

- Turn on the system with only one DIMM module installed. If the system boots, check for bad DIMM modules or slots by following the Memory Errors Troubleshooting procedure below.

Memory Errors

- Make sure that the DIMM modules are properly and fully installed.
- Confirm that you are using the correct memory. Also, it is recommended that you use the same memory type and speed for all DIMMs in the system. See Memory Support in Chapter 3 for memory details.
- Check for bad DIMM modules or slots by swapping modules between slots and noting the results.

Losing the System Setup Configuration

- Always replace power supplies with the exact same model that came with the system. A poor quality power supply may cause the system to lose the CMOS setup configuration.
- Check that the motherboard battery still supplies approximately 3 VDC. If it does not, replace it.

If the above steps do not fix the setup configuration problem, contact your vendor for repairs.

When the System Becomes Unstable

If the system becomes unstable during or after OS installation, check the following:

- CPU/BIOS support: Make sure that your CPU is supported and that you have the latest BIOS installed in your system.
- Memory: Make sure that the memory modules are supported. Refer to the product page on our website at www.supermicro.com. Test the modules using **memtest86** or a similar utility.
- Storage drives: Make sure that all drives work properly. Replace if necessary.

- System cooling: Check that all heatsink fans and system fans work properly. Check the hardware monitoring settings in the BMC to make sure that the CPU and system temperatures are within the normal range. Also check the Control panel Overheat LED.
- Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Refer to the Supermicro website for the minimum power requirements.
- Proper software support: Make sure that the correct drivers are used.

If the system becomes unstable before or during OS installation, check the following:

- Source of installation: Make sure that the devices used for installation are working properly, including boot devices.
- Cable connection: Check to make sure that all cables are connected and working properly.
- Use the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with a CPU and a memory module installed) to identify the trouble areas.
- Identify a bad component by isolating it. Check and change one component at a time.
  - Remove a component in question from the chassis, and test it in isolation. Replace it if necessary.
  - Or swap in a new component for the suspect one.
  - Or install the possibly defective component into a known good system. If the new system works, the component is likely not the cause or the problem.

7.4 Crash Dump Using the BMC Dashboard

In the event of a processor internal error (IERR) that crashes your system, you may want to provide information to support staff. You can download a crash dump of status information using the BMC Dashboard. The BMC manual is available at www.supermicro.com/manuals/other/BMC_Users_Guide_X12_H12.pdf.

Check Error Log

1. Access the BMC web interface.
2. Click the **Server Health** tab, then **Event Log** to verify an IERR error.

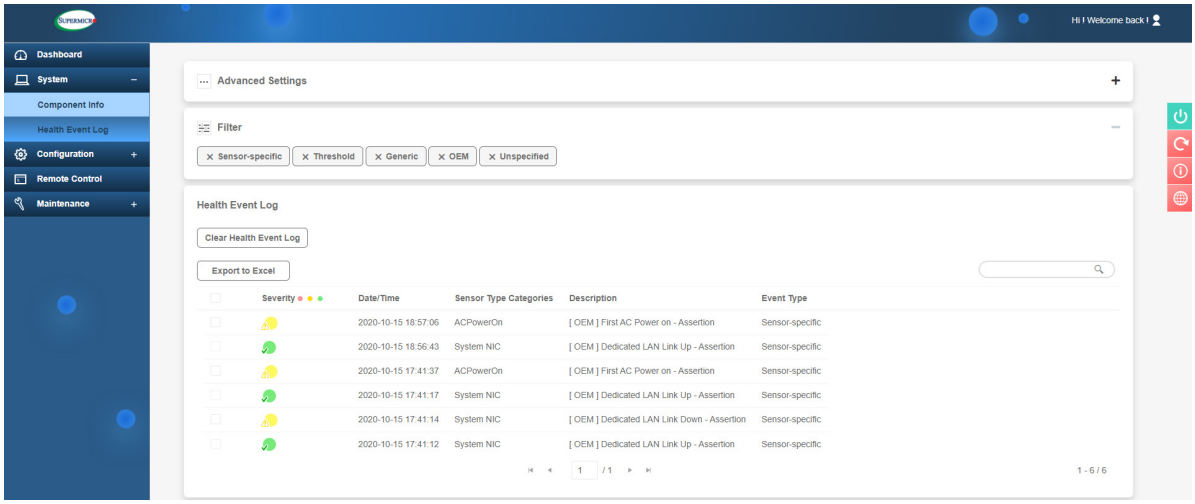

Figure 7-3. BMC Event Log

In the event of an IERR, the BMC executes a crash dump. You must download the crash dump and save it.

7.5 CMOS Clear

JBT1 is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

To Clear CMOS

1. First power down the system completely.
2. Remove the cover of the chassis to access the motherboard.
3. Remove the onboard battery from the motherboard.
4. Short the CMOS pads with a metal object such as a small screwdriver for at least four seconds.

JBT1 contact pads

5. Remove the screwdriver or shorting device.
6. Replace the cover, reconnect the power cords and power on the system.

Notes: Clearing CMOS will also clear all passwords.

Do not use the PW_ON connector to clear CMOS.

7.6 Where to Get Replacement Components

If you need replacement parts for your system, to ensure the highest level of professional service and technical support, purchase exclusively from our Supermicro Authorized Distributors/System Integrators/Resellers. A list can be found at: http://www.supermicro.com. Click the "Where to Buy" tab.

7.7 Reporting an Issue

Technical Support Procedures

Before contacting Technical Support, please take the following steps. If your system was purchased through a distributor or reseller, please contact them for troubleshooting services. They have the best knowledge of your specific system configuration.

1. Please review the Troubleshooting Procedures in this manual and Frequently Asked Questions on our website before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website. **Note**: Not all BIOS can be flashed depending on the modifications to the boot block code.
3. If you still cannot resolve the problem, include the following information when contacting us for technical support:
   - System, motherboard, and chassis model numbers and PCB revision number
   - BIOS release date/version (this can be seen on the initial display when your system first boots up)
   - System configuration

An example of a Technical Support form is posted on our website. Distributors: For immediate assistance, please have your account number ready when contacting our technical support department by email.

Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

For faster service, RMA authorizations may be requested online (http://www.supermicro.com/support/rma/).

Whenever possible, repack the chassis in the original Supermicro carton, using the original packaging material. If these are no longer available, be sure to pack the chassis securely, using packaging material to surround the chassis so that it does not shift within the carton and become damaged during shipping.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alteration, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

Vendor Support Filing System

For issues related to Intel, use the Intel IPS filing system:

https://www.intel.com/content/www/us/en/design/support/ips/training/welcome.html

For issues related to Red Hat Enterprise Linux, since it is a subscription based OS, contact your account representative.

7.8 Feedback

Supermicro values your feedback as we strive to improve our customer experience in all facets of our business. To provide feedback on our manuals, please email us at techwriterteam@supermicro.com.

7.9 Contacting Supermicro

Headquarters

Address: Super Micro Computer, Inc.
980 Rock Ave.
San Jose, CA 95131 U.S.A.
Tel: +1 (408) 503-8000
Fax: +1 (408) 503-8008
Email: marketing@supermicro.com (General Information)
Sales-USA@supermicro.com (Sales Inquiries)
Government_Sales-USA@supermicro.com (Gov. Sales Inquiries)
support@supermicro.com (Technical Support)
RMA@supermicro.com (RMA Support)
Webmaster@supermicro.com (Webmaster)
Website: www.supermicro.com

Europe

Address: Super Micro Computer B.V.
Het Sterrenbeeld 28, 5215 ML
's-Hertogenbosch, The Netherlands
Tel: +31 (0) 73-6400390
Fax: +31 (0) 73-6416525
Email: Sales_Europe@supermicro.com (Sales Inquiries)
Support_Europe@supermicro.com (Technical Support)
RMA_Europe@supermicro.com (RMA Support)
Website: www.supermicro.nl

Asia-Pacific

Address: Super Micro Computer, Inc.
3F, No. 150, Jian 1st Rd.
Zhonghe Dist., New Taipei City 235
Taiwan (R.O.C)
Tel: +886-(2) 8226-3990
Fax: +886-(2) 8226-3992
Email: Sales-Asia@supermicro.com.tw (Sales Inquiries)
Support@supermicro.com.tw (Technical Support)
RMA@supermicro.com.tw (RMA Support)
Website: www.supermicro.com.tw

Appendix A

Standardized Warning Statements for AC Systems

About Standardized Warning Statements

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components in the Supermicro SYS-521C-NR server .

These warnings may also be found on our website at https://www.supermicro.com/about/policies/safety_information.cfm.

Standard Warning Definition

Warning! This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be familiar with standard practices for preventing accidents.

تحذير! هذا الرمز التحذيري يعني خطر. إنك في موقف قد يتسبب في إصابة جسدية. قبل العمل على أي أجهزة يجب أن تكون على دراية بالممارسات القياسية للحيلولة دون وقوع حوادث.

警告！此警告符号代表危险，表示正处于可能遭受严重身体伤害的工作环境。在使用任何设备开始工作之前，务必熟悉防止事故发生的标准工作规范。

警告！此警告符號代表危險。您正處於可能身體可能會受損傷的工作環境中。操作任何設備之前，請熟悉標準做法以預防事故發生。

Advarsel! Dette advarselssymbol betyder fare. Du er i en situation, der kan føre til personskader. Før du arbejder på noget udstyr, skal du være bekendt med standardpraksis for at forebygge ulykker.

Waarschuwing! Dit waarschuwingssymbool betekent gevaar. U bevindt zich in een situatie die lichamelijk letsel zou kunnen veroorzaken. Voordat u aan enige apparatuur gaat werken, moet u vertrouwd zijn met standaard praktijken voor het voorkomen van ongevallen.

Varoitus! Tämä varoitussymboli tarkoittaa vaaraa. Olet tilanteessa, joka voi aiheuttaa ruumiinvammoja. Ennen kuin ryhdyt työskentelemään laitteiden parissa, tutustu onnettomuuksien ehkäisemisen vakiintuneisiin käytäntöihin.

Attention! Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

Warnung! Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Körperverletzungen führen kann. Bevor Sie an Geräten arbeiten, machen Sie sich mit den üblichen Verfahren zur Unfallverhütung vertraut.

אזהרה! סמל אזהרה זה מסמן סכנה. אתה נמצא במצב שעלול לגרום לפגיעה גופנית. לפני שתתחיל לעבוד על כל ציוד, הכר את הנהלים הסטנדרטיים למניעת תאונות.

चेतावनी! यह चेतावनी चह्नि खतरे का प्रतीक है। आप ऐसी स्थति में है जसिसे शारीरकि चोट लग सकती है। कसिी भी उपकरण पर काम करने से पहले, दुर्घटनाओं को रोकने के लए मानक प्रथाओं से परचिति हो लें।

警告!この警告記号は危険を意味します。人身事故につながる可能性のある状況にあります。機器で作業を行う前に、標準的な事故防止策に精通してください。

경고! 이 경고 기호는 위험이 있음을 알려 줍니다. 신체 상해를 초래할 수 있는 상황입니다. 장비에서 작업하기 전에 사고 예방을 위한 표준 수칙을 숙지하십시오.

Advarsel! Dette advarselsymbolet betyr fare. Du er i en situasjon som kan forårsake kroppsskade. Før du arbeider på noe utstyr, må du gjøre deg kjent med standardrutiner for å forhindre ulykker.

¡Advertencia! Este símbolo de advertencia significa peligro. Se encuentra en una situación que podría provocar lesiones corporales. Antes de trabajar con cualquier equipo, familiarícese con las prácticas estándar para prevenir accidentes.

Varning! Denna varningssymbol betyder fara. Du befinner dig i en situation som kan orsaka personskada. Innan du arbetar på någon utrustning måste du bekanta dig med standardrutiner för att förhindra olyckor.

Electrical Warning Definition

Warning! This warning symbol indicates high voltage may be encountered when performing a procedure. Before you work on any equipment, be aware of the hazards involved with electrical circuitry.

تحذير! يشير رمز التحذير هذا إلى احتمالية مواجهة جهد كهربائي عالٍ عند إجراء عملية ما. قبل البدء في العمل على أي أجهزة كن على دراية بالمخاطر المرتبطة بالدوائر الكهربائية.

警告！此警告符号表示作业过程中可能会遇到高电压。操作任何设备之前，请务必了解电路的危险 。

警告！此警告符號表示執行程序時可能會遇到高電壓。操作任何設備之前，請瞭解與電路相關的危害。

Advarsel! Dette advarselssymbol indikerer, at der kan opstå høj spænding under udførelsen af en procedure. Før du arbejder på noget udstyr, skal du være opmærksom på de farer, der er forbundet med elektriske kredsløb.

Waarschuwing! Dit waarschuwingssymbool geeft aan dat men hoge spanning tegen kan komen bij het uitvoeren van een procedure. Voordat u aan enige apparatuur gaat werken, moet u zich bewust zijn van de gevaren van elektrische schakelsystemen.

Varoitus! Tämä varoitussymboli osoittaa, että toimenpiteen suorittamisen aikana voi esiintyä korkeaa jännitettä. Ennen kuin ryhdyt työskentelemään laitteiden parissa, ota huomioon sähköpiireihin liittyvät vaarat.

Attention! Ce symbole d'avertissement indique un risque d’exposition à une tension élevée lors de l'exécution d'une procédure. Avant de travailler sur un équipement, prenez connaissance des dangers liés aux circuits électriques.

Warnung! Dieses Warnsymbol weist darauf hin, dass bei der Durchführung eines Vorgangs Hochspannung auftreten kann. Bevor Sie an Geräten arbeiten, machen Sie sich mit den Gefahren elektrischer Schaltungen vertraut.

אזהרה! סמל אזהרה זה מציין כי ייתכן שתיתקל במתח גבוה בעת ביצוע הליך. לפני עבודה על ציוד כלשהו, עליך להיות מודע לסכנות הכרוכות במעגלים חשמליים.

चेतावनी! यह चेतावनी चह्नि इंगति करता है कि प्रक्रिया को निष्पादति करते समय उच्च वोल्टेज का सामना करना पड़ सकता है। किसी भी उपकरण पर काम करने से पहले, विद्युत सर्किट्री से जुड़े खतरों के प्रति सचेत रहें।

警告!この警告記号は、手順を実行する際に高電圧が発生する可能性があることを示しています。機器で作業を行う前に、電気回路に関連する危険に注意してください。

경고! 이 경고 기호는 절차 수행 중 고전압에 노출될 수 있음을 알려 줍니다. 장비에서 작업하기 전에 전기 회로와 관련된 위험 요소를 충분히 인지하십시오.

Advarsel! Dette varselsymbolet indikerer at det kan oppstå høy spenning når en prosedyre utføres. Før du arbeider på utstyr, må du være oppmerksom på farene forbundet med elektriske kretser.

¡Advertencia! Este símbolo de advertencia indica que puede haber alto voltaje al realizar un procedimiento. Antes de trabajar con cualquier equipo, tenga en cuenta los peligros que conllevan los circuitos eléctricos.

Varning! Denna varningssymbol indikerar att hög spänning kan förekomma när en procedur utförs. Innan du arbetar med någon utrustning ska du vara medveten om de faror som är förknippade med elektriska kretsar.

Installation Instructions

Warning! Read the installation instructions before connecting the system to the power source.

تحذير! اقرأ تعليمات التثبيت قبل توصيل النظام بمصدر الطاقة.

警告！将此系统连接电源前，请先阅读安装说明。

警告！將系統與電源連接前，請先閱讀安裝說明。

Advarsel! Læs monteringsvejledningen, før systemet sluttes til strømforsyningen.

Waarschuwing! Raadpleeg de installatie-instructies voordat u het systeem op de voedingsbron aansluit.

Varoitus! Lue asennusohjeet ennen järjestelmän liittämistä virtalähteeseen.

Attention! Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

Warnung! Vor dem Anschließen des Systems an die Stromquelle die Installationsanweisungen lesen.

אזהרה! יש לקרוא את הוראות ההתקנה לפני חיבור המערכת למקור המתח.

चेतावनी! सिस्टम को बिजली के स्रोत से जोड़ने से पहले स्थापना निर्देश पढ़ें।

警告!システムを電源に接続する前に、設置手順書をお読み下さい。

경고! 시스템을 전원에 연결하기 전에 설치 안내를 읽어주십시오.

Advarsel! Les installasjonsinstruksjonene før du kobler systemet til strømkilden.

¡Advertencia! Lea las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

Varning! Läs installationsanvisningarna innan du ansluter systemet till strömkällan.

Circuit Breaker

Warning! This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that the protective device is rated not greater than: 250 VAC, 20 A.

تحذير! يعتمد هذا المنتج على التركيبات الكهربائية في المبنى للحماية من حدوث قصر دائرة (تيار زائد). تأكد من أن تصنيف جهاز الحماية لا يتجاوز: 250 فولت تيار متردد, 20 أمبير.

警告！此产品由建筑物的供电系统提供短路（过载）保护，并确保额定电压/电流不大于 250 VAC/20 A。

警告！此產品的短路（過載電流）保護由建築物的供電系統提供，確保短路保護設備的額定電流不大於 250 VAC、20 A。

Advarsel! Dette produkt forudsætter, at bygningens elinstallation sørger for kortslutningsbeskyttelse (overstrøm). Sørg for, at beskyttelsesanordningen ikke er klassificeret til mere end: 250 VAC, 20 A.

Waarschuwing! Dit product vertrouwt op de installatie van het gebouw voor kortsluitbeveiliging (overstroombeveiliging). Zorg ervoor dat de beveiligingsvoorziening is gespecificeerd voor niet meer dan: 250 VAC, 20 A.

Varoitus! Tämä tuote on riippuvainen rakennuksen asennuksesta oikosulku- (ylivirta-) suojauksen osalta. Varmista, että suojalaitteen nimellisarvot eivät ylitä seuraavia arvoja: 250 VAC, 20 A.

Attention! Ce produit dépend de l'installation du bâtiment pour la protection contre les courts-circuits (surintensité). Assurez-vous que le dispositif de protection n'est pas supérieur à : 250 VAC, 20 A.

Warnung! Dieses Produkt ist auf den Kurzschluss- bzw. Überstromschutz der Gebäudeinstallation angewiesen. Stellen Sie sicher, dass die Schutzvorrichtung für maximal 250 VAC, 20 A ausgelegt ist.

אזהרה! מוצר זה מסתמך על תשתית החשמל של המבנה להגנה מפני קצר חשמלי (זרם יתר).ודא שדירוג התקן ההגנה אינו עולה על: 250 VAC, 20 A.

चेतावनी! यह उत्पाद शॉर्ट-सर्किट (ओवरकरंट) सुरक्षा के लिए भवन की स्थापना पर निर्भर करता है। सुनिश्चित करें कि सुरक्षात्मक उपकरण की रेटिंग निम्नलिखित से अधिक न हो: 250 VAC, 20 A.

警告!この製品は、短絡(過電流)保護装置がある建物での設置を前提としています。保護装置の定格が次の値以下であることを確認ください:250 VAC、20 A。

경고! 이 제품은 단락(과전류) 방지에 대해서 전적으로 건물의 관련 설비에 의존합니다. 보호 장치의 정격이 다음 값을 초과하지 않도록 하십시오: 250 VAC(볼트), 20 A(암페어).

Advarsel! Dette produktet er avhengig av bygningens installasjon for kortslutningsbeskyttelse (overstrømsbeskyttelse). Sørg for at beskyttelsesanordningen ikke er klassifisert som høyere enn: 250 V vekselstrøm, 20 A.

¡Advertencia! Este producto depende de la instalación del edificio para protección contra cortocircuitos (sobrecorriente). Asegúrese de que el dispositivo de protección tenga una clasificación no mayor a: 250 VAC, 20 A.

Varning! Denna produkt är beroende av byggnadens installation för kortslutningsskydd (överströmsskydd). Se till att skyddsanordningen inte är märkt för mer än: 250 VAC, 20 A.

Power Disconnection Warning

Warning! The system must be disconnected from all sources of power and the power cord removed from the power supply module(s) before accessing the chassis interior to install or remove system components (except for hot-swappable components).

تحذير! يجب فصل النظام عن جميع مصادر الطاقة، وإزالة سلك الطاقة من وحدة/وحدات إمداد الطاقة قبل الدخول إلى الجزء الداخلي من الهيكل لتركيب أو فك مكونات النظام (باستثناء المكونات القابلة للاستبدال السريع).

警告！在打开机箱并安装或移除内部器件（热插拔器件除外）前，必须将系统完全断电，并移除电源线。

警告！在您打開機殼安裝或移除內部元件（熱插拔元件除外）前，必須將系統完全斷電，並移除電源線。

Advarsel! Systemet skal afbrydes fra alle strømkilder, og strømkablet skal fjernes fra strømforsyningsmodulerne, før der gives adgang til kabinettet for at montere eller fjerne systemkomponenter (undtagen hot-swap-komponenter).

Waarschuwing! Het systeem moet worden losgekoppeld van alle voedingen en het stroomsnoer moet uit de voedingsmodule(s) worden gehaald voorafgaand aan toegang tot de binnenkant van het chassis voor installeren of verwijderen van systeemcomponenten (behalve hot-swap componenten).

Varoitus! Järjestelmä on irrotettava kaikista virtalähteistä ja virtajohto on irrotettava virtalähdemoduulista (moduuleista) ennen kotelon sisälle pääsyä järjestelmän komponenttien asentamista tai poistamista varten (lukuun ottamatta hot-swap-komponentteja).

Attention! Le système doit être déconnecté de toutes les sources d'alimentation et le cordon d'alimentation doit être débranché du/des modules d'alimentation avant d'accéder à l'intérieur du châssis pour installer ou retirer des composants du système (à l'exception des composants remplaçables à chaud).

Warnung! Das System muss von allen Stromquellen getrennt und das Netzkabel von den Netzteilmodulen entfernt werden, bevor auf den Innenraum des Chassis zugegriffen wird, um Systemkomponenten zu installieren oder zu entfernen (ausgenommen Hot-Swap-Komponenten).

אזהרה! יש לנתק את המערכת מכל מקורות הכוח ולהסיר את כבל החשמל ממודול/י אספקת החש-
מל לפני הגישה לחלק הפנימי של המארז לצורך התקנה או הסרה של רכיבי המערכת (למעט רכיבים
הניתנים להחלפה חמה).

चेतावनी! सिस्टम के घटकों को इंस्टॉल करने या निकालने (हॉट-स्वैप घटकों को छोड़कर) के लिए चेसिस के आंतरिक भाग तक पहुँचने से पहले, सिस्टम को बिजली के सभी स्रोतों से डिस्कनेक्ट किया जाना चाहिए और बिजली की आपूर्ति मॉड्यूल से पावर कॉर्ड को निकाल दिया जाना चाहिए।

警告!システムコンポーネント（ホットスワップコンポーネントを除く）の取り付けまたは取り外しを行うために、シャーシ内部にアクセスするには、システムの電源はすべてのソースから切断され、電源コードは電源モジュールから取り外す必要があります。

경고! (핫스왑 구성품을 제외하고) 시스템에 부품들을 장착하거나 제거하기 위해서는 섀시 내부에 접근하기 전에 반드시 전원 공급장치로부터 연결되어있는 모든 전원과 전기코드를 분리해주어야 합니다.

Advarsel! Systemet må kobles fra alle strømkilder, og strømledningen må fjernes fra strømforsyningsmodulen(e) før man går inn i kabinettet for å installere eller fjerne systemkomponenter (unntatt komponenter som kan byttes ut under drift).

¡Advertencia! El sistema debe estar desconectado de todas las fuentes de energía y el cable de alimentación debe retirarse de los módulos de fuente de alimentación antes de acceder al interior del chasis para instalar o quitar componentes del sistema (excepto los componentes reemplazables en caliente).

Varning! Systemet måste vara frånkopplat från alla strömkällor och strömsladden måste vara borttagen från strömförsörjningsmodulerna innan du öppnar chassit för att installera eller ta bort systemkomponenter (med undantag för hot-swap-komponenter).

Equipment Installation

Warning! Only authorized personnel and qualified service persons should be allowed to install, replace, or service this equipment.

تحذير! لا يُسمح إلا للعاملين المعتمدين وفنيي الخدمة المؤهلين بتركيب هذا الجهاز أو استبداله أو صيانته.

警告！仅限经过授权培训且拥有相关资质的人员才能进行此设备的安装、更换和维修。

警告！只有經過受訓且具資格人員才可安裝、更換與維修此設備。

Advarsel! Dette udstyr må kun installeres, udskiftes eller serviceres af autoriseret personale og kvalificerede servicemedarbejdere.

Waarschuwing! Alleen geautoriseerd personeel en gekwalificeerd onderhoudspersoneel mag deze apparatuur installeren, vervangen of onderhouden.

Varoitus! Vain valtuutetut henkilöt ja pätevät huoltoteknikot saavat asentaa, vaihtaa tai huoltaa tätä laitetta.

Attention! Seul le personnel autorisé et le personnel de maintenance qualifié doivent être autorisés à installer, remplacer ou entretenir cet équipement.

Warnung! Nur autorisiertes Personal und qualifizierte Servicetechniker dürfen dieses Gerät installieren, austauschen oder warten.

אזהרה! רק אנשי צוות מורשים ואנשי שירות מוסמכים רשאים להתקין, להחליף או לטפל בציוד זה.

चेतावनी! केवल अधिकृत कर्मियों और योग्य सेवा व्यक्तियों को ही इस उपकरण को स्थापित करने, बदलने या सेवा देने की अनुमति दी जानी चाहिए।

警告!トレーニングを受け認定された人だけがこの機器の設置、交換、またはサービスを許可されています。

경고! 승인된 직원과 자격을 갖춘 서비스 담당자만이 이 장비를 설치, 교체 또는 서비스할 수 있습니다.

Advarsel! Kun autorisert personell og kvalifiserte servicefolk skal ha tillatelse til å installere, bytte ut eller utføre service på dette utstyret.

¡Advertencia! Sólo el personal autorizado y el personal de servicio calificado pueden instalar, reemplazar o dar servicio a este equipo.

Varning! Endast auktoriserad personal och kvalificerade servicetekniker får installera, byta ut eller utföra service på denna utrustning.

Rack Stability Hazard

Warning! Stability hazard. The rack may tip over causing serious personal injury. Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.

تحذير! خطر عدم الاستقرار. قد ينقلب الحامل، مما قد يتسبب في إصابات شخصية خطيرة. قبل تمديد الحامل إلى موضع التركيب اقرأ إرشادات التركيب. لا تضع أي حمولة على الأجهزة المركبة على حوامل منزلقة في وضع التركيب. لا تترك الأجهزة المركبة على حوامل منزلقة في وضع التركيب.

警告！稳定性危险。机架可能会翻倒，造成严重的人身伤害。在将机架延伸到安装位置之前，请阅读安装说明。请勿在安装位置对滑轨安装的设备施加任何负载。请勿将滑轨安装的设备留在安装位置。

警告！穩定性危險。機架可能會翻倒，造成嚴重的人身傷害。將機架延伸至安裝位置前，請先閱讀安裝說明。請勿在安裝位置的滑軌安裝設備上放置任何負載。請勿將滑軌安裝設備留在安裝位置。

Advarsel! Stabilitetsfare. Udstyrsskabet kan vælte, hvilket kan føre til alvorlige personskader. Læs monteringsvejledningen, før udstyrsskabet trækkes ud til monteringsstedet. Anbring ikke nogen belastning på udstyr monteret på skinner, når det er på monteringsstedet. Efterlad ikke udstyr monteret på skinner på monteringsstedet.

Waarschuwing! Gevaar voor instabiliteit. Het rack kan kantelen en ernstig persoonlijk letsel veroorzaken. Lees de installatie-instructies voordat u het rack uitschuift naar de installatiepositie. Plaats geen last op de op de glijrail gemonteerde apparatuur in de installatiepositie. Laat de op de glijrail gemonteerde apparatuur niet in de installatiepositie staan.

Varoitus! Vakausvaara. Teline voi kaatua ja aiheuttaa vakavia henkilövahinkoja. Ennen telineen asettamista asennusasentoon, lue asennusohjeet. Älä aseta mitään kuormitusta liukukiskoon asennettuihin laitteisiin asennusasennossa. Älä jätä liukukiskoon asennettuja laitteita asennusasentoon.

Attention! Danger d’instabilité. Le rack peut basculer et provoquer des blessures corporelles graves. Avant d’étendre le rack en position d’installation, lire les instructions d’installation. Ne pas charger l’équipement monté sur rail de glissière en position d’installation. Ne pas laisser l’équipement monté sur rail de glissière en position d’installation.

Warnung! Gefahr der Instabilität. Das Rack kann umkippen und schwere Verletzungen verursachen. Lesen Sie vor dem Ausziehen des Racks in die Installationsposition die Installationsanweisungen. Belasten Sie in der Installationsposition keine auf Gleitschienen montierten Geräte. Lassen Sie auf Gleitschienen montierte Geräte nicht unbeaufsichtigt in der Installationsposition.

אזהרה! סכנת יציבות. הארון עלול להתהפך ולגרום לפציעה גופנית חמורה. לפני הארכת הארון למצב התקנה, יש לקרוא את הוראות ההתקנה. אין להניח עומס כלשהו על הציוד המותקן על מסילות ההח־ לקה כשהוא במצב התקנה. אין להשאיר את הציוד המותקן על מסילות ההחלקה במצב התקנה.

चेतावनी! स्थरिता का खतरा। रैक पलट सकता है जसिसे गंभीर व्यक्तगित चोट लग सकती है। रैक को इंस्टालेशन स्थतिि तिक बढ़ाने से पहले, स्थापना नरि्देश पढ़ें। स्थापना स्थतिि में स्लाइड-रेल पर लगे उपकरणों पर कोई भार न डालें। स्लाइड-रेल पर लगे उपकरणों को स्थापना स्थतिि में न छोड़ें।

警告!安定性に危険があります。ラックが転倒して、重大な人身事故を引き起こす可能性があります。ラックを設置位置まで伸ばす前に、設置手順をお読みください。設置位置にあるスライドレールに取り付けられた機器に負荷をかけないでください。スライドレールに取り付けられた機器を設置位置に放置しないでください。

경고! 안정성 위험. 랙이 넘어져 심각한 개인 부상을 입을 수 있습니다. 랙을 설치 위치까지 확장하기 전에 설치 지침을 읽으십시오. 설치 위치에서 슬라이드 레일 장착 장비에 하중을 가하지 마십시오. 슬라이드 레일 장착 장비를 설치 위치에 두지 마십시오.

Advarsel! Stabilitetsfare. Stativet kan velte og forårsake alvorlig personskade. Les installasjonsanvisningen før du forlenger stativet til installasjonsposisjonen. Ikke belast utstyret som er montert på glideskinnen i installasjonsposisjon. Ikke la utstyret som er montert på glideskinnen stå i installasjonsposisjon.

¡Advertencia! Peligro de inestabilidad. El rack podría volcarse y causar lesiones personales graves. Antes de extender el rack a la posición de instalación, lea las instrucciones de instalación. No coloque ninguna carga sobre el equipo montado sobre rieles deslizantes en la posición de instalación. No deje el equipo montado sobre rieles deslizantes en la posición de instalación.

Varning! Stabilitetsrisk. Racket kan välta och orsaka allvarliga personskador.Läs monteringsanvisningarna innan du skjuter ut racket till monteringspositionen. Belasta ej utrustning som är monterad på glidskena i installationsläget. Lämna ej utrustning som är monterad på glidskena i monteringsläget.

Rack-Mounted Equipment Warning

Warning! Rack-mounted equipment should not be used as a shelf or work space.

تحذير! لا ينبغي استخدام المعدات المثبتة على حوامل كرف أو مساحة عمل.

警告！机架式设备不应用作货架或工作空间。

警告！不得將機架式設備當作置物架或工作空間使用。

Advarsel! Udstyr, der er monteret i udstyrsskabe, må ikke bruges som hylder eller arbejdsflader.

Waarschuwing! In rack gemonteerde apparatuur moet niet worden gebruikt als plank of werkruimte.

Varoitus! Telineasennettavia laitteita ei saa käyttää hyllyinä tai työtasoina.

Attention! Un équipement installé en rack ne doit pas être utilisé comme une étagère ou un espace de travail.

Warnung! In Racks montierte Geräte dürfen nicht als Ablagefläche oder Arbeitsfläche verwendet werden.

אזהרה! אין להשתמש בציוד המותקן במסד (Rack) כמדף או כמשטח עבודה.

चेतावनी! रैक-माउंटेड उपकरण का उपयोग शेल्फ या कार्यक्षेत्र के रूप में नहीं कयिा जाना चाहएि।

警告!ラックマウント機器を棚や作業スペースとして使用しないでください。

경고! 랙 장착 장비를 선반 또는 작업대처럼 사용하지 마십시오.

Advarsel! Rackmontert utstyr skal ikke brukes som hylle eller arbeidsområde.

¡Advertencia! Los equipos montados en rack no deben utilizarse como estante o espacio de trabajo.

Varning! Rackmonterad utrustning ska inte användas som hylla eller arbetsyta.

Restricted Access Location

Warning! This unit is intended for installation in restricted access areas. A restricted access area can be accessed only by an instructed person or a skilled person.

تحذير! هذه الوحدة مخصصة للتركيب في المناطق الممنوع الدخول إليها. يقتصر الدخول إلى منطقة منع الدخول على الأشخاص المدربين أو المهرة فقط.

警告！此装置应安装在限制进出的场所，此类场所仅限经过相关训练或技术熟练的人员进出。

警告！此部件應安裝在限制進出區域。只有受過指導的人員或專業人員才可進出限制進出區域。

Advarsel! Denne enhed er beregnet til montering i områder med begrænset adgang. Et område med begrænset adgang må kun tilgås af en instrueret person eller en fagkyndig person.

Waarschuwing! Deze eenheid is bedoeld voor installatie in gebieden met beperkte toegang. Er kan alleen toegang worden verkregen tot een gebied met beperkte toegang door een geïnstrueerde persoon of een ervaren persoon.

Varoitus! Tämä laite on tarkoitettu asennettavaksi rajoitetun pääsyn alueille. Rajoitetun pääsyn alueelle pääsee vain koulutettu tai ammattitaitoinen henkilö.

Attention! Cet appareil est destiné à être installé dans des zones à accès restreint. Une zone à accès restreint n'est accessible qu'à une personne formée ou qualifiée.

Warnung! Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Ein Bereich mit beschränktem Zutritt darf nur von unterwiesenen oder fachkundigen Personen betreten werden.

אזהרה! יחידה זו מיועדת להתקנה באזורים עם גישה מוגבלת. ניתן לגשת לאזור עם גישה מוגבלת רק על ידי אדם שהוכשר לכך או אדם מיומן.

चेतावनी! यह इकाई प्रतबिंधति पहुँच वाले क्षेत्रों में स्थापना के लएि ही है। प्रतबिंधति पहुँच वाले क्षेत्र में केवल एक नरि्देशति व्यक्तयिा कुशल व्यक्तद्विारा ही पहुँचा जा सकता है।

警告!このユニットはアクセス制限区域に設置することを想定しています。アクセス制限区域は、トレーニングを受けた人または熟練者だけが出入り可能です。

경고! 본 장치는 접근이 제한된 구역에 설치하도록 되어있습니다. 교육을 받은 사람 또는 숙련된 사람만 접근 제한 구역에 들어갈 수 있습니다.

Advarsel! Denne enheten er beregnet for installasjon i områder med begrenset tilgang. Et område med begrenset tilgang kan kun nås av en person som har fått instruksjoner eller en fagperson.

¡Advertencia! Esta unidad está diseñada para su instalación en áreas de acceso restringido. A un área de acceso restringido solo puede acceder una persona instruida o una persona capacitada.

Varning! Denna enhet är avsedd för installation i områden med begränsad åtkomst. Ett område med begränsad åtkomst får endast beträdas av en instruerad eller kvalificerad person.

Battery Handling

Warning! There is risk of explosion if the battery is replaced by an incorrect type. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

تحذير! يوجد خطر حدوث انفجار إذا تم استبدال البطارية بنوع غير صحيح. استبدل البطارية بنفس النوع أو نوع مكافئ موصى به من قبل الشركة المصنعة فقط. يجب التخلص من البطاريات المستخدمة وفقًا لإرشادات الجهة المصنعة.

警告！如果更换的电池类型不正确，有爆炸危险。更换电池时，请使用制造商推荐的相同或同等型号的电池。请按制造商的说明处理废旧电池。

警告！如果更換的電池類型不正確，有爆炸危險。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

Advarsel! Der er risiko for eksplosion, hvis batteriet skiftes med et batteri af den forkerte type. Batteriet må kun skiftes med et batteri af samme eller tilsvarende type, der anbefales af producenten. Opbrugte batterier skal bortskaffes i henhold til vejledningerne fra producenten.

Waarschuwing! Er bestaat een explosiegevaar als de batterij wordt vervangen door een onjuist type. Vervang de batterij alleen door hetzelfde type of een soortgelijk type aanbevolen door de fabrikant. Verwijder gebruikte batterijen overeenkomstig de instructies van de fabrikant.

Varoitus! Väärän tyyppisen akun käyttö voi aiheuttaa räjähdysvaaran. Vaihda akku vain valmistajan suosittelemaan samaan tai vastaavaan tyyppiseen akkuun. Hävitä käytetyt paristot valmistajan ohjeiden mukaisesti.

Attention! Il y a un risque d'explosion si la batterie est remplacée par une d'un type incorrect. Remplacez la batterie uniquement par une d'un type identique ou équivalent recommandé par le fabricant. Éliminez les batteries usagées conformément aux instructions du fabricant.

Warnung! Es besteht Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie ausschließlich durch denselben oder einen vom Hersteller empfohlenen gleichwertigen Typ. Entsorgen Sie gebrauchte Batterien gemäß den Anweisungen des Herstellers.

אזהרה! קיימת סכנת פיצוץ אם הסוללה תוחלף בסוללה מסוג שגוי. החלף את הסוללה רק בסוללה מאותו סוג או בסוללה מקבילה המומלצת על ידי היצרן. השלך סוללות משומשות בהתאם להוראות היצרן.

चेतावनी! यदि बैटरी को गलत प्रकार से बदला जाता है तो विस्फोट का जोखिम है। बैटरी को केवल निर्माता द्वारा अनुशंसित समान या समकक्ष प्रकार से ही बदलें। इस्तेमाल की गई बैटरियों का निपटान निर्माता के निर्देशों के अनुसार करें।

警告!電池を間違ったタイプに交換すると爆発する危険があります。交換する電池はメーカーが推奨するタイプ、または同等のものを使用してください。使用済み電池は、メーカーの指示に従って廃棄してください。

경고! 배터리를 잘못된 종류로 교체하면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

Advarsel! Det er fare for eksplosjon hvis batteriet byttes ut med et av feil type. Batterier skal kun byttes ut med et av lik eller tilsvarende type, som anbefalt av produsenten. Kast brukte batterier i henhold til produsentens instruksjoner.

¡Advertencia! Existe riesgo de explosión si se sustituye la batería por una de tipo incorrecto. Reemplace la batería únicamente con el mismo tipo o uno equivalente recomendado por el fabricante. Deseche las baterías usadas de acuerdo con las instrucciones del fabricante.

Varning! Det finns risk för explosion om batteriet byts ut mot en felaktig typ. Byt endast ut batteriet mot ett batteri av samma eller likvärdig typ som rekommenderas av tillverkaren. Kassera förbrukade batterier i enlighet med tillverkarens anvisningar.

Redundant Power Supplies

Warning! This unit might have more than one power supply connection. All connections must be removed to de-energize the unit.

تحذير! قد تحتوي هذه الوحدة على أكثر من وصلة لإمداد الطاقة. يجب فصل جميع التوصيلات لفصل الطاقة عن الوحدة.

警告！本设备可能有多个电源连接。必须切断所有连接，才能使设备断电。

警告！此裝置連接的電源可能不只一個。必須切斷所有電源才能停止對該裝置的供電。

Advarsel! Denne enhed kan have mere end én strømforsyningsforbindelse. Alle forbindelser skal fjernes for at deaktivere spændingen.

Waarschuwing! Deze eenheid kan meer dan één stroomtoevoeraansluiting bevatten. Alle aansluitingen dienen verwijderd te worden om het apparaat stroomloos te maken.

Varoitus! Laitteessa voi olla useampi kuin yksi virtalähteen liitäntä. Laitteen virta on katkaistava irrottamalla kaikki liitännät.

Attention! Cette unité peut avoir plus d'une connexion d'alimentation. Pour supprimer toute tension et tout courant électrique de l'unité, toutes les connexions d'alimentation doivent être débranchées.

Warnung! Diese Einheit kann über mehr als eine Stromversorgungsanschluss verfügen. Um sicherzustellen, dass die Einheit spannungsfrei ist, müssen alle Verbindungen entfernt werden.

אזהרה! יחידה זו עשויה לכלול יותר מחיבור אחד לספק כוח. יש לנתק את כל החיבורים כדי להפסיק את הזנת המתח ליחידה.

चेतावनी! इस इकाई में एक से अधकि पावर सप्लाई कनेक्शन हो सकते हैं। इकाई को ऊर्जा-मुक्त (डी-एनर्जाइज) करने के लएि सभी कनेक्शन हटा दएि जाने चाहएि।

警告!このユニットは複数の電源装置が接続されている場合があります。ユニットの電源を切るためには、すべての接続を取り外さなければなりません。

경고! 이 장치에는 한 개 이상의 전원 공급 단자가 연결되어 있을 수 있습니다. 이 장치에 전원을 차단하기 위해서는 모든 연결 단자를 제거해야만 합니다.

Advarsel! Denne enheten kan ha mer enn én strømforsyningstilkobling. Alle tilkoblinger må fjernes for å gjøre enheten strømløs.

¡Advertencia! Puede que esta unidad tenga más de una conexión para fuentes de alimentación. Para cortar por completo el suministro de energía, deben desconectarse todas las conexiones.

Varning! Denna enhet kan ha mer än en strömförsörjningsanslutning. Alla anslutningar måste tas bort för att enheten ska bli strömlös.

Backplane Voltage

Warning! Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing. Read the instructions before servicing.

تحذير! يوجد جهد أو طاقة خطرة على اللوحة الخلفية أثناء تشغيل النظام. توخ الحذر عند إجراء الصيانة. اقرأ التعليمات قبل إجراء الصيانة.

警告！当系统运行时，背板上存在危险电压或能量，进行维修时务必小心。维修前请阅读使用说明。

警告！系統運作時，背板上存在危險電壓或能量。維修時請小心。維修前請閱讀說明書。

Advarsel! Når systemet er i drift, er farlig spænding eller energi til stede på bagpladen. Vær forsigtig ved servicering. Læs instruktionerne før service.

Waarschuwing! Gevaarlijke spanning of energie is aanwezig op de achterzijde wanneer het systeem in bedrijf is. Wees voorzichtig bij service. Lees de instructies voorafgaand aan service.

Varoitus! Järjestelmän ollessa käynnissä takapaneelissa on vaarallista jännitettä tai energiaa. Ole varovainen huoltotöiden aikana. Lue ohjeet ennen huoltoa.

Attention! Une tension ou de l’énergie dangereuse est présente sur le panneau arrière lorsque le système est en fonctionnement. Soyez prudent lors de l'entretien. Lisez les instructions avant d'effectuer un entretien.

Warnung! Bei eingeschaltetem System liegt an der Backplane gefährliche Spannung oder Energie an. Seien Sie bei Wartungsarbeiten vorsichtig. Lesen Sie vor der Wartung die Anweisungen.

אזהרה! מתח או אנרגיה מסוכנים קיימים בלוח האחורי כאשר המערכת פועלת. יש לנקוט בזהירות בעת ביצוע תחזוקה. קרא את ההוראות לפני ביצוע תחזוקה.

चेतावनी! जब सिस्टम चालू होता है, तो बैकप्लेन पर खतरनाक वोल्टेज या ऊर्जा मौजूद होती है। सर्वसिगि करते समय सावधानी बरतें। सर्वसिगि से पहले निर्देश पढ़ें।

警告!システムの稼働中は、危険な電圧または電流がバックプレーン上にかかっています。修理を行う際には注意してください。修理を行う前に取扱説明書をお読みください。

경고! 시스템이 동작 중일 때 후면판(Backplane)에는 위험한 전압이나 에너지가 발생합니다. 서비스 작업 시 주의하십시오. 서비스 작업 전에 지침을 읽으십시오.

Advarsel! Det er farlig spenning eller energi på bakplaten når systemet er i drift. Vær forsiktig ved service. Les instruksjonene før service.

¡Advertencia! Hay voltaje o energía peligrosos presentes en la placa posterior cuando el sistema está en funcionamiento. Tenga cuidado al realizar el mantenimiento. Lea las instrucciones antes de realizar el mantenimiento.

Varning! Farlig spänning eller energi finns på backplane när systemet är i drift. Var försiktig vid service. Läs instruktionerna före service.

Comply with Local and National Electrical Codes

Warning! Installation of the equipment must comply with local and national electrical codes.

تحذير! يجب أن يتوافق تركيب الأجهزة مع لوائح الكهرباء المحلية والوطنية.

警告！设备安装必须符合本地与本国电气法规。

警告！設備安裝必須符合本地與本國電氣法規。

Advarsel! Alle lokale og nationale el-regler skal overholdes under montering af udstyret.

Waarschuwing! Bij installatie van de apparatuur moet worden voldaan aan de lokale en nationale elektriciteitsvoorschriften.

Varoitus! Laitteiden asennus on suoritettava paikallisten ja kansallisten sähkömääräysten mukaisesti.

Attention! L'équipement doit être installé conformément aux normes électriques nationales et locales.

Warnung! Die Installation des Geräts muss den lokalen und nationalen elektrotechnischen Vorschriften entsprechen.

אזהרה! התקנת הציוד חייבת להתבצע בהתאם לתקני החשמל המקומיים והארציים.

चेतावनी! उपकरण की इंस्टालेशन स्थानीय और राष्ट्रीय वद्युित कोड के अनुरूप होनी चाहएि।

警告!機器の取り付けはその地域および国の電気規定に準拠する必要があります。

경고! 현 지역 및 국가의 전기 규정에 따라 장비를 설치해야 합니다.

Advarsel! Installasjon av utstyret må være i samsvar med lokale og nasjonale elektriske forskrifter.

¡Advertencia! La instalacion del equipo debe cumplir con las normas de electricidad locales y nacionales.

Varning! Installation av utrustningen måste följa lokala och nationella elektriska föreskrifter.

Fan Warning

Warning! Hazardous moving parts. Keep away from moving fan blades. The fans might still be turning when you remove the fan assembly from the chassis. Keep fingers, screwdrivers, and other objects away from the openings in the fan assembly's housing.

تحذير! تجنب خطر الأجزاء المتحركة. ابتعد عن شفرات المروحة المتحركة. قد تستمر المراوح في الدوران بعد فك مجموعة المراوح من الهيكل. أبقِ أصابعك ومفكات البراغي والأغراض الأخرى بعيدة عن الفتحات الموجودة في مبيت مروحة التبريد.

警告！危险的活动零部件。请务必与转动的风扇叶片保持距离。从机箱移除风扇装置时，风扇可能仍在转动。小心不要将手指、螺丝起子和其他物品太靠近风扇外壳开口。

警告！危險的可移動性零件。請務必與轉動的風扇葉片保持距離。當您從機架移除風扇裝置，風扇可能仍在轉動。小心不要將手指、螺絲起子和其他物品太靠近風扇。

Advarsel! Farlige bevægelige dele. Hold dig væk fra ventilatorblade i bevægelse. Ventilatorerne kan stadig køre, når du tager ventilatorsamlingen af kabinettet. Hold fingre, skruetrækkere og andre genstande væk fra åbningerne i ventilatorkabinettet.

Waarschuwing! Gevaarlijke bewegende onderdelen. Houd voldoende afstand tot de bewegende ventilatorbladen. Het is mogelijk dat de ventilator nog draait tijdens het verwijderen van het ventilatorsamenstel uit het chassis. Houd uw vingers, schroevendraaiers en eventuele andere voorwerpen uit de buurt van de openingen in de ventilatorbehuizing.

Varoitus! Vaaralliset liikkuvat osat. Pysy kaukana liikkuvista tuulettimen siivistä. Tuulettimet saattavat edelleen pyöriä, kun irrotat tuulettimen kokoonpanon kotelosta. Pidä sormet, ruuvimeisselit ja muut esineet poissa tuulettimen kotelon aukkojen läheltä.

Attention! Pieces mobiles dangereuses. Se tenir à l'ecart des lames du ventilateur Il est possible que les ventilateurs soient toujours en rotation lorsque vous retirerez le bloc ventilateur du châssis. Prenez garde à ce que doigts, tournevis et autres objets soient éloignés du logement du bloc ventilateur.

Warnung! Gefährliche bewegliche Teile. Halten Sie Abstand von rotierenden Lüfterblättern. Die Lüfter können sich noch drehen, wenn Sie die Lüfterbaugruppe aus dem Chassis entfernen. Halten Sie Finger, Schraubendreher und andere Gegenstände von den Öffnungen des Lüftergehäuses fern.

אזהרה! חלקים נעים מסוכנים. יש להתרחק מלהבי מאוורר נעים. המאווררים עשויים להמשיך להס־
תובב בעת הסרת מכלול המאוורר מהמארז. יש להרחיק אצבעות, מברגים וחפצים אחרים מהפתחים
שבבית מכלול המאוורר.

चेतावनी! खतरनाक चलते हुए भाग। चलते हुए पंखे के ब्लेड से दूर रहें। जब आप चेससि से पंखे की असेंबली नकिालते
हैं, तब भी पंखे घूम रहे हो सकते हैं। उंगलयिों, स्क्रूड्राइवर और अन्य वस्तुओं को पंखे की असेंबली के हाउसगि के
छदि्रों से दूर रखें।

警告!回転部品に注意。運転中は回転部（羽根）に触れないでください。シャーシからファンアセンブ
リを取り外す際、ファンがまだ回転している可能性があります。ファンアセンブリの開口部に、指、ドラ
イバー、およびその他のものを近づけないで下さい。

경고! 움직이는 위험한 부품. 회전하는 송풍 날개에 접근하지 마세요. 섀시로부터 팬 조립품을 제거할 때 팬은 여전히 회전하고 있을 수 있습니다. 팬 조림품 외관의 열려있는 부분들로부터 손가락 및 스크류드라이버, 다른 물체들이 가까이 하지 않도록 배치해 주십시오.

Advarsel! Farlige bevegelige deler. Hold deg unna vifteblader i fart. Viftene kan fortsatt gå rundt når du fjerner vifteenheten fra kabinettet. Hold fingre, skrutrekkere og andre gjenstander unna åpningene i viftehuset.

¡Advertencia! Riesgo de piezas móviles. Mantener alejado de las aspas del ventilador. Los ventiladores podran dar vuelta cuando usted quite el montaje del ventilador del chasis. Mantenga los dedos, los destornilladores y todos los objetos lejos de las aberturas del ventilador.

Varning! Farliga rörliga delar. Håll dig borta från rörliga fläktblad. Fläktarna kan fortfarande snurra när du tar bort fläktenheten från chassit. Håll fingrar, skruvmejslar och andra föremål borta från öppningarna i fläktenhetens hölje.

Connection to Earth

Warning! Equipment shall be connected to an Earth mains socket-outlet.

تحذير! يجب توصيل الأجهزة بمقبس كهربائي أرضي.

警告！设备应连接到接地电源插座。

警告！應將設備連接至接地電源插座。

Advarsel! Dette udstyr skal sluttes til en jordforbundet stikkontakt.

Waarschuwing! De apparatuur moet worden aangesloten op een geaard netstopcontact.

Varoitus! Laitteet on kytkettävä maadoitettuun pistorasiaan.

Attention! L'équipement doit être connecté à une prise de courant avec mise à la terre.

Warnung! Das Gerät muss an eine geerdete Netzsteckdose angeschlossen werden.

אזהרה! יש לחבר את הציוד לשקע חשמל עם הארקה.

चेतावनी! उपकरण को एक अर्थ मेन्स सॉकेट-आउटलेट से जोड़ा जाना चाहिए।

警告!機器は、接地主電源コンセントに接続するものとします。

경고! 장비는 접지된 전원 콘센트에 연결해야 합니다.

Advarsel! Utstyret skal kobles til en jordet stikkontakt.

¡Advertencia! El equipo deberá conectarse a una toma de corriente con conexión a tierra.

Varning! Utrustningen ska vara ansluten till ett jordat eluttag.

Power Cable and AC Adapter

Warning! When installing the product, use the provided or designated connection cables, power cables and AC adapters. Using any other cables and adapters could cause a malfunction or a fire. Electrical Appliance and Material Safety Law prohibits the use of UL or CSA -certified cables (that have UL/CSA shown on the cord) for any other electrical devices than products designated by Supermicro only.

تحذير! عند تركيب المنتج استخدم كابلات التوصيل والطاقة ومحولات التيار المتردد المرفقة أو المخصصة. قد يؤدي استخدام أي كابلات ومحولات أخرى إلى حدوث عطل أو نشوب حريق. يحظر قانون سلامة الأجهزة والمواد الكهربائية استخدام كابلات UL أو المعتمدة من CSA (التي عليها علامة UL/CSA) لأي أجهزة كهربائية أخرى غير المنتجات التي تحددها شركة Supermicro فقط.

警告！安装时，请使用设备本身提供或指定的连接线、电源线和交流适配器。使用任何其他电缆线材或适配器都可能导致故障或火灾。除美超微（Supermicro）指定的产品外，《电气用品和材料安全法》禁止将UL或CSA认证的电缆（线材上标有UL/CSA）用于任何其他电气设备。

警告！安裝此產品時，請使用本身隨附或指定的連接線、電源線和電源適配器，包含遵照當地法規和安全要求的合規的電源線尺寸和插頭。使用其它線材或適配器可能會引起故障或火災。除了美超微（Supermicro）所指定的產品，《電氣用品及材料安全法》規定禁止使用未經UL或CSA認證的線材。（線材上標有UL/CSA符號）。

Advarsel! Når du monterer produktet, skal du bruge de medfølgende eller udpegede forbindelseskabler, strømkabler og vekselstrømsadaptere (AC). Brug af andre kabler og adaptere kan føre til fejl eller brand. Loven om sikkerhed for elektriske apparater og materialer forbyder brugen af UL- eller CSA-certificerede kabler (med UL/CSA angivet på ledningen) til andre elektriske apparater end dem, der udelukkende er godkendt af Supermicro.

Waarschuwing! Bij het installeren van het product moet u de geleverde of aangewezen aansluitkabels, voedingskabels en AC-adapters gebruiken. Het gebruik van enige andere kabels en adapters kan een storing of brand veroorzaken. Wetgeving voor Elektrische apparatuur en Materiaalveiligheid verbied het gebruik van UL- of CSA -gecertificeerde kabels (met UL/CSA in de code) voor enige andere elektrische apparaten dan producten die uitsluitend door Supermicro zijn aangewezzen.

Varoitus! Käytä tuotteen asennuksessa mukana toimitettuja tai tarkoitukseen sopivia liitäntäkaapeleita, virtajohtoja ja verkkolaitteita. Muiden kaapeleiden ja sovittimien käyttö voi aiheuttaa toimintahäiriön tai tulipalon. Sähkölaitteiden ja materiaalien turvallisuutta koskeva laki kieltää UL- tai CSA-sertifioitujen kaapeleiden (joissa on merkintä UL/CSA) käytön muissa sähkölaitteissa kuin Supermicron nimeämissä tuotteissa.

Attention! Lors de l'installation du produit, utilisez les câbles de connexion, les câbles d'alimentation et les adaptateurs secteur fournis ou recommandés. L'utilisation d'autres câbles et adaptateurs peut causer un dysfonctionnement ou un incendie. La loi sur la sécurité des appareils et des équipements électriques interdit l'utilisation de câbles certifiés UL ou CSA (avec la mention UL/CSA sur le cordon) pour tout autre appareil électrique que les produits désignés par Supermicro uniquement.

Warnung! Verwenden Sie bei der Installation des Produkts ausschließlich die vorgesehenen oder mitgelieferten Anschlusskabel, Netzkabel und AC-Adapter. Die Verwendung anderer Kabel oder Adapter kann zu Fehlfunktionen oder Brand führen. Das Gesetz zur Sicherheit elektrischer Geräte und Materialien untersagt die Verwendung von UL- oder CSA-zertifizierten Kabeln (mit UL/CSA-Kennzeichnung auf dem Kabel) für andere elektrische Geräte als die von Supermicro ausdrücklich vorgesehenen Produkte.

אזהרה! בעת התקנת המוצר, יש להשתמש בכבלי החיבור, בכבלי החשמל ובמתאמי ה-AC המצורפים או הייעודיים. שימוש בכבלים או במתאמים אחרים עלול לגרום לתקלה או לדליקה. החוק לבטיחות מכשירי חשמל וחומרים אוסר על שימוש בכבלים בעלי אישור UL או CSA (הנושאים סימון CSA/UL על גבי הכבל) עבור מכשירים חשמליים אחרים שאינם מוצרים ייעודיים של סופרמיקרו (Supermicro) בלבד.

चेतावनी! उत्पाद इंस्टॉल करते समय, प्रदान की गई या निर्दिष्ट कनेक्शन केबल, पावर केबल और AC एडॉप्टर का ही उपयोग करें। किसी अन्य केबल और एडॉप्टर का उपयोग करने से खराबी आ सकती है या आग लग सकती है। विद्युत उपकरण और सामग्री सुरक्षा कानून केवल सुपरमाइक्रो (Supermicro) द्वारा निर्दिष्ट उत्पादों के अलावा किसी अन्य विद्युत उपकरणों के लिए UL या CSA-प्रमाणित केबल (जिनके कॉर्ड पर UL/CSA दर्शाया गया हो) के उपयोग को प्रतिबंधित करता है।

警告!本製品を設置する際は、付属または指定の接続ケーブル、電源コードとACアダプターを使用してください。それ以外のケーブルやアダプターを使用すると、事故や火災の原因になることがあります 。電気用品安全法では、ULまたはCSA認定のケーブル（UL/CSAマークがコードに表記）をSupermicroが指定する製品以外の電気機器に使用することを禁止しています。

경고! 제품을 설치할 때 현지 코드 및 적절한 굵기의 코드와 플러그를 포함한 안전 요구 사항을 준수하여 제공되거나 지정된 연결 혹은 구매 케이블, 전원 케이블 및 AC 어댑터를 사용하십시오. 다른 케이블이나 어댑터를 사용하면 오작동이나 화재가 발생할 수 있습니다. 전기 용품 안전법은 UL 또는 CSA 인증 케이블 (코드에 UL / CSA가 표시된 케이블) 을 Supermicro가 지정한 제품 이외의 전기 장치에 사용하는 것을 금지합니다.

Advarsel! Når du installerer produktet, bruker du de medfølgende eller angitte tilkoblingskablene, strømkablene og strømadapterne. Bruk av andre kabler og adaptere kan forårsake funksjonsfeil eller brann. Lov om elektriske apparater og materialsikkerhet forbyr bruk av UL- eller CSA-sertifiserte kabler (der UL/CSA står på ledningen) til andre elektriske apparater enn produkter som kun er angitt av Supermicro.

¡Advertencia! Cuando instale el producto, utilice la conexión provista o designada o procure cables, Cables de alimentación y adaptadores de CA que cumplan con los códigos locales y los requisitos de seguridad, incluyendo el tamaño adecuado del cable y el enchufe. El uso de otros cables y adaptadores podría causar un mal funcionamiento o un incendio. La Ley de Seguridad de Aparatos Eléctricos y de Materiales prohíbe el uso de cables certificados por UL o CSA (que tienen el certificado UL / CSA en el código) para cualquier otros dispositivos eléctricos que los productos designados únicamente por Supermicro.

Varning! När du installerar produkten ska du använda de medföljande eller avsedda anslutningskablarna, strömkablarna och nätadaptrarna. Om du använder andra kablar och adaptrar kan det orsaka funktionsfel eller brand. Lagen om säkerhet för elektriska apparater och material förbjuder användning av UL- eller CSA-certifierade kablar (som har UL/CSA angivet på sladden) för andra elektriska apparater än produkter som endast betecknas av Supermicro.

Product Disposal

Warning! Ultimate disposal of this product should be handled according to all national laws and regulations.

تحذير! يجب التخلص النهائي من هذا المنتج وفقًا لجميع القوانين واللوائح الوطنية.

警告！本产品的废弃处理应根据所有国家的法律和规章进行。

警告！本產品的廢棄處理應根據所有國家的法律和規章進行。

Advarsel! Dette produkt skal bortskaffes i henhold til alle nationale love og regler.

Waarschuwing! De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en voorschriften.

Varoitus! Tämän tuotteen lopullinen hävittäminen on suoritettava kaikkien kansallisten lakien ja määräysten mukaisesti.

Attention! La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

Warnung! Die endgültige Entsorgung dieses Produkts muss gemäß allen nationalen Gesetzen und Vorschriften erfolgen.

אזהרה! סילוק סופי של מוצר זה חייב להתבצע בהתאם לכל החוקים והתקנות הלאומיים.

चेतावनी! इस उत्पाद का अंतमि नपिटान सभी राष्ट्रीय कानूनों और नयिमों के अनुसार कयिा जाना चाहएि।

警告!この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

경고! 이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

Advarsel! Når produktet til slutt skal kasseres, må det håndteres i henhold til alle nasjonale lover og forskrifter.

¡Advertencia! Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

Varning! Slutgiltigt bortskaffande av denna produkt ska ske i enlighet med alla nationella lagar och förordningar.

Appendix B

System Specifications

Processor Support

Single Single 4th and 5th Gen Intel Xeon Scalable processor, P+ (LGA4189) sockets; up to 350 W TDP
Notes: Please refer to the motherboard specifications pages on our website for updates to supported processors.

Chipset

C741

BIOS

AMI BIOS; ACPI 3.0 or later, PCI firmware 4.0 support, BIOS rescue hot-key, SPI dual/quad speed support, RTC (Real Time Clock) wakeup, and SMBIOS 3.0 or later

Memory Support

16 DIMM slots to support up to 4 TB DDR5 RDIMM to 4800 MT/s

Storage Drives

Twelve hot-swap 3.5" SATA (default) drive bays
Optional NVMe drive bays by additional cables or SAS3 via optional AOC)
Two M.2 PCIe 3.0 x2 M-Key NVMe

PCI Expansion Slots

Two PCIe 5.0 x16 slots (FHHL)
Four PCIe 5.0 x8 slots (FHFL) (default configuration)
One PCIe 5.0 x16 AIOM slot (default)

Input/Output

One RJ45 dedicated IPMI LAN port
Two USB 3.2 Gen1 ports (rear)
Two USB 2.0 ports (header)
One VGA port
One serial (COM) port (rear)

Motherboard

X13SEDW-F: 12.3" x 13.4" (31.24 cm x 34.04 cm)

Chassis

CSE-LA26TS-R1K23AWP1; 2U Rackmount, (WxHxD) 17.2 x 3.5 x 25.5" (437 x 89 x 648 mm)

System Cooling

Three 8-cm PWM fans

Power Supply

PWS-1K23A-1R, 1200 W redundant modules, 80Plus Titanium level
Input:
1000 W at 100-127 Vac
1200 W at 200-240 Vac
1200 W at 240 Vdc (CCC only)
50-60 Hz
Output
+12 V 100 A (1200W)
+12 V 83 A (1000W)
+ 5 Vsb 4 A

Operating Environment

Operating Temperature: 10º to 35º C (50º to 95º F)*
Non-operating Temperature: -30º to 60º C (-22º to 140º F)
Operating Relative Humidity: 8% to 80% (non-condensing)
Non-operating Relative Humidity: 8% to 90% (non-condensing)

Regulatory Compliance

FCC, ICES, CE, UKCA, VCCI, RCM, NRTL, CB

Applied Directives, Standards

EMC/EMI: 2014/30/EU (EMC Directive)
Electromagnetic Compatibility Regulations 2016
FCC Part 15 Subpart B
ICES-003
VCCI-CISPR 32
AS/NZS CISPR 32
BS/EN 55032
BS/EN 55035
CISPR 32
CISPR 35
BS/EN 61000-3-2
BS/EN 61000-3-3
BS/EN 61000-4-2
BS/EN 61000-4-3
BS/EN 61000-4-4
BS/EN 61000-4-5
BS/EN 61000-4-6
BS/EN 61000-4-8
BS/EN 61000-4-11

Product Safety: 2014/35/EU (LVD Directive)
UL/CSA 62368-1 (USA and Canada)
Electrical Equipment (Safety) Regulations 2016
IEC/BS/EN 62368-1

Environment:
2011/65/EU (RoHS Directive)
EC 1907/2006 (REACH)
2012/19/EU (WEEE Directive)
California Proposition 65

Perchlorate Warning

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI ー A

Appendix C

UEFI BIOS Recovery and IPMI Crash Dump

Warning: Do not upgrade the BIOS unless your system has a BIOS-related issue. Flashing the wrong BIOS can cause irreparable damage to the system. In no event shall Supermicro be liable for direct, indirect, special, incidental, or consequential damages arising from a BIOS update. If you need to update the BIOS, do not shut down or reset the system while the BIOS is updating. Doing so may cause a boot failure.

C.1 Overview

The Unified Extensible Firmware Interface (UEFI) provides a software-based interface between the operating system and the platform firmware in the pre-boot environment. The UEFI specification supports an architecture-independent mechanism for add-on card initialization to allow the UEFI OS loader, which is stored in the add-on card, to boot the system. The UEFI offers clean, hands-off control to a computer system at bootup.

C.2 Recovering the UEFI BIOS Image

A UEFI BIOS flash chip consists of a recovery BIOS block and a main BIOS block (a main BIOS image). The boot block contains critical BIOS codes, including memory detection and recovery codes for the user to flash a new BIOS image if the original main BIOS image is corrupted. When the system power is on, the boot block codes execute first. Once it is completed, the main BIOS code will continue with system initialization and bootup.

C.3 Recovering the BIOS Block with a USB Device

If the BIOS file is corrupted and the system is not able to boot up, this feature will allow you to recover the BIOS image using a USB-attached device. A USB flash drive or media drive may be used for this purpose. Please note that a USB hard disk drive is NOT supported. Follow the procedures on the next page to recover the BIOS.

1. Using a different system, copy the standard BIOS binary image file into the root directory of a USB flash drive with FAT16 or FAT32 format and rename the file to SUPER.ROM.

Note: If you cannot locate the "SUPER.ROM" file in your driver disk, visit our website at www.supermicro.com to download the correct BIOS image into a USB flash device and rename it "SUPER.ROM".

2. While the system is turned off, insert the USB device that contains the new BIOS binary image (SUPER.ROM).
3. Power on the system.
4. After the system is turned on, the system will enter the BIOS Recovery menu. Select "Proceed with flash update" to start the BIOS recovery process. DO NOT INTERRUPT THIS PROCESS UNTIL IT FINISHED!

5. After the Boot Sector Recovery Process is complete, press any key to reboot the system.

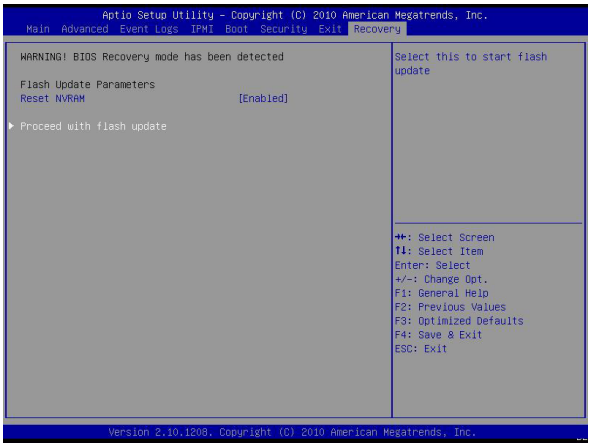

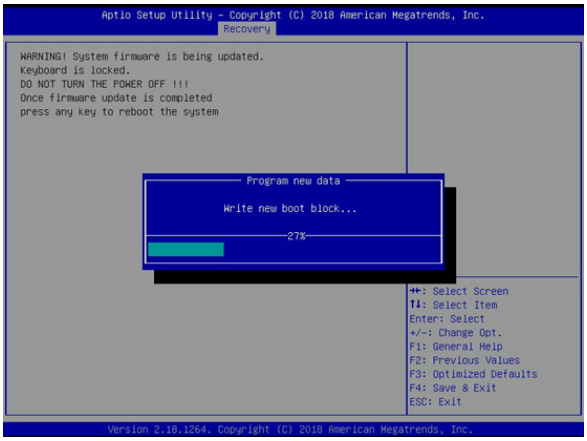

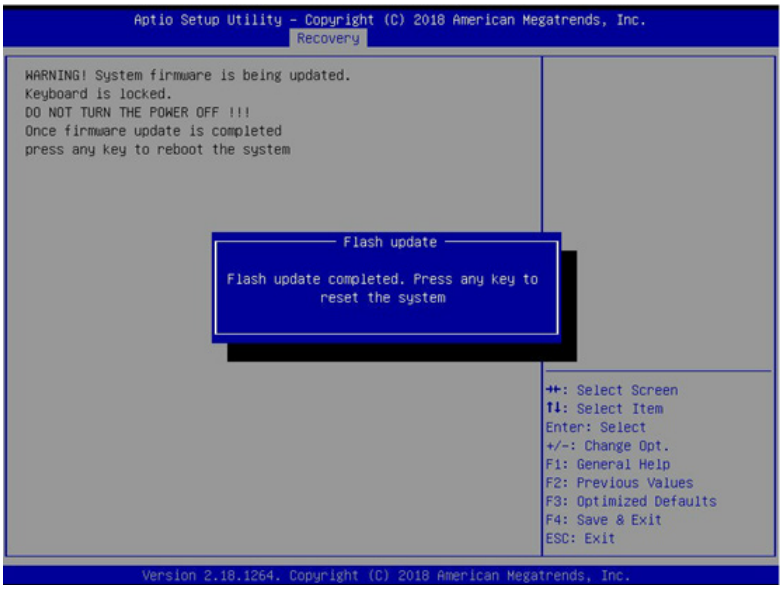

Notes:

* The BIOS recovery (SUPER.ROM) will not work if BIOS has a multi-block crash.

* If you have purchased an OOB license, you can do a BIOS flash again through BMC WebGUI or SUM. Please refer to these SUPERMICRO software-related videos:

Activate OOB license: https://www.youtube.com/watch?v=V4spX_DOV7I

SUPERMICO BIOS Update: https://www.youtube.com/watch?v=S8z6iOEHGwY

* If the BIOS flash recovery fails, contact our RMA Department to have the BIOS chip reprogrammed. This will require shipping the board to Supermicro for repair.

Submit your RMA request at https://www.supermicro.com/support/rma

Please make sure to follow all instructions when returning the motherboard.

C.4 Crash Dump Using IPMI

In the event of a processor internal error (IERR) that crashes your system, you may want to provide information to support staff. You can download a crash dump of status information using IPMI. The IPMI manual is available at https://www.supermicro.com/solutions/IPMI.cfm.

Check IPMI Error Log

1. Access the IPMI web interface.
2. Click the **Server Health** tab, then **Event Log** to verify an IERR error.

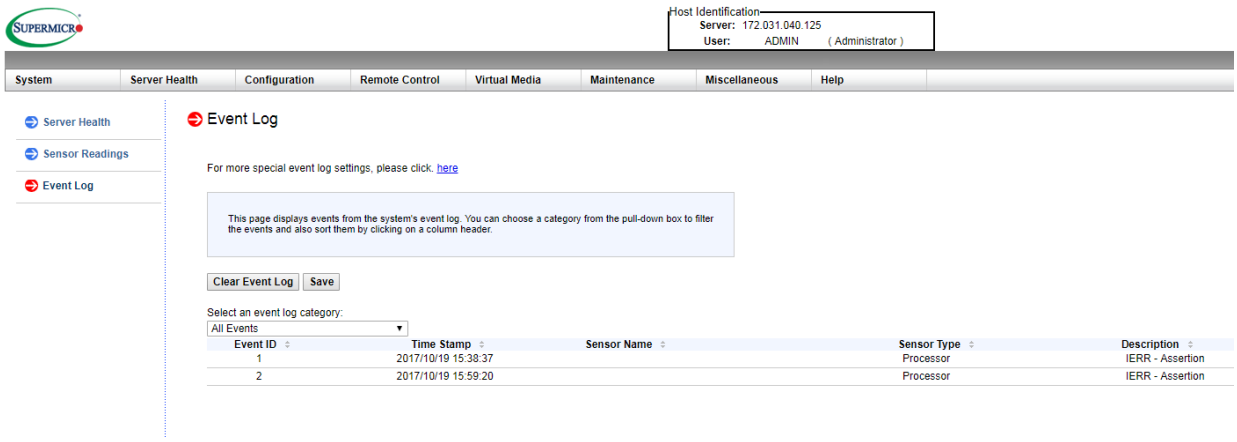

In the event of an IERR, the BMC executes a crash dump. You must download the crash dump and save it.